

# GETTING STARTED!

Follow these steps to become familiar with your server documentation and to complete your installation successfully.

## 1 Checking the Accessory Box

The accessory box contains:

- Keys for the LOCKED front door\*\*
- EXPRESSBUILDER bootable CD-ROM containing setup utilities, maintenance tools and system documentation.
- Customer Notices,\* Alerts,\* Software Notes,\*\* and System Release Notes
- Network Operating System (NOS) software\*\*
- Application Software\*\*
- Power cord(s), keyboard, and mouse
- ServerCare Guide containing the service and warranty information.

\*If required for your server.


\*\*On certain models.

## 2 Your System Documentation

- You may view and print the User's Guide and EXPRESSBUILDER User's Guide from the EXPRESSBUILDER CD-ROM. To do this, insert the CD-ROM into the CD-ROM device on a system running a Microsoft® Windows® Operating System with Internet Explorer 4.01 or later installed. Do not boot from the EXPRESSBUILDER CD-ROM. Use the Adobe® Acrobat® PDF viewer to view and print the documents. If you do not have Adobe Acrobat PDF viewer, select "Install Adobe Acrobat Reader" on the CD-ROM to install the reader.
- Read the System Release Notes. The System Release Notes provide the latest available system information.
- Read the Software Notes. The Software Notes provide information on configuring and running software preloaded on your system.
- Read "Installing Windows 2003" in Chapter 3 of your User's Guide, before installing your operating system.

## 3 Installing Your Server

- Follow the Server Setting Up information in your User's Guide to unpack and install your server.
- If your server includes Network Operating System software preloaded at the factory, it will boot-up to the operating system license agreement screen. Follow the screen prompts and Software Notes to complete loading of your operating system.
- Options ordered with your server are already installed. If you have additional adapter boards and devices for your server, install them before putting the server in the location you have selected. Follow the procedures in the *Updating the System*, Chapter 5 of the system User's Guide, plus installation inserts and vendor documents that came with the option.

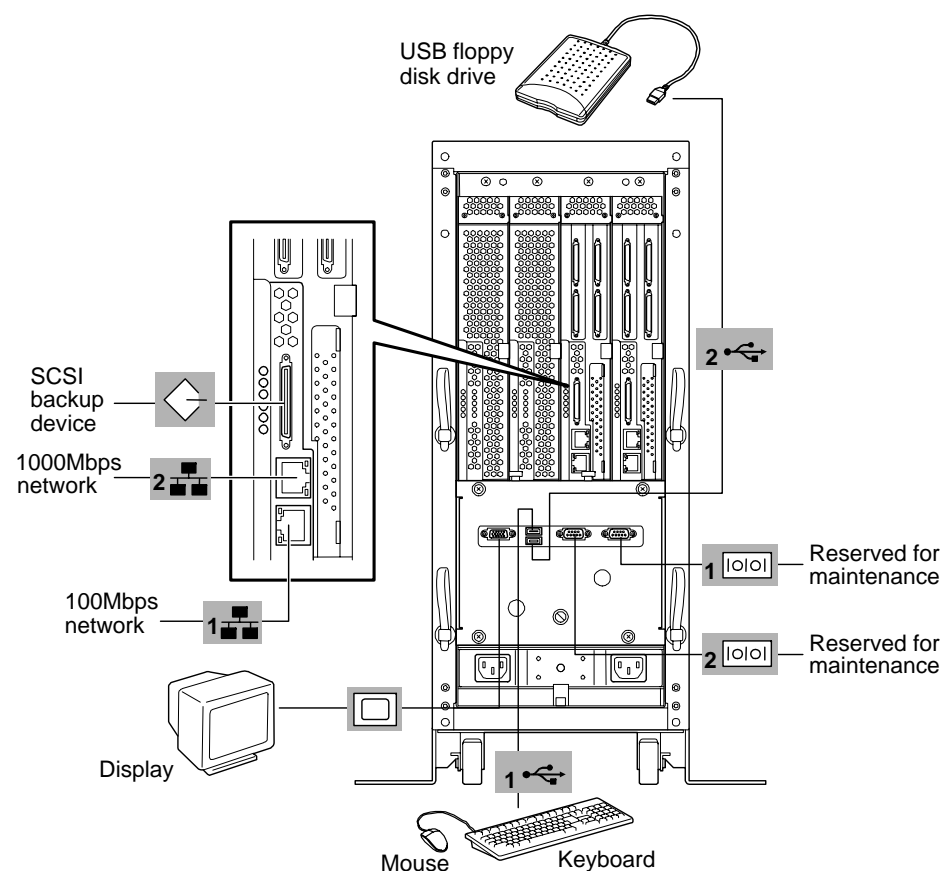

Typical Server Connections

## 4 Running the EXPRESSBUILDER CD-ROM

**Note:** EXPRESSBUILDER does not support FT Linux installation.

- Boot the EXPRESSBUILDER CD-ROM to:
  - Ensure correct hardware setup if you installed additional adapter boards or devices in Step 3.
  - Prepare your server for operating system installation.
  - Re-install Windows Server 2003 Enterprise Edition.
  - Run EXPRESS5800 utilities independently of the operating system.
- Autorun the EXPRESSBUILDER CD-ROM under Windows to:
  - Read/print documentation in your User's Guide.
  - Install ESMPRO, ExpressCluster SRE, or Management Workstation Application (MWA) or make an OEM diskette.

**Note:** If you received system diskettes with your server, these diskettes provide the latest available system utilities information. Use these diskettes instead of running the system utilities from the EXPRESSBUILDER CD-ROM.

## 5 Installing Application Software

- Locate application software media and accompanying installation procedures. Install application software following procedures in the applicable installation guide.
- To enable self-recovery for your application, initialize and configure the pre-installed NEC ExpressCluster SRE on the server according to the *Configuration* chapter in the ExpressCluster SRE Installation and Configuration Guide on the EXPRESSBUILDER CD-ROM.
- If your Network Administrator advises, install your server management software using the EXPRESSBUILDER CD-ROM.

Your server installation is complete.

### Need More Help?

Please call the Technical Support number in your ServerCare Guide.

## FCC DECLARATION OF CONFORMITY

TRADE NAME:	TYPE:
320Lb (Tower version)	EXP351E
320Lb-R (Rack version)	EXP351ER

### FCC STATEMENT (Class A Equipment):

The equipment listed in the above table has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by NEC Solutions (America), Inc. could void the user's authority to operate the equipment.

**Copyright © 2005 NEC Solutions (America) Inc.**

#### **Trademarks**

Adobe and Acrobat are trademarks of Adobe Systems, Inc.

ESMPRO is a registered trademark of NEC Corporation.

Microsoft and Windows 2003 are registered trademarks of Microsoft Corporation.

Other product and company names are registered trademarks and trademarks of their respective holders.

**PN: 455-01682-003**

**February 2005**