

Parts Breakdown for the MobilePro 700 Series			
No.	Part Name	Part Number	Option Number
1	LCD unit	136-242193-001	
2	Lower Case unit	136-635973-001	
3	SIO Cover	136-635227-001	
4	Modem Cover	136-635966-001	
5	VGA Cover	136-635967-001	
6	Main Battery Cover	136-635969-001	
7	Keyboard	808-897324-001	
8	Main Board	136-533242	
9	ROM Board	136-533173	
10	RAM Board (8MB)	136-532860	
11	RAM Board (16MB)	136-533176	S1424-18A
12	RAM Board (32MB)	136-533040	S1424-18B
13	Screw RAM Cover	808-802710-101	
14	Screw Keyboard	808-802874-001	
15	Push Button	136-636246-001	
16	Holder	136-636238-001	
17	PC Card Shuuter	136-622410-003	
18	CF Card Shutter	136-635630-002	
19	Shutter Spring	136-622425-003	
20	Microphone	808-764227-001	
21	Holder Cover	136-635231-001	
22	Sub Battery Cover	136-635970-001	
23	ROM/RAM Cover	136-6389-009-001	
24	Blank Label	136-804006-001	
25	Screw (Main)	808-808105-206	
26	Screw (C0ver)	808-802852-204	
27	Function Label	136-804097-001	
28	Tape (Core)	136-638032-001	
29	NiMH Rechargeable Battery		S1424-15
30	NiMH Rechargeable Battery and Charger		S1424-16
31	AC Adapter		S1424-11
32	PC Cable		S1424-12S
33	VGA Cable		S1424-12V
34	Stylus Pen		S1424-17A