

NEC Versa LitePad Tablet PC Digital Pen Set

The Digital Pen Set for your NEC Versa LitePad™ tablet PC includes the following two pens:

- Slim pen — a 5-mm digital pen with a tip and a side button for writing, sketching, entering data, and executing programs directly from the tablet screen.
- Clip pen — a 9-mm digital pen with a pressure-sensitive tip, a side button, and a pen clip. This pen features a replaceable tip. Five replaceable tips and a tip grip ring come with the pen.

Note Both the slim pen and clip pen come with your NEC Versa LitePad Tablet PC. The slim pen fits in the tablet PC pen holder (see Chapter 1 in your *NEC Versa LitePad Tablet PC User's Guide*).


Use the Digital Pen Set as extra pens to have on hand in case you misplace the original set or as replacement pens.

Slim pen (5 mm)



A – Pen Tip
B – Pen Button
C – Grip End

Clip pen (9 mm)

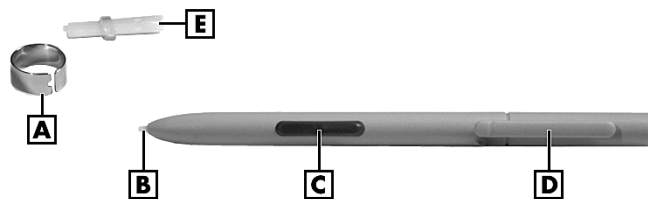

A – Tip Grip Ring
B – Pen Tip
C – Pen Button
D – Clip
E – 5 Spare Tips

Using the Pens

The NEC Versa LitePad Tablet PC digital pens feature battery-free, cordless operation. Use them to write or sketch with digital ink on the tablet screen, select items on the screen, or to input data.

Your tablet PC supports handwriting recognition. When you use a tablet pen to write directly on the screen and create digital ink, your tablet PC can translate your handwriting into keyboard-style text.

Pressure from your hand transmits information from the pressure sensitive pen tip to the tablet screen.

The button on the side of the pen lets you operate the pen as a mouse with a right click. You can disable/enable this action in the Windows® XP operating system.

Other equivalent pen-mouse actions include:

- **Single tap the tablet screen** — equivalent to a single click of the primary mouse button.
- **Double tap the tablet screen** — equivalent to a double click of the primary mouse button.
- **Press and hold the pen on the tablet screen** — equivalent to a click of the right mouse button (right click).
- **Point/hover** — equivalent to pointing with the mouse.
- **Hold pen button and tap tablet screen** — equivalent to right mouse button (right click); quicker than the “press and hold” pen action.

Note Tip for using the pen — watch the cursor on the tablet screen rather than the pen point.

Try all of the pen features and decide which you prefer. If you find the double tap or any of the other features difficult to use, go to the next section for general directions about adjusting pen properties.

Setting Pen Options

You can set pen actions and pen buttons in Windows. Double tap the Tablet and Pen Settings icon in the Windows system tray. Select the Settings menu to calibrate pen accuracy.

Note You need to calibrate the pen for each screen orientation (landscape or portrait).

Select the Pen Options menu to set pen actions to work as a mouse and to set the pen button to right click.

Replacing Clip Pen Tips

Five tips and a tip grip ring come with the clip pen (9 mm). When you notice pen performance degrading, replace the pen tip as follows.

1. Using the tip grip ring, press the ring to grip the pen tip in the ring opening. Pull the tip out of the pen.
2. Insert the new pen tip. The flat end of the tip goes into the pen.

Information in this publication is subject to change without notice. Versa LitePad is a trademark of NEC Solutions (America), Inc. NEC and Empowered by Innovation are either registered trademarks or trademarks of NEC Corporation. Windows is a registered trademark of Microsoft Corporation. All other trademarks and registered trademarks are the property of their respective owners. Copyright ©2003 NEC Solutions (America), Inc. All Rights Reserved.

NEC Solutions (America), Inc.
Mobile Solutions Division
www.necsolutions-am.com/mobilesolutions



819-201012-000
2/2003

Empowered by Innovation

NEC