
NEC Versa® LX

256-MB Memory Important Information

Congratulations on purchasing an NEC Versa LX computer. Please read the important information about using 256-megabyte (MB) small-outline dual inline memory modules (SO-DIMMs) in your computer.

Checking System Memory

Some NEC Versa LX systems with one or two 256-MB memory modules report memory incorrectly in LANDesk® Client Manager. Total memory *is* reported correctly through other interfaces that report system information. If you need to check total system memory in a computer running LANDesk Client Manager, NEC Computers recommends that you check it through one of the following:

- the System Properties window
- the BIOS Setup Utility
- the POST messages that appear on the screen when you start your computer (if your system is configured to display the POST messages while your system is starting).

To access the System Properties window, click the Start button, point to Settings, and click Control Panel. In the Control Panel window, double click the System icon. To display system memory, click the Performance tab.

For more information about the BIOS Setup Utility or about displaying POST messages, see Chapter 3 of your user's guide.

Note If you have any questions, please contact an NEC Computers Support Representative at **1-800-632-4525**.

Note To ensure that the hibernation or Save-to-File file is properly created and utilized when needed, be sure that you have the appropriate BIOS levels installed on your system. For the NEC Versa LX, use BIOS 45 or higher. For the NEC Versa LX with AGP, use BIOS 25 or higher. The BIOS upgrades are available by calling Customer Support at 1-800-632-4525 or by downloading from the NECC website, **www.nec-computers.com**.

