

---

# NEC Versa<sup>®</sup> SXi and VXi AC Adapter

Congratulations on purchasing the NEC Versa AC adapter! The NEC Versa AC adapter allows you to run your NEC Versa SXi or VXi system on wall outlet (AC) power and to simultaneously recharge the battery pack(s). Use the AC adapter wherever there is an accessible wall outlet.

In addition to this document, your NEC Versa AC adapter option kit (OP-520-73701) contains:

- the AC adapter
- an AC adapter power cord.

*NEC Versa AC Adapter*



A – AC Adapter

B – AC Adapter Power Cord

---

**⚠ WARNING** Do not attempt to disassemble the AC adapter. The AC adapter has no user-replaceable or serviceable parts inside. Dangerous voltage in the AC adapter can cause serious personal injury or death.

---

**⚠ CAUTION** The AC adapter for the NEC Versa is intended for use in AC power sources within the range of 100-240 volts AC and 50-60 Hz.

Only use this AC adapter for the NEC Versa SXi or VXi systems. Although other AC adapters may look similar, using them can damage the system.

---

## ***Using the AC Adapter***

The AC adapter, when connected, charges the battery whether or not the computer is powered on. Connect the AC adapter as follows:

1. Plug one end of the AC power cord into the AC adapter and the other end into a 120- or 240-volt wall outlet.
2. Connect the AC adapter cord to the power port on your NEC Versa system (see the following figures).

---

*Connecting to an NEC Versa SXi system*



*Connecting to an NEC Versa VXi system*



---

**⚠ CAUTION** Do not cover or place objects on the AC adapter. Doing so can cause the adapter to overheat.

---

## ***Specifications***

### Voltage

- Input: 100 to 240 Volts (V) 50 or 60 Hz
- Output: 15.0 V DC, 60 Watt

---

**Note** Australia, Europe, and Asia use an AC power cord specific to each country's standards.

---

**NEC**

NEC Computers Inc.

819-200684-000

07/2000

