

## **Proprietary Notice and Liability Disclaimer**

The information disclosed in this document, including all designs and related materials, is the valuable property of NEC Computers Inc. and/or its licensors. NEC Computers Inc. and/or its licensors, as appropriate, reserve all patent, copyright and other proprietary rights to this document, including all design, manufacturing, reproduction, use, and sales rights thereto, except to the extent said rights are expressly granted to others.

The NEC Computers Inc. product(s) discussed in this document are warranted in accordance with the terms of the Warranty Statement accompanying each product. However, actual performance of each such product is dependent upon factors such as system configuration, customer data, and operator control. Since implementation by customers of each product may vary, the suitability of specific product configurations and applications must be determined by the customer and is not warranted by NEC Computers Inc.

To allow for design and specification improvements, the information in this document is subject to change at any time, without notice. Reproduction of this document or portions thereof without prior written approval of NEC Computers Inc. is prohibited.

### **Trademarks**

INTEL is a registered trademark of Intel Corporation.

MS-DOS is a registered trademark of Microsoft Corporation.

Pentium is a registered trademark of Intel Corporation.

All other product, brand, or trade names used in this publication are the trademarks or registered trademarks of their respective trademark owners.

**PN: 456-01561-001**

**March 2001**

Copyright 2001  
NEC Computers Inc.  
15 Business Park Way  
Sacramento, CA 95828  
All Rights Reserved

---

# Contents

## Proprietary Notice and Liability Disclaimer

### Using This Guide

Text Conventions .....	viii
Related Documents .....	ix
Safety Notices .....	x
Safety Notices for Users Outside of the U.S.A. and Canada .....	xi
Care and Handling .....	xii

## 1 System Overview

Overview .....	1-2
System Chassis .....	1-4
Power Supply .....	1-5
Peripheral Bays .....	1-5
SAF-TE Logic .....	1-6
System Board Features .....	1-7
Pentium III Processor .....	1-8
System Memory .....	1-8
I/O Expansion Slots .....	1-8
Real-Time Clock/Calendar .....	1-9
BIOS .....	1-9
IDE Controller .....	1-9
Keyboard and Mouse Controller .....	1-10
Network Controller .....	1-10
SCSI Controller .....	1-10
Video Controller .....	1-10
Peripheral Controller .....	1-11
Serial Ports .....	1-11
External Device Connectors .....	1-11
System Board Management Controller (BMC) .....	1-11
ACPI .....	1-12
AC Link Mode .....	1-13
Remote Power-On (Wake ON LAN) Function .....	1-13
System Security .....	1-13
Security with Mechanical Locks and Monitoring .....	1-13
Software Locks via the System Setup Utility .....	1-14

## 2 Setting Up the System

Overview .....	2-2
Selecting a Site .....	2-2
Unpacking the System .....	2-3
Assembling the Rack-Mount Subsystem .....	2-4
Before You Begin .....	2-4
Static Precautions .....	2-4
Assembly .....	2-5
Installing the Slide Rail Assemblies into the Rack Cabinet .....	2-6
Mounting the Server in the System Rack Cabinet .....	2-10
Installing the Cable Retention Arm Assembly .....	2-12
Installing the Cable Retention Arm Assembly into a Rittal System Rack .....	2-13

---

Installing the Cable Retention Arm Assembly into a APC System Rack .....	2-15
Installing the Front Bezel .....	2-17
Getting Familiar with the System .....	2-18
Front View with Front Bezel Closed.....	2-18
Opening and Removing the Front Bezel .....	2-19
Front View.....	2-20
Rear View.....	2-22
Status LED Indicator Descriptions.....	2-23
Making Connections.....	2-25
Connecting the Power Cord.....	2-26
Powering On Your System.....	2-27

### 3 Configuring Your System

Configuring Your System.....	3-2
BIOS Setup Utility.....	3-3
Using the BIOS Setup Utility .....	3-3
BIOS Setup Configuration Settings.....	3-4
Main Menu .....	3-5
Advanced Menu .....	3-6
Advanced Submenu.....	3-7
Memory Reconfiguration Submenu .....	3-7
CPU Reconfiguration Submenu .....	3-8
Peripheral Configuration Submenu .....	3-8
Peripheral Configuration Submenu (Continued).....	3-9
Monitoring Configuration Submenu.....	3-9
PCI Device Submenu.....	3-9
Option ROM Submenu.....	3-10
Numlock Submenu .....	3-10
Security Menu .....	3-11
System Hardware Menu .....	3-12
Thermal Sensor Submenu.....	3-12
Wake On Events Submenu .....	3-13
Console Redirection Submenu .....	3-13
Boot Menu.....	3-14
Boot Device Priority Menu.....	3-14
Exit Menu .....	3-15
Exit Menu .....	3-15
Adaptec SCSI Utility .....	3-16
Running the SCSI Utility .....	3-16
Adaptec SCSI Utility Configuration Settings.....	3-17
Exiting Adaptec SCSI Utility .....	3-18
Configuring the RAID Controller .....	3-19
Configuring System Board Jumpers.....	3-20
Before You Begin.....	3-20
Moving System Board Jumpers .....	3-21
Clearing and Changing the Passwords .....	3-22
Clearing CMOS.....	3-22

---

## 4 Upgrading Your System

General Information .....	4-2
Static Precautions .....	4-3
Preparing Your System for Upgrade .....	4-3
Equipment Log .....	4-3
Front Bezel .....	4-4
Removing the Front Bezel .....	4-4
Replacing the Front Bezel .....	4-5
Top Covers .....	4-5
Removing the Rear Top Cover .....	4-6
Replacing the Rear Top Cover .....	4-7
Modifying the System Board .....	4-8
Replacing the Real-time Clock Battery .....	4-8
Removing and Installing a Pentium III Processor .....	4-10
DIMMs .....	4-16
Option Boards .....	4-19
Installing a PCI Option Board .....	4-19
Removing a PCI Option Board .....	4-24
Hard Disk Drives .....	4-28
SCSI ID Assignment .....	4-28
Installing or Swapping a Hard Disk Drive in a Hot-swap Bay .....	4-29
Installing or Swapping a Hard Disk Drive .....	4-30

## 5 Problem Solving

Problem Solving .....	5-2
Static Precautions .....	5-2
Troubleshooting Checklists .....	5-3
Initial System Startup .....	5-3
Running New Application Software .....	5-4
After System Has Been Running Correctly .....	5-5
Diagnostic Testing .....	5-6
Error Checking .....	5-6
Troubleshooting Guide .....	5-6
Preparing the System for Diagnostic Testing .....	5-6
Monitoring POST .....	5-7
Verifying Proper Operation of Key System Indicators .....	5-8
Confirming Loading of the Operating System .....	5-8
Specific Problems and Corrective Actions .....	5-9
Power LED Does Not Light .....	5-9
Incorrect or No Beep Code .....	5-10
No Characters Appear on Screen .....	5-10
Characters are Distorted or Incorrect .....	5-11
System Cooling Fans Do Not Rotate .....	5-11
Diskette Drive Activity LED Does Not Light .....	5-11
CD-ROM Drive Activity Light Does Not Light .....	5-11
Problems with Application Software .....	5-12
Bootable CD-ROM Is Not Detected .....	5-12
Problems with the Network .....	5-12
Plug and Play Installation Tips .....	5-13
BIOS User's Information .....	5-13
POST Error Codes and Messages .....	5-14

---

How to Identify BIOS and BMC Revision Levels .....	5-19
BIOS Revision Level Identification .....	5-19
BMC Revision Level Identification .....	5-19
How to Identify System Event Log Data.....	5-20

## **A System Cabling**

System Cabling.....	A-2
Before You Begin.....	A-2
Static Precautions .....	A-2
Standard Configuration.....	A-3
RAID Configuration.....	A-5

## **B Interrupt Request/ PCI IRQ Device/ I/O Port Address Assignments**

Interrupt Request Assignments.....	B-2
PCI IRQ Device Assignments .....	B-3
I/O Port Address Assignments.....	B-4

## **C Technical Specifications**

Server Unit.....	C-2
------------------	-----

## **Glossary**

## **Equipment Log**

## **Index**

---

# Using This Guide

The EXPRESS5800/120Ra-1 User's Guide provides a quick reference to information about your system. Its goal is to familiarize you with your system and the tasks necessary for system configuring and upgrading.

This guide contains the following information:

- Chapter 1, "System Overview" provides an overview of your system and describes your system's major system components. See this chapter to familiarize yourself with your system.
- Chapter 2, "Setting Up Your System" tells you how to select a site, unpack the system, assemble the rack-mount subsystem, make cable connections, and power on your system.
- Chapter 3, "Configuring Your System" tells you how to configure the system and provides instructions for running the BIOS Setup Utility and the Adaptec Configuration Utility, which is used to configure SCSI devices in your system. This chapter also provides information on system board jumper settings.
- Chapter 4, "Upgrading Your System" provides you with instructions for upgrading your system with an additional processor, optional memory, options cards, and peripheral devices.
- Chapter 5, "Problem Solving" contains helpful information for solving problems that might occur with your system.
- Appendix A, "System Cabling" includes cabling information for the dual interface onboard SCSI controller, the onboard IDE controller, and the optional RAID controller.
- Appendix B, "Interrupt Request/PCI IRQ Device/I/O Port Address Assignments" provides the Interrupt Requests (IRQs), PCI IRQ device, and I/O port addresses that are assigned by the factory for this system. These values can be used for reference when installing an optional device.
- Appendix C, "Technical Specifications" provides specifications for your server system.
- "Glossary" defines the standard acronyms and technical terms used in this manual.
- "Equipment Log" provides you with a sample equipment log for documenting the system configuration and future updates you may make to your system.

---

# Text Conventions

This guide uses the following text conventions.

Warnings, cautions, and notes have the following meanings:

---

## **WARNING**

Warnings alert you to situations that could result in serious personal injury or loss of life.

---


---

## **CAUTION**

Cautions indicate situations that can damage the system hardware or software.

---

---

 **Note:** Notes give important information about the material being described.

---

- Names of keyboard keys are printed as they appear on the keyboard. For example, **Ctrl**, **Alt**, or **Enter**.
- Text or keystrokes that you enter appear as boldface type. For example, type **abc123** and press **ENTER**.
- File names are printed in uppercase letters. For example, **AUTOEXEC.BAT**.

---

## ***Related Documents***

In addition to this guide, the following system documentation is included with your server either as electronic files on EXPRESSBUILDER or as paper copy shipped with your server.

- *System Release Notes*

Release Notes provide you with the latest information about your system. This information was not available to be included in your user's guide at the time it was developed and released.

- *Getting Started Sheet*

The Getting Started Sheet provides several easy-to-follow steps to become familiar with your server documentation and to complete your installation successfully.

- *Network Operating System Configuration Guide*

This guide contains supplemental instructions needed to install and configure your server Windows NT 4.0 plus Service Pack 6, Novell NetWare v5.0, Santa Cruz Operation (SCO) OpenServer Release 5.05, and UNIXWare 7.1 Network Operating Systems. This document is intended to complement the more detailed procedural documents available from the vendor of the network operating system.

---

# Safety Notices



- **Caution:** To reduce the risk of electric shock which could cause personal injury, follow all safety notices. The symbols shown are used in your documentation and on your equipment to indicate safety hazards.
- **Warning:** Lithium batteries can be dangerous. Improper handling of lithium batteries may result in an explosion. Dispose of lithium batteries as required by local ordinance or as normal waste if no local ordinance exists.
- **Warning:** The detachable power supply cord is intended to serve as the disconnect device.
- **Warning:** This equipment has a 3-wire, grounded power cord. To prevent electrical hazards, do not remove or defeat the ground prong on the power cord. Replace the power cord if it gets damaged. Contact your dealer for an exact replacement.
- **Warning:** The DC push-button on/off switch on the front panel does not turn off the system AC power. Also, +5vdc is present on the system board whenever the AC power cord is connected between the system and an AC outlet. Before doing the procedures in this manual, make sure that your system is powered off and unplug the AC power cord from the back of the chassis. Failure to disconnect power before opening your system can result in personal injury and equipment damage.

In the U.S.A. and Canada, the power cord must be a UL-listed detachable power cord (in Canada, CSA-certified), type ST or SJT, 16 AWG, 3-conductor, provided with a molded-on NEMA type 5-15 P plug cap at one end and a molded-on cord connector body at the other end. The cord length must not exceed 9 feet (2.7 meters).

Outside the U.S.A. and Canada, the plug must be rated for 250 VAC, 10 amp minimum, and must display an international agency approval marking. The cord must be suitable for use in the end-user country. Consult your dealer or the local electrical authorities if you are unsure of the type of power cord to use in your country. The voltage change occurs via a switch in the power supply.

- **Warning:** Under no circumstances should the user attempt to disassemble the power supply. The power supply has no user-replaceable parts. Inside the power supply are hazardous voltages that can cause serious personal injury. A defective power supply must be returned to your dealer.

---


## ***Safety Notices for Users Outside of the U.S.A. and Canada***

- **PELV (Protected Extra-Low Voltage) Integrity:** To ensure the extra-low voltage integrity of the equipment, connect only equipment with mains-protected electrically-compatible circuits to the external ports.
- **Remote Earths:** To prevent electrical shock, connect all local (individual office) computers and computer support equipment to the same electrical circuit of the building wiring. If you are unsure, check the building wiring to avoid remote earth conditions.
- **Earth Bonding:** For safe operation, only connect the equipment to a building supply that is in accordance with current wiring regulations in your country. In the U.K., those regulations are the IEE.

---

## Care and Handling

Use the following guidelines to properly handle and care for your system.

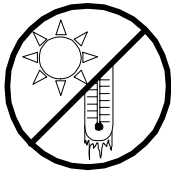


Protect the system from extremely low or high temperatures. Let the system warm (or cool) to room temperature before using it.



Keep the system away from magnetic forces.



Keep the system dry. Do not wash the system with a wet cloth or pour fluid into it.

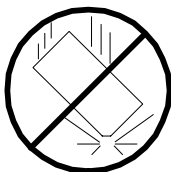

Protect the system from being bumped or dropped.



Check the system for condensation. If condensation exists, allow it to evaporate before powering on the system.



Keep the system away from dust, sand, and dirt.

# 1

## **System Overview**


- Overview
- System Chassis
- Power Supplies
- Peripheral Bays
- SAF-TE Logic
- System Board Features
- AC Link Mode
- Remote Power-On (Wake ON LAN) Function
- System Security

---

## Overview

Your server is a modular, multiprocessing server based on the Intel® Pentium® III microprocessor family. It is a solid performer and offers the latest technology. The combination of compute performance, memory capacity, and integrated I/O provides a high performance environment for many server market applications. These range from large corporations supporting remote offices to small companies looking to obtain basic connectivity capability such as file and print services, e-mail, web access, web site server, etc.

Your server is housed and available as a rack-mount system. Your server conveniently installs into a standard EIA 19-inch rack assembly. See Figure 1-1.

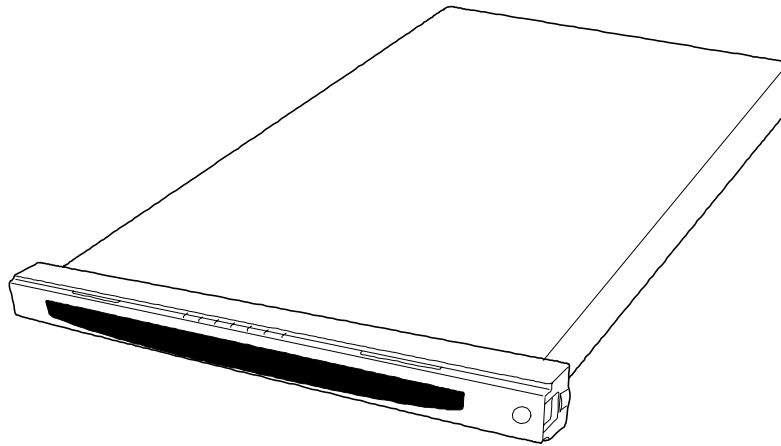

**Figure 1-1. Rack-Mount System Front View**

Your server includes a 3.5" diskette drive, a CD-ROM drive and two hot-swap SCSI hard disk drive bays. The hot-swap SCSI hard disk drive bays support up to two 1.0-inch SCSI hard disk drives that can be swapped in or out of the system without powering it down, if RAID functionality is configured in the system.

---

As application requirements increase, you can expand your server with an additional processor, additional memory, add-in boards and peripheral devices: tape devices, CD-ROM, and hard disk drives.

Your server features the following major components:

- Single or dual high-performance Pentium III processors, each processor includes 256 KB of L2 cache.
- 64 MB to 1 GB of memory, using up to four DIMMs.
- Two 64-bit/33Mhz PCI expansion slots for add-in boards.
- Embedded PC-compatible support (serial, mouse, keyboard, diskette, USB, LAN, and video).
- Integrated onboard ATI RAGE XL Super Video Graphics Array (SVGA) controller with 4 MB of video memory.
- One onboard Adaptec AIC7899 SCSI controller providing two Ultra160/M SCSI interfaces.
- Two onboard Intel 82559 PCI LAN controllers for 10 or 100 Mbps Fast Ethernet networks with an RJ-45 Ethernet connectors.
- Single Channel enhanced IDE controller.
- A slim design CD-ROM drive and 3 ½-inch diskette.
- Integrated dual Universal Serial Bus (USB) ports.
- Front panel serial interface connector.
- Hardware monitors (temperature, fans, and voltage) and software monitors to indicate failures.
- A 200-watt power supply
- Key-locked front bezel.


### ***Hot-Swap SCSI Hard Drive Bays***

- Two hot-swap 1.0-inch SCSI hard disk drives accessible from the front of the chassis can be swapped in or out of the system without powering it down if RAID is configured in the system.
- High degree of SCSI disk fault tolerance and advanced disk array management features through the use of RAID technology, if an optional RAID controller is installed.
- SCSI controller, cables, backplane and devices are Ultra160/M ready.

---

# System Chassis

The server chassis (Figure 1-2) is an easy-to-expand, fabricated metal structure. The major system components are shown in the following illustration.

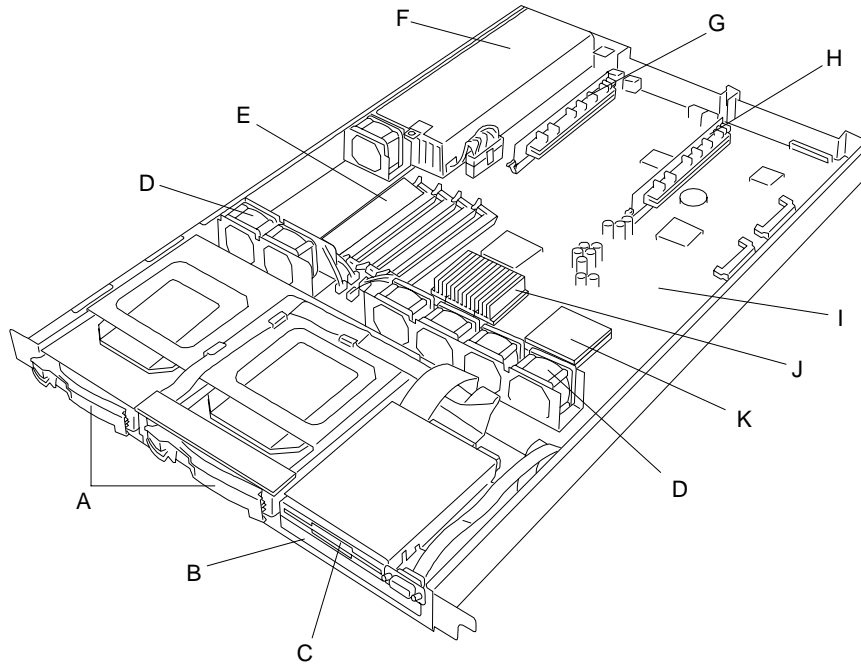

- A. SCSI Hard Disk Drive Bays (2)
- B. CD-ROM Drive
- C. 3.5" Diskette Drive
- D. System Fans (7)
- E. Memory
- F. System Power Supply
- G. PCI I/O Riser Card 1
- H. PCI I/O Riser Card 2
- I. System Board
- J. Pentium III Processor
- K. Optional Pentium III Processor slot

**Figure 1-2. Server Chassis**

---

## ***Power Supply***


The 200 watt auto-voltage-sensing power supply provides system power. The power supply operates at 115 or 230 VAC at an operating frequency of 50/60 Hz. It is designed to comply with existing emission standards and provides sufficient power for a fully loaded system configuration.

## ***Peripheral Bays***

Your server includes these peripheral bays:

- A front panel bay for mounting the slim design 3.5" diskette drive (supports 720 KB and 1.44 MB diskette media) and the slim design CD-ROM drive
- Your server includes two hot-swap SCSI hard disk drive bays for mounting hard disk drives installed in easily removable drive carriers.

---


 **Note:** The hot-swap SCSI hard disk drive bays contain a hot-swap back plane that require an 80-pin single connector attachment (SCA) connector on the drives that you install.

---

---

# SAF-TE Logic

---

 **Note:** SAF-TE Logic is in systems that include the hot-swap SCSI disk drive cage. SAF-TE Logic is not available in systems that include the standard SCSI disk drive cage.


---

The SCSI backplane includes SAF-TE (SCSI Accessed Fault Tolerant Enclosure) logic that provides an interface to the disk subsystem that supports status signals, hot swapping drives, and enclosure monitoring.

The transport mechanism for the standardized alert detection and status reporting is the SCSI bus. Disk drives, power supplies, cooling fans, and temperature are continually monitored and the conditions then reported over the SCSI bus to the system. When used with RAID management software the user can be alerted of impending or imminent disk conditions requiring attention. This allows the user to react to conditions that could normally go unnoticed until data loss.

# System Board Features

The system board (Figure 1-3) offers a “flat” design with the processor and memory subsystems residing on the board. This figure shows the major components on the system board. The following subsections describe the system board major components.

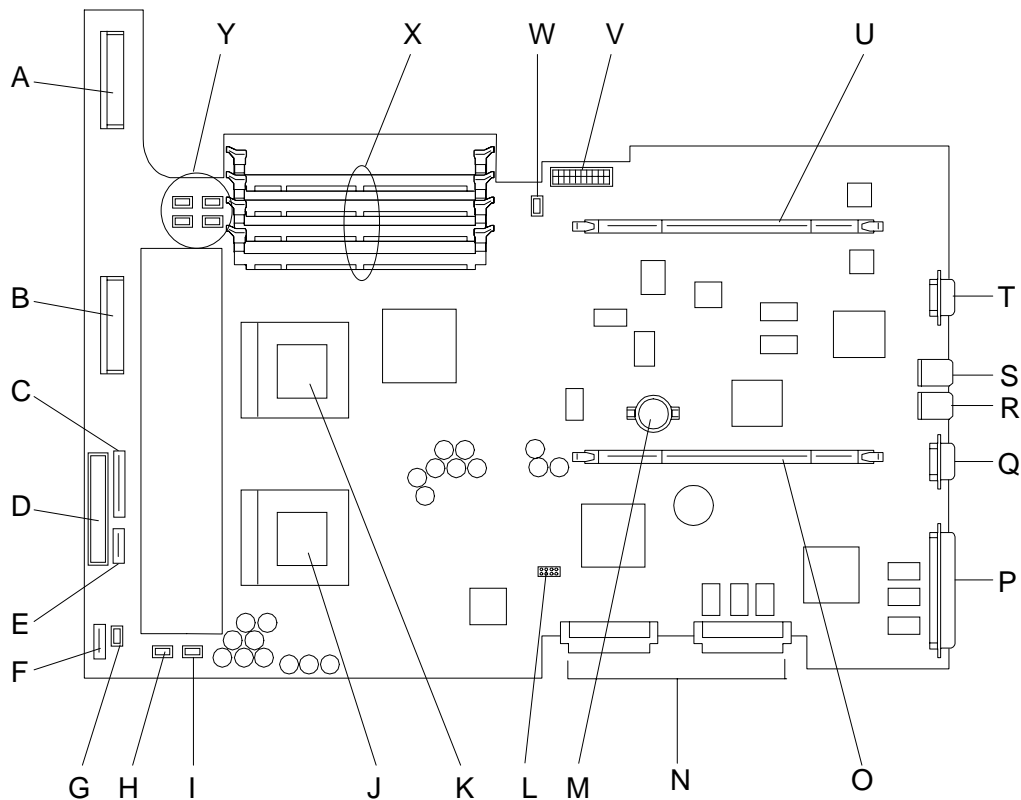

- |    |                                       |    |   |
|----|---------------------------------------|----|---|
| A. | SCSI connector ID0                    | N. | SCSI wide interface connectors (See Appendix A) |
| B. | SCSI connector ID1                    | O. | PCI I/O riser card 2                            |
| C. | Floppy disk drive connector           | P. | External SCSI wide connector                    |
| D. | CD-ROM drive connector                | Q. | Serial port COM1 connector                      |
| E. | Front panel LED connector             | R. | LAN RJ-45 network controller 1 connector        |
| F. | Front panel COM2 connector            | S. | LAN RJ-45 network controller 2 connector        |
| G. | DC OFF/ON switch connector            | T. | SVGA monitor port connector                     |
| H. | Fan #2 connector                      | U. | PCI I/O riser card 1                            |
| I. | Fan #1 connector                      | V. | System board power connector                    |
| J. | Optional Pentium III processor socket | W. | Fan #7 connector                                |
| K. | Primary Pentium III processor socket  | X. | Memory DIMM sockets                             |
| L. | CMOS/Password Clear DIP switches      | Y. | Fans #3, #4, #5, #6 connectors                  |
| M. | Lithium backup battery                |    |   |

**Figure 1-3. System Board**

---

## **Pentium III Processor**

Depending on system configuration, your server includes one or two Pentium III processors. Each Pentium III plugs into a ZIF (Zero Insertion Force) socket on the system board. The processor includes a numeric coprocessor, a 256KB L2 cache and operates at a bus speed of 133MHz. The optional second Pentium III processor enhances performance and enables symmetric multiprocessing (SMP).

## **System Memory**

The system board contains four 168-pin DIMM sockets. Memory is partitioned as four banks of SDRAM registered DIMMs (PC133 compatible), each providing 72 bits of noninterleaved memory (64-bit main memory plus ECC). Your system may include from 64 MB to 4 GB of memory, using up to four DIMMs.

System memory begins at address 0 and is continuous (flat addressing) up to the maximum amount of DRAM installed (exception: system memory is noncontiguous in the ranges defined as memory holes using configuration registers). The system supports both base (conventional) and extended memory.


## **I/O Expansion Slots**

Your server's expansion capabilities meet the needs of file and application servers for high performance I/O by providing PCI expansion slots.

The PCI expansion slots in your server are located on two PCI I/O riser cards that plug into a designated slots on the system board. See Figure 1-3, N and P. Each I/O riser card (see Figure 1-4) accommodates one 64 bit/33MHz PCI option cards.

PCI features:

- Bus speed up to 33 MHz
- 64-bit memory addressing
- 5 V signaling environment
- Burst transfers up to a peak of 264 MB/s (64 bit, 33 MHz PCI)
- 8-, 16-, 32-, or 64-bit data transfers
- Plug and Play ready
- Parity enabled.

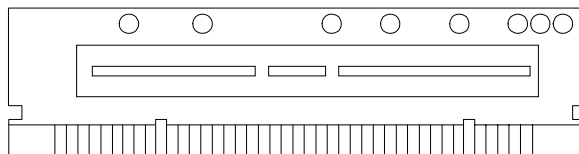

**Figure 1-4. I/O Riser Card**

---

## ***Real-Time Clock/Calendar***

The real-time clock provides system clock/calendar information stored in a non-volatile memory (NVRAM). The real-time clock battery provides power backup for the real-time clock.

## ***BIOS***

A BIOS and Setup Utility are located in the Flash EPROM on the system board and include support for system setup and Legacy device configuration. A number of security, reliability, and management features also have been incorporated to meet vital server needs.

## ***IDE Controller***

The system includes a single channel enhanced IDE 32 bit interface controller for intelligent disk drives with disk controller electronics onboard. The controller has a connector located on the system board that supports a master and a slave device. The IDE controller provides support for the internally mounted CD-ROM.

The device controls:

- PIO and DMA transfer modes
- Mode 4 timings
- Transfer rates up to 33 MB/s
- Buffering for PCI/IDE burst transfers
- Master/slave IDE mode

---

## **Keyboard and Mouse Controller**

The keyboard and mouse controller is PS/2 compatible.

## **Network Controller**

The system board includes dual 10BASE-T/100BASE-TX network controllers based on the Intel 82559 Fast Ethernet PCI Bus Controller. As a PCI bus master, the controllers can burst data at up to 132 MB/sec. Each controller contains two receive and transmit FIFO buffers that prevent data overruns or underruns while waiting for access to the PCI bus. Each controller has the following:

- 32-bit PCI bus master interface (direct drive of bus), compatible with *PCI Bus Specification, Revision 2.1*
- Chained memory structure with improved dynamic transmit chaining for enhanced performance
- Programmable transmit threshold for improved bus utilization
- Early receive interrupt for concurrent processing of receive data
- On-chip counters for network management
- Autodetect and autoswitching for 10 or 100 Mbps network speeds
- Support for both 10 Mbps and 100 Mbps networks, capable of full or half duplex, with back-to-back transmit at 100 MBPS.
- Support for Wake On LAN.

## **SCSI Controller**

The system board includes an embedded Adaptec AIC7899 dual function SCSI controller. The AIC7899 controller provides dual Ultra-160/M SCSI interfaces as two independent PCI functions. Interface A supports two Ultra-160/M SCA hard disk drives in the system. Interface B may be used to support external SCSI devices attached to the system, utilizing the SCSI connector located on the rear panel.

## **Video Controller**

The system has an integrated ATI Rage XL 64 bit high-performance SVGA subsystem that supports the following:

- BIOS compatibility with VGA, EGA, CGA, Hercules Graphics, and MDA
- 4 MB of 10 ns onboard Synchronous Graphics Memory (SGRAM)
- Pixel resolutions up to 1224 X 768
- Analog VGA monitors (single and multiple frequency, interlaced and noninterlaced) with a maximum vertical retrace noninterlaced frequency of 100 Hz.

---

## ***Peripheral Controller***

The advanced integrated peripheral controller supports two serial ports, two universal serial ports, one parallel port, one diskette drive, PS/2-compatible keyboard and mouse, and integrated Real Time Clock (RTC). The system provides the connector interface for each port.

### ***Serial Ports***

Both serial ports are relocatable. Each serial port can be set to one of four different addresses and can be enabled separately. When disabled, serial port interrupts are available to add-in boards.

## ***External Device Connectors***

The rear panel external I/O connectors provide support for a PS/2 compatible mouse and a keyboard, for a SVGA monitor, serial port COM 1 connector, two LAN connectors, two USB connectors and an external SCSI wide connector. Serial port COM2 connector is located on the front panel of your server.

## ***System Board Management Controller (BMC)***

Server management is concentrated in the System Board Management Controller (BMC). The BMC and associated circuitry are powered from a 5Vdc standby voltage, which remains active when system power is switched off, but the ac power source is still on and connected.

The BMC supports the Management Workstation Application (MWA), which allows remote server management via a modem or direct connection to a manager system. Events monitored by the manager system include over-temperature and over-voltage conditions, fan failure, or chassis intrusion.

Information on MWA may be found on the ExpressBuilder CDROM included with your server.

One major function of the BMC is to autonomously monitor system management events, and log their occurrence in the nonvolatile System Event Log (SEL). The events being monitored include overtemperature and overvoltage conditions, fan failure, or chassis intrusion. To enable accurate monitoring, the BMC maintains the nonvolatile Sensor Data Record (SDR), from which sensor information can be retrieved. The BMC provides an ISA host interface to SDR sensor information, so that software running on the server can poll and retrieve the server's current status.

---


The BMC performs the following:

- Monitors server board temperature and voltage
- Monitors processor presence and controls Fault Resilient Boot (FRB)
- Detects and indicates baseboard fan failure
- Manages the SEL interface
- Manages the SDR Repository interface
- Monitors the SDR/SEL timestamp clock
- Monitors the system management watchdog timer
- Monitors the periodic SMI timer
- Monitors the event receiver
- Controls secure mode, including video blanking, diskette write-protect monitoring, and front panel lock/unlock initiation
- Controls Wake On LAN via Magic Packet support.

## **ACPI**

The Advanced Configuration and Power Interface (ACPI) aware operating system can place the system into a state where the hard drives spin down, the system fans stop, and all processing is halted. However, in this state the power supply is still on and the processors are still dissipating some power such that the power supply fan and processor fans are still running.

---

 **Note:** ACPI requires an operating system that supports its feature.

---

### **CAUTION**

Only when the AC power is disconnected is the system completely off.

---

Your server's system BIOS supports sleep states s0, s1, s4, and s5.

The sleep states are defined as follows:

- s0: Normal running state.
- s1: Processor sleep state.  
No context will be lost in this state and the processor caches will maintain coherency.
- s4: Hibernate or Save to Disk.  
The memory and machine state are saved to disk. Pressing the power button or other wakeup event restores the system state from the disk and resumes normal operation. This assumes that no hardware changes have been made to the system while it was off.

- 
- s5: Soft off.  
Only the RTC section of the chipset and the BMC are running in this state.

## ***AC Link Mode***

The AC link mode allows the system to monitor its AC input power so that when the AC input power is lost and then restored the system will return itself to one of three pre-selected settings, listed as follows:

- Power On
- Last State (Factory Default Setting)
- Stay Off.

The AC link mode settings can be changed by running the BIOS Setup Utility (F2). Refer to Chapter 3 "Configuring Your System."

## ***Remote Power-On (Wake ON LAN) Function***

The remote power-on function turns on the system power by way of a network or modem. If the system power is set to OFF, it can be turned on remotely by sending a specific packet from the main computer to the remote system. This feature can be enabled or disabled using the BIOS Setup Utility. See Chapter 3.

---

 **Note:** This feature must be supported by your operating system.

---

## ***System Security***

To help prevent unauthorized entry or use of the system, the system includes a full lockable front bezel and Server Management software that monitors the front bezel intrusion switch.

### ***Security with Mechanical Locks and Monitoring***

The front bezel contains a mechanical lock to prevent access to the computer chassis.

---

## ***Software Locks via the System Setup Utility***

The BIOS Setup Utility provides a number of security features to prevent unauthorized or accidental access to the system. Once the security measures are enabled, access to the system is allowed only after the user enters the correct password(s). For example:

- Enable the keyboard lockout timer so that the server requires a password to reactivate the keyboard and mouse after a specified time-out period—1 to 120minutes.
- Set and enable an administrative password.
- Set and enable a user password
- Set secure mode to prevent keyboard or mouse input and to prevent use of the front panel reset and power switches.
- Disable writing to the diskette drive when secure mode is set.

# 2

## Setting Up the System

- Overview
- Selecting a Site
- Unpacking the System
- Assembling the Rack-Mount Subsystem
- Getting Familiar with the System
- Making Connections
- Connecting the Power Cord
- Powering On Your System

---

## Overview


This chapter describes how to select a site, unpack the server, install your rack-mount server, make cable connections, and power your server.

## Selecting a Site

The system operates reliably in a typical office environment. Choose a site that is:

- Near grounded, three-pronged power outlets.

---

 **Note:** For the United States and Canada, this means a NEMA 5-15R outlets for 100-120 VAC or NEMA 6-15R outlets for 200-240 VAC. For other international sites, this means three-pronged power outlets applicable for the electrical code of the region.

---

---

### **WARNING**

Be sure the power service connection is through a properly grounded outlet.

---

---

### **CAUTION**

When two power supplies are installed in the system the power plug from each of the power supplies must be plugged into the same common ground power outlets.

---

- Clean, dust-free, and well ventilated. Front and rear ventilating openings kept free of obstructions. Away from sources of heat, vibration or physical shock.
- Isolated from strong electromagnetic fields and electrical noise produced by electrical devices (such as air conditioners, large fans, large electric motors, radio and TV transmitters, and high-frequency security devices)
- Easily accessible for system maintenance and installation of system upgrades.

---

# ***Unpacking the System***

---

## **WARNING**

Your system weighs approximately 26.46 pounds (12.0 kg). If your system contains numerous optional boards and peripheral devices, it will weigh more. To avoid personal injury, make sure you have someone help you lift or move the system.

---

When you receive your system, inspect the shipping containers prior to unpacking. If the shipping boxes are damaged, note the damage, and if possible, photograph it for reference. After removing the contents of the containers, keep the cartons and the packing materials. If the contents appear damaged when you unpack the boxes, file a damage claim with the carrier immediately.

---

# ***Assembling the Rack-Mount Subsystem***

This section provides the instructions for assembling the rack-mount server unit into a standard EIA 19-inch rack cabinet.

## ***Before You Begin***

Before you begin, please review the following cautions, warnings, and general guidelines.

---

### **WARNING**

Be sure that power to the system is turned off and unplugged. All voltage is removed only when the power cords are unplugged.

---

- Avoid excessive vibration and shock. Dropping an electronic component can cause serious damage.
- Do not disconnect or remove parts other than those specified in the procedure.
- Do not touch I/O connector pins.
- All screws are Phillips-head, unless otherwise specified.
- On completion of any assembly or reassembly, perform a power-on test. If a fault occurs, verify that the assembly or reassembly was performed correctly. If the problem persists, see "Problem Solving" in Chapter 5.

## ***Static Precautions***

An electrostatic discharge (ESD) can damage disk drives, option boards, and other components. You can provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground when handling system components.

Electronic devices can be easily damaged by static electricity. To prevent damage, keep them in their protective packaging when they are not installed in your system.

---

## Assembly

---


### CAUTION

Ensure that the location of the rack-mount server does not create an unstable condition when installed in the rack cabinet.

---


Before you begin select an appropriate location in your rack cabinet for the rack-mount server. To improve rack stability, mount heavier items towards the bottom of the rack cabinet. If the rack is a stand-alone unit and the rack is more than 75% filled with components, consider installing an optional stabilizer kit.

---

 **Note:** When planning your system configuration for the rack cabinet you should consider the length of the cables that interconnect system components.

---

The rack mounting components that shipped with your server are shown in Figure 2-1. Your server is mounted on a set of slide rail assemblies that allow it to move freely in and out of the system rack.

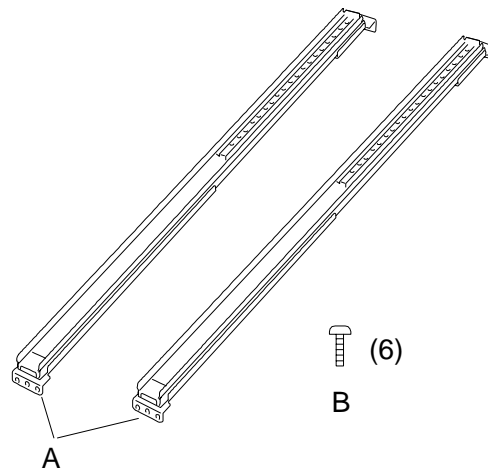

- A. Slide Rail Assembly (2)
- B. M5 Mounting Screws


**Figure 2-1 Rack Mounting Components**

---

## Installing the Slide Rail Assemblies into the Rack Cabinet

Before you can mount the server in the rack cabinet, you must install the slide rail assemblies in the rack cabinet.


---

 **Note:** You must use the following procedure to prepare the rack cabinet before mounting the server into it. Observe all safety precautions, warnings, and cautions noted throughout this chapter.

---


1. Determine the location where you want to install the server in the rack cabinet.
  - To improve rack stability, mount the server towards the bottom of the rack cabinet.
  - If there are units already installed, install the server into the next empty space from the bottom of the rack cabinet.
2. Starting at the bottom of the rack cabinet or at the top or bottom of a previously mounted unit, measure the number of screw hole locations on the front vertical mounting rails and rear vertical mounting rails for the slide rail assemblies. Mark the location with a pencil on the outside of both the front and rear vertical mounting rails for the cage nuts.

---

 **Note:** Each rear vertical mounting rail requires two cage nuts to mount the slide rails to the system rack. Each front vertical rail also requires two cage nuts, one of which holds the slide rails to the system rack and one cage nut on each front rail to secure the thumbscrews of the server faceplate.


---

3. Insert four M5 cage nuts in the marked locations on the front vertical mounting rails and four M5 cage nuts in their marked locations on the rear mounting rails. See Figure 2-2. Referring to Figure 2-5, install cage nuts in locations B and C in the front vertical mounting rails and positions A and C in the rear vertical mounting rails.
  - Position the cage nut on the inside of the front vertical mounting rails.
  - Hook the side lip of a cage nut into the square hole in the rail.
  - Push the other side lip of the cage nut into the square hole in the rail until it is secured.
  - Repeat for each cage nut.

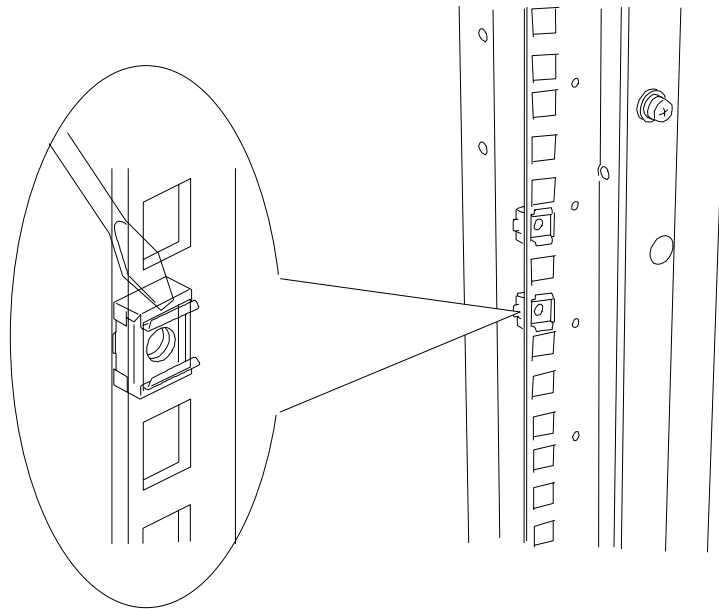


**Figure 2-2 . Inserting the Cage Nuts into the System Rack**

4. Measure the distance between the front and rear vertical mounting rails of your system rack. See Figure 2-3. You'll use this measurement for a preliminary adjustment of the slide rails in the next step.

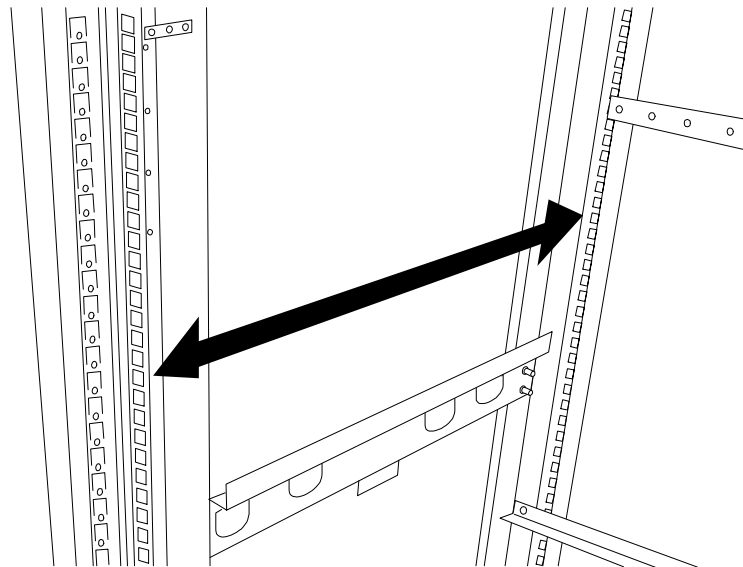


**Figure 2-3. Vertical Mounting Rail Measurement**

5. Loosen the three length adjustment screws on each slide rail as shown in Figure 2-4. Adjust each slide rail to the approximate length measurement determined in Step 4. Loosely tighten the screws. Final adjustment will be made once the slide rails are installed into the system rack.

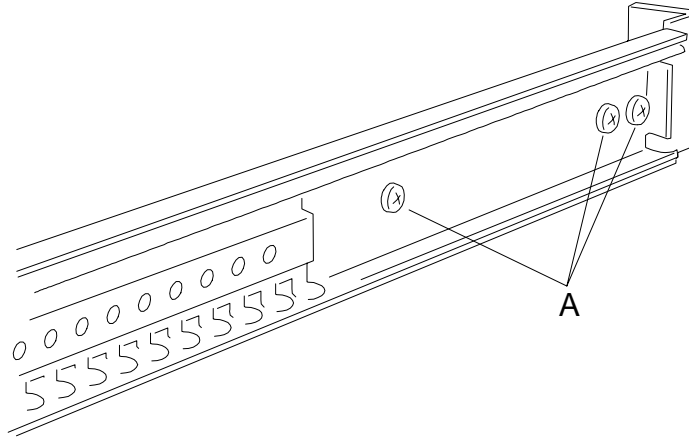


**Figure 2-4. Adjusting the Slide rail**

6. Align one of the slide rail assemblies in front of the mounting holes in the vertical mounting rail (see Figure 2-5, A) located on the left side of the rack cabinet. The end of the slide rail assembly that has the length adjustment screws (Figure 2-4) should be positioned towards the rear of the rack.
7. Install one screw to secure the front of the slide rail assembly to the front vertical-mounting rail and tighten loosely. See Figure 2-5, C. Ensure the cage nut behind the center hole between the mounting screws is visible.

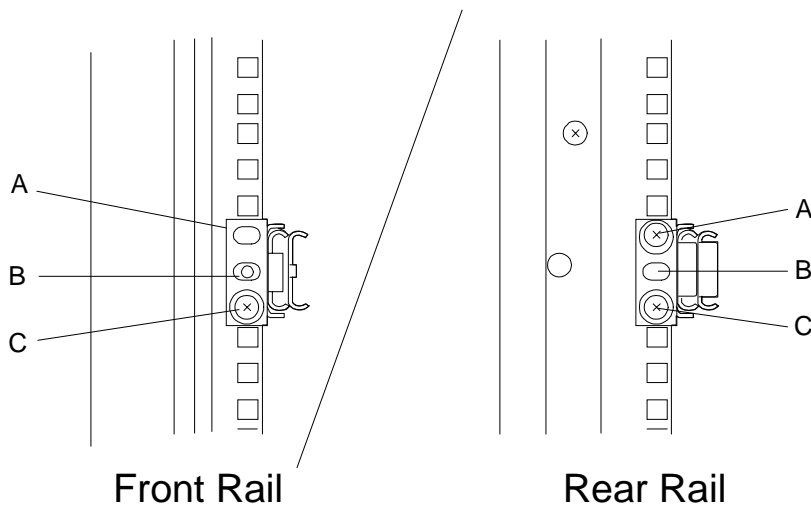

**Figure 2-5. Installing the Slide rail Assemblies**

8. Carefully align the rear holes of the slide rail assembly with the holes in the rear vertical-mounting rail. The three-hole tab at the end of the slide rail assembly should be positioned on the outside to the vertical rail.
9. Install two screws that secure the rear of the slide rail assembly to the vertical-mounting rail. See Figure 2-6.
10. Tighten all three screws holding the slide rail assembly to the vertical mounting rails.
11. Tighten the three length adjustment screws on each slide rail as shown in Figure 2-6, C.
12. Repeat steps 5 through 11 for the mounting the other slide rail assembly on the right side of the rack cabinet.

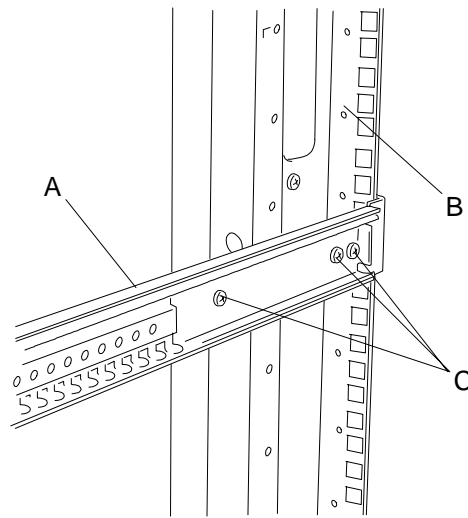

- A. Rack mounting assembly
- B. Vertical mounting rail
- C. Adjustment Screws (3)

**Figure 2-6. Installing the Left Slide Rail Assembly into the System Rack**

---

## Mounting the Server in the System Rack Cabinet

Use the following procedure to mount the server into the rack cabinet.

---

### **WARNING**


**Anchor the Rack Cabinet.** The rack cabinet must be anchored to an unmovable support or a front stabilizer to prevent it from falling over when one or more units are extended in front of it on slide assemblies. The anchors must be able to withstand a force of up to 113 kg (250 lbs.). You must also consider the weight of any other device installed in the rack.

**Avoid Injury.** It is required that two people are present when lifting and assembling the rack-mount server into a rack cabinet.

Do not attempt to lift or move the server unit by the latches on the power supplies.

---

1. Pull the two extension rail assemblies (see Figure 2-7) out of each slide rail assembly until they lock in place.

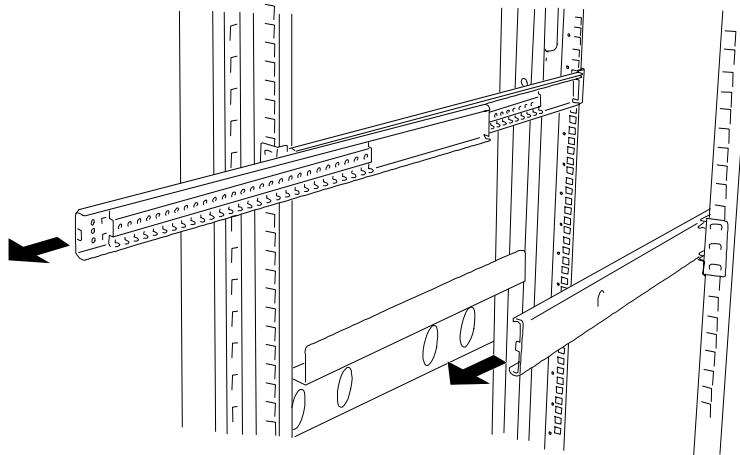

**Figure 2-7. Mounting the Server into the System Rack**

---


### **WARNING**

Your system weighs approximately 26.46 pounds (12.0 kg). If your system contains numerous optional boards and peripheral devices, it will weigh more. To avoid personal injury, make sure you have someone help you lift or move the system.


---

- 
2. With someone assisting you lift and slide the server into the extended rail slider assemblies.
  3. Align the server center slide bars with the extended rail assemblies.
  4. Carefully slide the server into the extended rail assemblies until it stops.
  5. Carefully press in on the safety latches (Figure 2-8, A) on the center slide bars, ensure that the safety latch on the extension rail assemblies are centered and slide the server all the way into the rack cabinet.

---

 **Note:** When you first slide the server into the rack cabinet, extra pressure may have to be applied. After the first time, the slides will move easier.


---

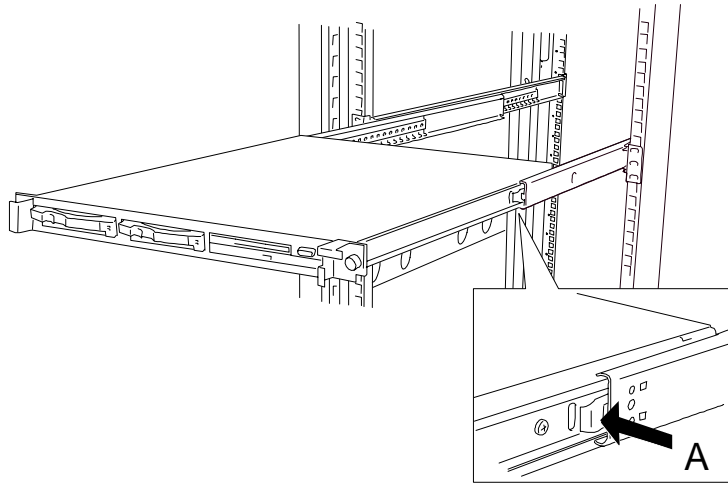

**Figure 2-8. Mounting the Server into the System Rack**

6. Check that the server slides in and out of the rack cabinet. Grasp the two handles on the front of the server and slowly pull the server out and push it back in.

---

 **Note:** Refer to your system release notes for information on installing the cable arm assembly.


---

---

## Installing the Cable Retention Arm Assembly

The triple-hinged cable retention arm attaches to the rear of the server and the system rack allowing cables to move as the server slides back and forth within the rack cabinet. The server cables are tie-wrapped to the cable retention arm.

The following sections provide procedures for installing the cable retention arm assembly to your server and your system rack. Installation of the cable retention arm differs depending on the type of system rack used. The cable retention arm components that shipped with your server are shown in Figure 2.9. Follow procedures pertaining to your system rack.

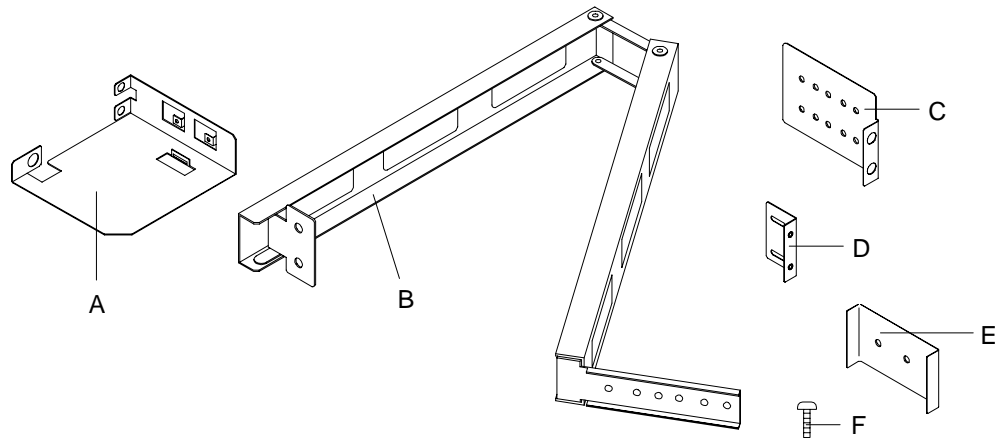


- |    |                 |    |                 |
|----|-----------------|----|-----------------|
| A. | Mounting plate  | D. | Small L bracket |
| B. | Cable arm       | E. | U bracket       |
| C. | Large L bracket | F. | 6/32 screws     |

**Figure 2-9. Cable Retention Arm Components**

---


## ***Installing the Cable Retention Arm Assembly into a Rittal System Rack***

- 1.** Remove the bottom left power supply mounting screw located on the rear of the server directly to the right of the mouse connector. See Figure 2-10, A.
- 2.** Attach the mounting plate (B) to the rear of the server below the AC receptacle. Use the screw removed in Step 1 and two additional 6-32 screws from the kit. See Figure 2-10.

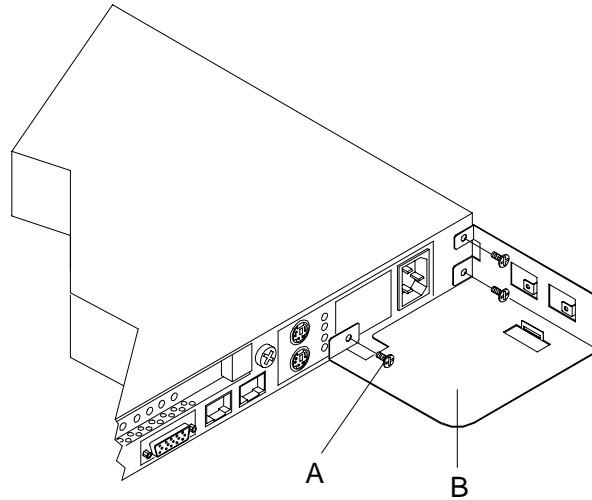


***Figure 2-10 Installing the Mounting Plate***

- 3.** One end of the cable arm includes a long hinged bracket with six mounting holes. The other end of the cable arm includes a small hinged bracket with two mounting holes. Using two 6-32 screws attach the end of the cable arm with the long hinged bracket to the mounting plate installed in the previous step. See Figure 2-11.

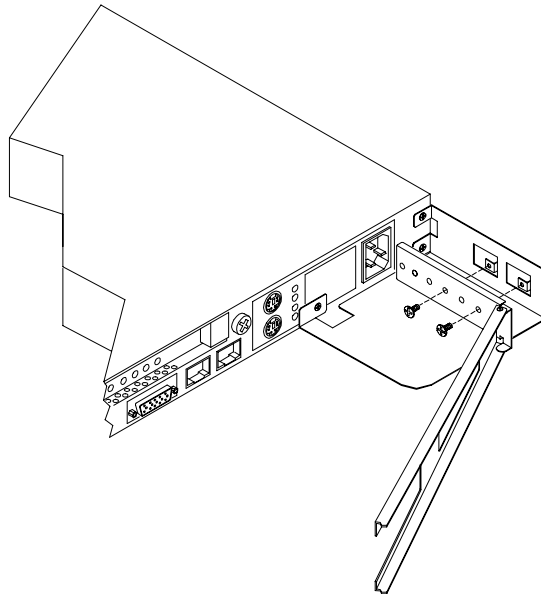

***Figure 2.11. Installing the Cable Arm to the Mounting Bracket***

- 
4. Refer to Figure 2-12. Position the U-bracket (B) on the outside of the right slide rail (A) (viewed from the rear of the system rack). While holding the U-bracket in place, position the adjustable side of the small L-bracket (C) on the inside of the slide rail in front of the U-bracket. Secure the U-bracket to the small L-bracket with two 6-32 screws supplied with the kit. Do not completely tighten the screws.

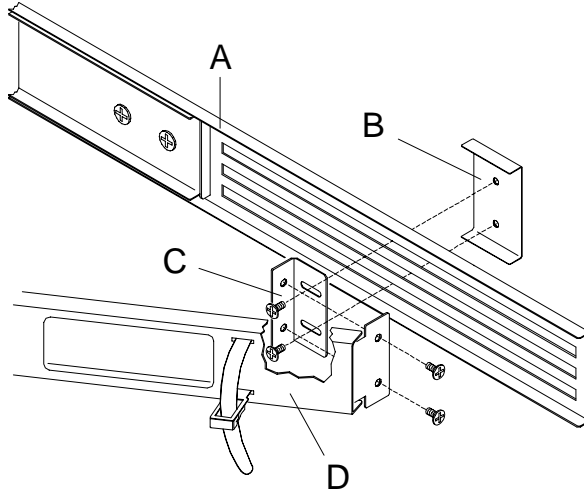


**Figure 2-12 Installing the U Bracket and Small L Bracket to the Cable Arm**

5. Attach the small L-bracket (C) to the free end of the cable arm (D) using two 6-32 screws. Tighten these two screws. See Figure 2-12.
6. Pull the server out of the rack until the component rail release latches engage. The component rail release latches on either side of the server lock the server onto the slide rails.
7. From the rear of the system cabinet, extend the cable retention arm towards the rear of the system cabinet.
8. Tighten the two 6-32 screws that secure the U-bracket (B) and small L-bracket (C) to the slide rail. See Figure 2-12.
9. Press in on the rail release latches and slowly push the server in and out of the system rack. Ensure proper movement of the cable retention arm. Adjustment of the cable arm hinged brackets may be necessary to attain smooth operation. Tighten all screws.
10. Bundle all the server cables together and tie-wrap them to the cable retention arm.
11. Slide the server into the system rack.

---

## ***Installing the Cable Retention Arm Assembly into a APC System Rack***


1. At the rear of the system rack, attach the large L-bracket to the server right hand vertical rail in the position shown in Figure 2-13. It is necessary to remove the bottom M5 screw securing the right slide rail to the vertical rail.

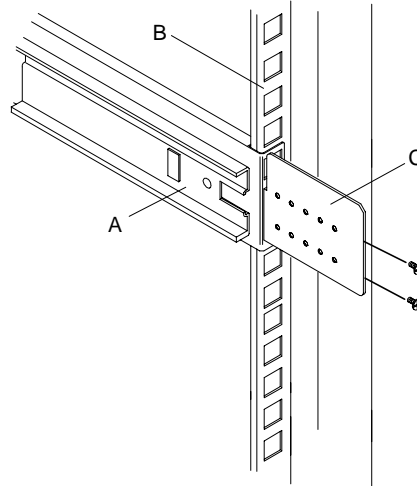

***Figure 2-13. Installing the Large L Bracket***

2. Remove the bottom left power supply mounting screw located on the rear of the server directly to the right of the mouse connector. See Figure 2-10, A.
3. Attach the mounting plate (B) to the rear of the server below the AC receptacle. Use the screw removed in Step 2 and two additional 6-32 screws from the kit. See Figure 2-10.
4. One end of the cable arm includes a long hinged bracket with six mounting holes. The other end of the cable arm includes a small hinged bracket with two mounting holes. Using two 6-32 screws attach the end of the cable arm with the long hinged bracket to the mounting plate installed in the previous step. See Figure 2-11.
5. Pull the server out of the rack until the component rail release latches engage. The component rail release latches on either side of the server lock the server onto the slide rails.
6. From the rear of the system cabinet, extend the cable retention arm towards the rear of the system cabinet.

- 
7. Refer to Figure 2-14. Attach the free end of the cable retention arm (B) to the small L-bracket (C) using two 6-32 screws. Tighten these two screws
  8. Attach the small L-bracket (C) to the large L bracket (D) using two 6-32 screws. Do not tighten these two screws.

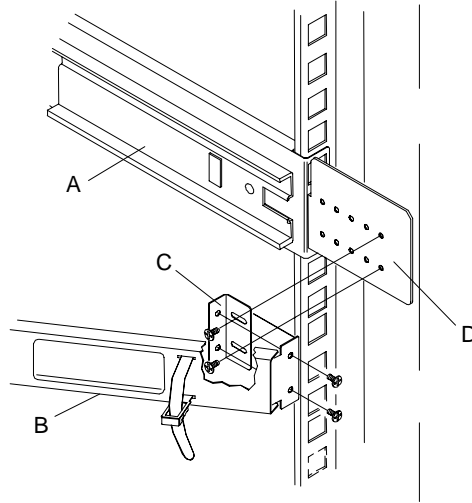


**Figure 2-14. Attaching the Cable Arm to the L Brackets**

9. Press in on the rail release latches and slowly push the server in and out of the system rack. Ensure proper movement of the cable retention arm. Adjustment of the cable arm hinged brackets may be necessary to attain smooth operation. Tighten all screws.
10. Bundle all the server cables together and tie-wrap them to the cable retention arm.
11. Slide the server into the system rack.

---

## ***Installing the Front Bezel***

1. Position the front bezel so the mounting tabs of the front bezel are aligned with their mounting holes on the front of the system. See Figure 2-15. Slide the bezel right until the bezel snaps into place.

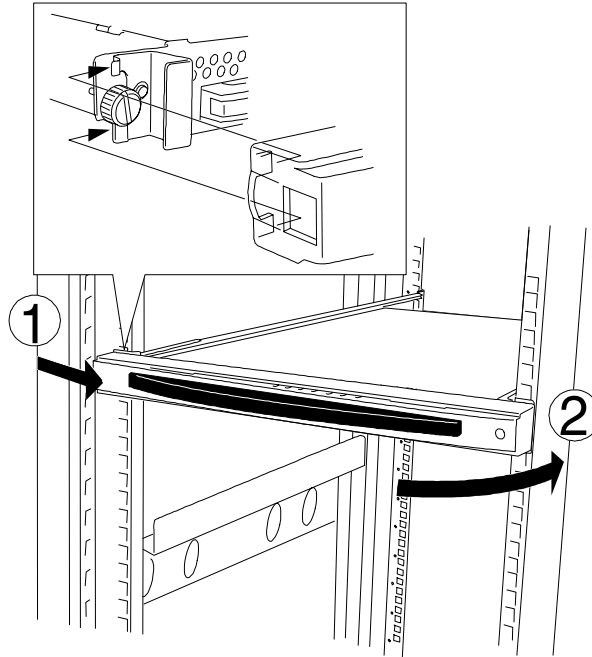

***Figure 2-15. Installing the Front Bezel***

2. Close and lock the front bezel.


---

## Getting Familiar with the System

This section helps you become familiar with the system's features, such as the location of your system's front and rear panel switches, indicators and connectors.

### Front View with Front Bezel Closed

Figure 2-16 shows the location of the front system features.

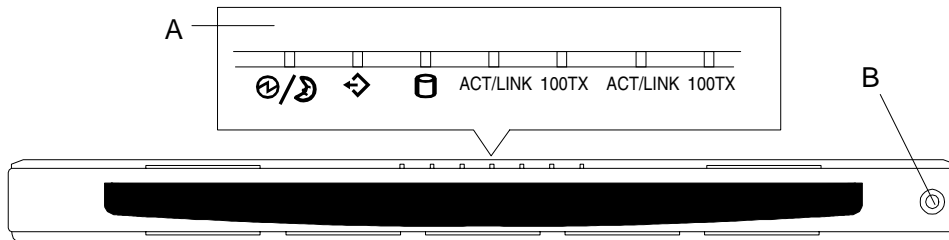

- |    |                   |   |
|----|-------------------|---|
| A. | System indicators | Refer to Figure 2-19.   |
| B. | Keylock           | When locked, secures the front bezel not allowing access to the system devices. |


**Figure 2-16. Front Features**

---

## ***Opening and Removing the Front Bezel***

Refer to the Figure 2-17 and open the front bezel of the cabinet as follows:

1. Open the front door of the system rack.
2. If the front bezel is locked, unlock it by inserting the key and turning the key to the unlocked position.
3. Grasp the indentation located on the right edge of the front door and pull the bezel towards you to open it.
4. Slide the bezel to the right and remove it from the system.
5. Release the thumbscrews securing the server to the front of the system rack.
6. Pull the server out of the rack until the component rail release latches engage. The component rail release latches on either side of the server lock the server onto the slide rails.

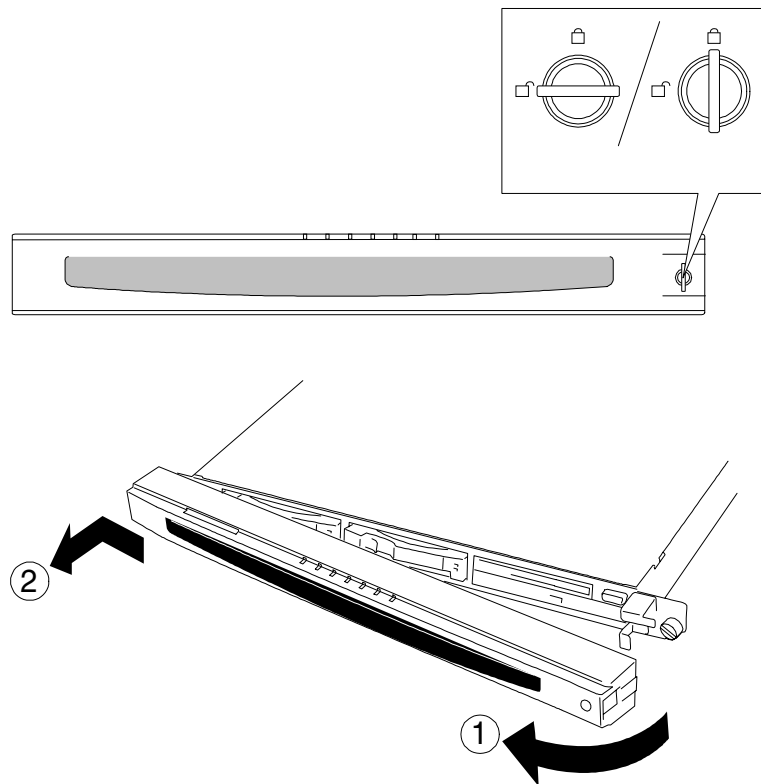


***Figure 2-17. Opening and Removing the Front Bezel***

---

## Front View


Figure 2-18 shows the location of the hard disk drives, peripheral devices, and connector mounted at the front panel of the system.

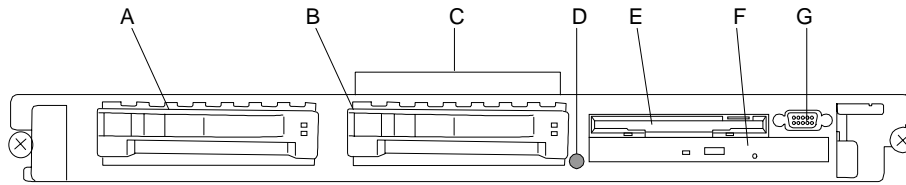

- A Hot-swap Hard Disk Drives
- B Hot-swap Hard Disk Drives Bay
- C LED Indicators
- D Power/Sleep OFF/ON Button
- E Bay 3.5" Slim Diskette Drive
- F Slim CD-ROM Drive
- G Front Serial Port Connector (COM2)

**Figure 2-18. System Component Layout**

Figure 2-19 shows the location of the front panel controls, indicators and connector.

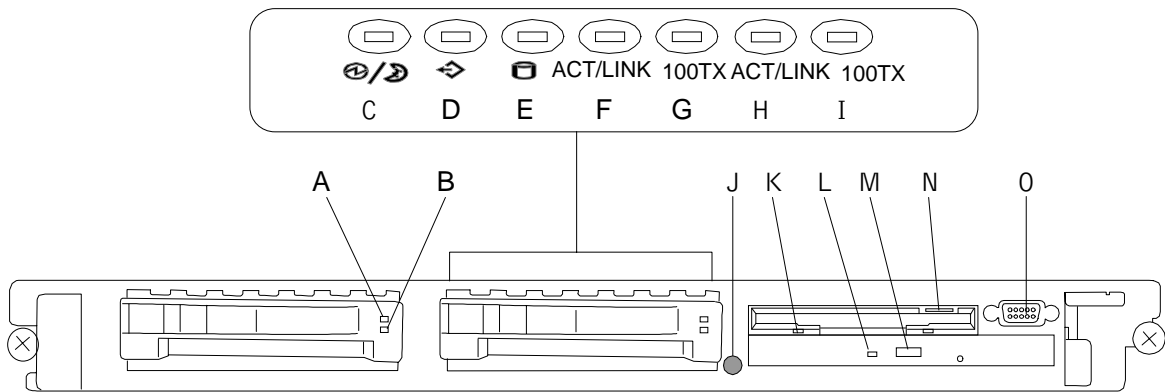

A.	Disk Drive Power/Activity LED	When on, power is applied to the disk drive; when blinking green, disk activity.
B.	Disk Drive Fault LED	When amber, internal disk drive failure.
C.	Power/Sleep Status LED	When off, power is turned off or power source is interrupted; when green, power is present in system; When amber, the system is in the sleep mode. See Table 2-1.
D.	System Status LED	When steady green, normal operation; when blinking green, CPU or memory errors; when amber, voltage or thermal errors; when red, RAS controller error. See Table 2-1.
E.	Disk Access LED	When off, no disk activity or no disk fault; when blinking green, disk activity; when amber, internal disk failure. See Table 2-1.
F.	ACT/LINK Network Connection 1 Status LED	When green, connected to the network; when blinking green, network activity. See Table 2-1.
G.	100TX Network Connection 1 Speed LED	When off, data transfer rate is 10Mb/s; when green, data transfer is 100Mb/s. See Table 2-1.
H.	ACT/LINK Network Connection 2 Status LED	When green, connected to the network; when blinking green, network activity. See Table 2-1.
I.	100TX Network Connection 2 Speed LED	When off, data transfer rate is 10Mb/s; when green, data transfer is 100Mb/s. See Table 2-1.
J.	Power/Sleep ON/OFF Switch	Press to turn system DC power on or off. If sleep mode is activated, press once to enter power-saving sleep mode. *
K.	Activity light, 3 1/2-inch diskette drive	When lit, diskette is in use.
L.	Activity light, CD-ROM reader	When lit, CD-ROM reader is in use.
M.	Load/eject button, CD-ROM reader	Press to load CD and eject CD.
N.	Eject button, 3 1/2-inch diskette drive	Press to eject diskette.
O.	Serial Port Connector	COM2 serial port 9-pin connector used for diagnostics.


\*Requires Windows 2000 Operating System

**Figure 2-19. Front System Features and Controls**

---

## Rear View

Figure 2-20 shows the location of the rear system features and controls.

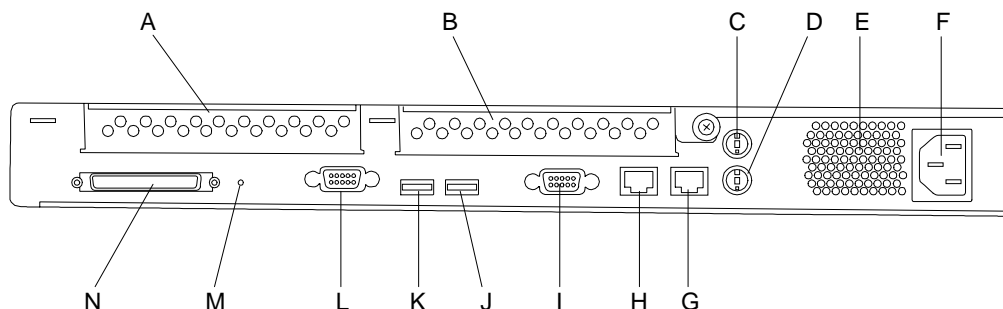

A	33 MHz, 64-bit PCI slot 1	PCI add-in board mounted on internal PCI riser card.
B	33 MHz, 64-bit PCI slot 2	PCI add-in board mounted on internal PCI riser card.
C	Mouse port	PS/2-compatible 6-pin mini-DIN connector (Green)
D	Keyboard port	PS/2-compatible 6-pin mini-DIN connector (Purple)
E	Power supply screen	Power supply located behind this screen.
F	AC input power connector	Supplies AC power to the power supply
G	LAN port 2 connector	RJ-45 Ethernet connector
H	LAN port 1 connector	RJ-45 Ethernet connector
I	SVGA connector	SVGA monitor 15-pin connector (Blue)
J	USB2 connector	Second USB connector (Black)
K	USB1 connector	First USB connector (Black)
L	Serial Port 1	COM1 serial port 9-pin connector (Turquoise). COM2 serial port 9-pin connector located on the front panel.
M	Diagnostic Button	Factory use only.
N	Wide Ultra 2 SCSI Connector	Connects external SCSI devices with internal SCSI controller.

**Figure 2-20. Rear Features and Controls**

## Status LED Indicator Descriptions

Table 2-1 lists the system status LED indicators along with a description of each LED indicator. Table 2-2 lists the disk drive status LED panel indicators along with a description of each LED indicator. Refer to Figure 2-19 for the location of the LED indicators listed in Tables 2-1 and 2-2.

**Table 2-1. System Status LED Indicators**

LED	Status	Description	Response
Power/Sleep Status (See Figure 2-19, C)	Off	Power interrupted to the system	Check AC connection; check system power supply.
	Green	Power applied to system.	None required (normal)
	Amber	**System power saving (sleep) mode.	Press Power/Sleep button to enter Sleep mode and to return to Normal mode.
Status LED (See Figure 2-19, D)	Off (Power LED is OFF)	Power is turned off	Turn power on.
	Off (Power LED is ON)	Currently executing POST	Wait for POST to complete.
		CPU Error occurred	Turn the system off and then on again. In the event an error message is displayed during the subsequent POST...write the error message down and contact your field service representative.
		Detected uncorrectable memory error	
		Detected an SMI timeout	
	PCI system error occurred		
	Green	Normal operation	None required. (normal)
	Blinking Green	Operating with either CPU or memory disabled.	CPU or memory error. Verify which CPU or memory bank was disabled by entering the F2 BIOS Setup menu and replace the component as soon as possible.
		Multiple correctable memory errors were detected	Multiple single-bit ECC errors detected. Contact your field service representative to arrange the replacement of memory.
	Amber (Power LED is OFF)	Detected missing CPU or missing CPU terminator	Confirm that all CPU's and CPU terminators are inserted firmly and correctly.
Amber (Power LED is ON)	Detected an abnormal thermal/voltage condition	Clean the internal fans. Check that no cables are obstructing the internal air flow. If the error persists, contact your field service representative.	
Blinking Amber Amber (Continued on next page)	Detected an abnormal voltage level	Clean the internal fans. Check that no cables are obstructing the internal air flow. If the error persists, contact your field service representative.	
	Detected a failed fan		
	Detected a thermal/voltage warning		

**Table 2-1. System Status LED Indicators (continued)**

LED	Status	Description	Response
Status LED (See Figure 2-19, D)	Blinking Amber	Detected a problem with the redundant power supply subsystem	Check the LED's on the power supply to determine which power supply may be causing the problem.
	Red	Detected an error with the BMC controller	Contact your field service representative.
*Disk Access (See Figure 2-19, E)	Off	No disk activity; no disk fault	None required (normal)
	Blinking Green	Disk Activity	None required (normal)
	Amber	Internal disk failure	Replace disk drive.
ACT/Link (See Figure 2-19, F, H)	Green	Connected to the Network (linked)	None required (normal)
	Blinking Green	Activity between the system and the network	None required (normal)
100TX (See Figure 2-19, G, I)	Off	Data transfer rate is 10Mb/s	None required (normal)
	Green	Data transfer rate is 100Mb/s	None required (normal)

\*RAID configuration only.

\*\* Requires Windows 2000

**Table 2-2. Disk Drive Status LED Panel Indicators**

LED	Status	Description	Response
Disk Drive Power/Activity (See Figure 2-19, A)	Off	No power to disk drive	Check power to system; reseat drive carrier; replace disk drive.
	Blinking green	Accessing disk drive	None required (normal)
*Disk Drive Fault (See Figure 2-19, B)	Off	No alarms	None required (normal)
	Amber	Disk drive failure	Replace disk drive

\*RAID configuration only.

---

## Making Connections

If your system normally operates without a video display or keyboard (for example, as a network server), you must install a video display and keyboard to configure the system. You may remove them after running the BIOS Setup Utility. For information on running the BIOS Setup Utility, refer to Chapter 3 "Configuring Your System" of this User's Guide.


Refer to Figure 2-21 and connect your keyboard, monitor, and mouse. Connect any external peripheral devices such as a printer or modem by following the instructions included with these devices. Refer to the next section of this chapter before connecting the power cord to your server.

---

### CAUTION

Damage to the system may result if the keyboard/mouse cable is inserted or removed when power is applied to the system. Inserting a telephone line connector into a LAN board RJ-45 port may result in personal injury and equipment damage.

---

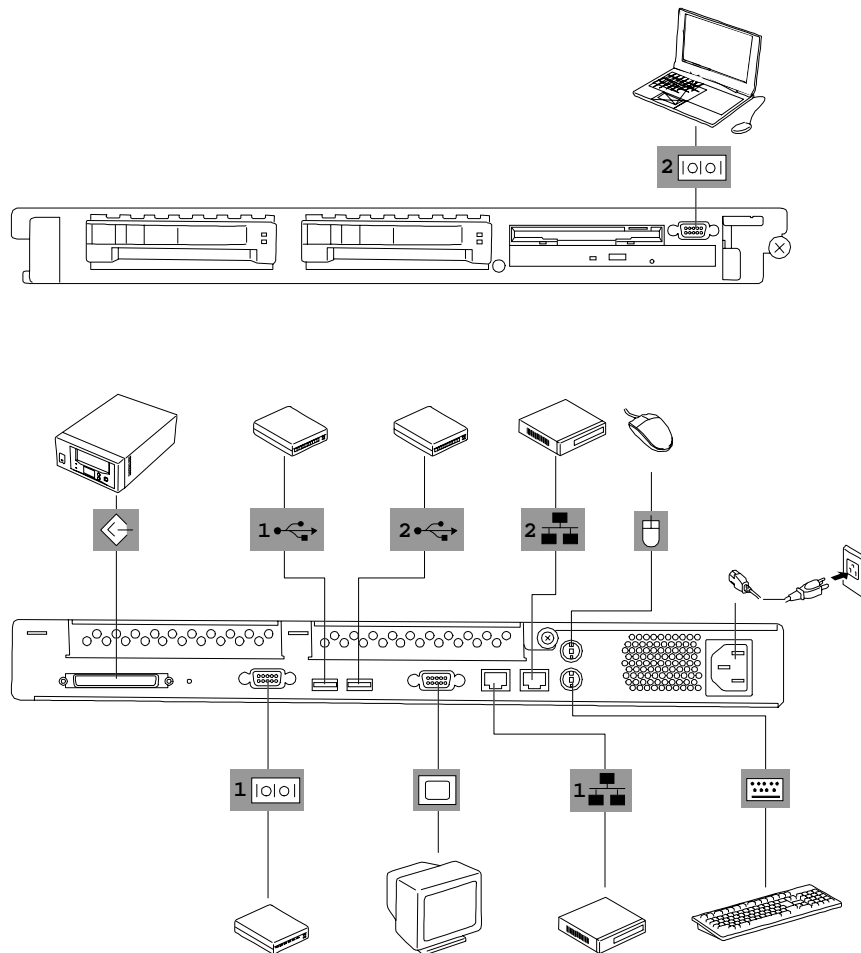

**Figure 2-21. Making Connections**

---

## ***Connecting the Power Cord***

Plug the female end of the AC power cord into the input receptacle on the rear of the power supply cage. Plug the male end of the power cord into NEMA 5-15R outlet for 100-120 VAC or NEMA 6-15R outlet for 200-240 VAC.

If the power cord supplied with the system is not compatible with the AC wall outlet in your region, obtain a suitable power cord that meets the following criteria.

- The power cord must be rated for the available AC voltage and have a current rating that is at least 125% of the current rating of the system.
- The power cord connector that plugs into the wall outlet must be terminated in a grounding-type male plug designed for use in your region. It must have certification marks showing certification by an agency acceptable in your region.
- The power cord connector that plugs into the system must be an IEC- type CEE-22 female connector.
- The power cord must be less than 1.8 meters (6.0 feet) long.

When connecting the power cord to a power control unit such as an UPS, confirm that the power control unit is powered OFF. Connecting the power cord while power is supplied to the power control unit may cause a failure.

---

### **WARNING**

Your system shipped with a power cord for the power supply. Do not attempt to modify or use the supplied AC power cord if it is not the exact type required.

---

---

## Powering On Your System

Power on your system as follows.

1. Make sure all external devices, such as a video display, keyboard, and mouse (optional) have been connected, and the power cords are connected.
2. Power on the video display and any other external devices.
3. Open the front bezel and press the push-button power on/off switch on the front panel. Verify that the Power/Sleep Status LED (Figure 2-7, E) is lit. If it is not lit, ensure the ac power cord is connected to a functional ac power source.

After a few seconds your system begins the internal Power-On Self Test (POST). POST automatically checks the system board, CPU module, memory, keyboard, and most installed peripheral devices.



### CAUTION

Always allow POST to complete before powering down your system.

---



### CAUTION

The server management logic on your system board monitors and logs system voltage changes. When powering down your system you may experience a 1–5 second delay from the time you press the push-button power on/off switch on the front panel and your system powering down. This is normal system operation and is required by the server management logic.

---

If you have problems powering on your system, refer to *Problem Solving* in Chapter 5 of this User's Guide.

After you have successfully powered on your system, insert the ExpressBuilder CD-ROM into the CD-ROM device, reboot the system and follow the screen prompts to run ExpressBuilder.



# 3

## Configuring Your System

- Configuring Your System
- BIOS Setup Utility
- Adaptec SCSI Utility
- Configuring the RAID Controller
- Configuring System Board Jumpers

---

## ***Configuring Your System***

Configuration and setup utilities are used to change your system configuration. You can configure your system, as well as option boards you may add to your system, using the BIOS Setup Utility. Several unique system parameters are configured using the BIOS Setup, which is stored in the system FLASH memory.

The Adaptec Configuration Utility detects the SCSI host adapters on the system board. Use this utility if you need to configure the SCSI controller in your system or to perform a SCSI disk format or verify disk operation on the SCSI disk drives.

If your system has been factory configured, the BIOS Setup or Adaptec Configuration Utility do not need to be run unless you want to change the password or security features, add certain types of option boards or devices, or upgrade your system board.

This chapter also provides information on several system configuration parameters that are set by jumpers on the system board. However, these parameters do not usually require change.

Use the EXPRESSBUILDER CD-ROM to create the device driver diskettes.

---

# BIOS Setup Utility

The BIOS Setup Utility is used to change system configuration parameters. The utility is resident in the system FLASH memory and does not require a diskette or an operating system present to run.

## Using the BIOS Setup Utility

You access the BIOS Setup utility when you turn on or reboot your system. To run the BIOS Setup Utility, perform the following procedure:

1. Power-on or reboot the system. “Press <F2> to enter SETUP” displays.
2. Press **F2**. The BIOS Setup Utility starts and the Main Menu is displayed. The menu bar at the top of the Main Menu lists the following selections:

Menu	Use
Main	Use this menu for basic system configuration.
Advanced	Use this menu for setting the Advanced Features available on your system.
Security	Use this menu to set User and Supervisor Passwords and the Backup and Virus-Check reminders.
System Hardware	Use this menu for configuring unique Server features.
Boot	Use this menu to configure Boot Device priority.
Exit	Exits the current menu.

Use the arrow keys to select a menu or an item on a displayed menu. Press the value keys (listed in the table below) to cycle through the allowable values for the selected field. Use the Exit menu’s “Save Values” selection to save the current values on all the menus.

To display a submenu, position the cursor on a selection that has a submenu and press **ENTER**. An arrow precedes selections with submenus.

Refer to the following table for information on the keys that you use with BIOS Setup. These keys are also listed at the bottom of the Setup menu.

---

<b>Key</b>	<b>Function in Setup Menu</b>
F1 or Alt-H	Get Help about an item.
ESC	Exit the current menu and return to the previous menu.
Left or right arrow keys	Move between menus.
Up or down arrow keys	Move cursor up and down. The cursor moves only to the settings that you can change.
HOME or END	Move cursor to top or bottom of window.
PAGE UP or PAGE DOWN	Move cursor to next or previous page.
F5 or -	Select the previous value for the field.
F6 or + or SPACE	Select the next value for the field.
F9	Load default configuration values for this menu.
F10	Save configuration values and exit.
ENTER	Execute command or Select submenu.

---

## ***BIOS Setup Configuration Settings***

The BIOS Setup Configurations tables show the default settings for the BIOS Setup Utility and provides a place for you to record any changes you make to these settings. Recommended values are bold in the following tables.

---

## Main Menu

Feature	Choices or Display Only	Description	Your Setting
Processor Type	—————	(Display Only). Shows the type of processor installed.	
Processor Speed	XXX	(Display Only). Indicates the processor speed.	
Cache RAM	XXX KB	(Display Only). Indicates the cache RAM size.	
System Memory	XXX KB	(Display Only). Indicates the total capacity of the basic memory.	
Extended Memory	XXXXXX KB	(Display Only). Indicates the total capacity of the extended memory.	
Language	<b>English (US)</b> French, German Spanish, Italian	Selects which language BIOS displays. Note: This feature <i>immediately</i> changes to the language BIOS selected.	
BIOS Version	—————	(Display Only). Indicates the version of the system BIOS.	
System Time	HH:MM:SS	Sets the system time (hour, minutes, seconds, on 24 hour clock).	
System Date	MM/DD/YYYY	Sets the system date (month, day, year).	
Diskette A	1.44/1.25 MB 3.5"	Selects the diskette type. Note that 1.25 MB, 3.5 inch references a 1024 byte/sector Japanese media format. To support this type of media format requires a 3.5 inch 3-mode diskette drive.	

---

---

## ***Advanced Menu***

<b>Feature</b>	<b>Description</b>	<b>Your Setting</b>
Advanced	Refer to Advanced Submenu.	
Memory Reconfiguration	Refer to Memory Reconfiguration Submenu.	
CPU Reconfiguration	Refer to CPU Reconfiguration Submenu.	
Peripheral Configuration	Refer to Peripheral Reconfiguration Submenu.	
Monitoring Configuration	Refer to Monitoring Configuration Submenu. It sets POST Monitoring and Boot Monitoring.	
PCI Device	Refer to PCI Device Submenu.	
Option ROM	Refer to Option ROM Submenu. It Disables/Enables the Option ROM BIOS on the PCI Bus.	
Numlock	Refer to Numlock Submenu. It selects Keyboard Options.	

---

## Advanced Submenu

Feature	Choices or Display Only	Description	Your Setting
Installed O/S	Other <b>PnP O/S</b>	Select the operating system installed on your system that will be used most of the time. Note: An incorrect setting can cause some operating systems to display unexpected behavior.	
Reset Configuration Data	<b>No</b> Yes	Select Yes if you want to clear the Extended System Configuration Data (ESCD) area.	
Boot-time Diagnostic Screen	<b>Disabled</b> Enabled	Disables or enables display of the diagnostic screen during boot instead of the NEC logo.  The Boot-time diagnostic screen is automatically enabled if redirection or RomPilot is enabled.	
RomPilot Support	<b>Disabled</b> Enabled	Disables or enables RomPilot support. The Boot-time diagnostic screen is enabled if RomPilot is enabled. (See Appendix B for more details.)	
Post Error Pause	Disabled <b>Enabled</b>	Disables or enables a pause during system bootup if an error occurs. If Enabled and an error occurs, the bootup sequence pauses and offers the choice of entering BIOS Setup or resuming the boot sequence. If Disabled, the system always continues to bootup.	

## Memory Reconfiguration Submenu

Feature	Choices or Display Only	Description	Your Setting
DIMM #1 Status	Normal*	(Display Only)	
DIMM #2 Status	Normal*	(Display Only)	
DIMM #3 Status	Normal*	(Display Only)	
DIMM #4 Status	Normal*	(Display Only)	
Clear DIMM Errors	Press <b>ENTER</b>	Clears the DIMM group error status information.	
DIMM Error Pause	Enabled <b>Disabled</b>	The POST operation pauses if a DIMM error occurs.	

\*Possible Values: Normal, None, or Error.

---

## CPU Reconfiguration Submenu

Feature	Choices or Display Only	Description	Your Setting
CPU #1 Status	Normal*	(Display Only)	
CPU #2 Status	Normal*	(Display Only)	
Clear CPU Errors	Press <b>ENTER</b>	Clears the CPU error information.	
CPU Error Pause	Enabled <b>Disabled</b>	The POST operation pauses if a CPU error occurs.	

\*Possible Values: Normal, None, or Error.

## Peripheral Configuration Submenu

Feature	Choices or Display Only	Description	Your Setting
Serial Port 1: (COM 1)	Disabled 3F8, IRQ3 <b>3F8, IRQ4</b> 2F8, IRQ3 2F8, IRQ4 3E8, IRQ3 3E8, IRQ4 2E8, IRQ3 2E8, IRQ4 Auto	Disables serial port 1 or selects the base address and interrupt (IRQ) for serial port 1.	
Serial Port 2: (COM 2)	Disabled 3F8, IRQ3 3F8, IRQ4 <b>2F8, IRQ3</b> 2F8, IRQ4 3E8, IRQ3 3E8, IRQ4 2E8, IRQ3 2E8, IRQ4 Auto	Disables serial port 2 or selects the base address and interrupt (IRQ) for serial port 2.	
Parallel Port	<b>Disabled</b> 378, IRQ5 378, IRQ7 278, IRQ5 278, IRQ7 3BC, IRQ5 3BC, IRQ7 Auto	Disables the parallel port or selects the base address and interrupt (IRQ) for the Parallel port.	
Diskette Controller	Disabled <b>Enabled</b>	Configure using these options: (Disabled) No configuration. (Enabled) User configuration	

## Peripheral Configuration Submenu (Continued)

Feature	Choices or Display Only	Description	Your Setting
Mouse	Disabled Enabled <b>Auto Detect</b>	<i>Disabled</i> prevents any installed PS/2 mouse from functioning, but frees up IRQ12. <i>Enabled</i> forces the PS/2 mouse port to be enabled regardless if a mouse is present. <i>Auto Detect</i> enables the PS/2 mouse only if present. <i>OS Controlled</i> is displayed only if the OS controls the mouse.	
SCSI Controller	Disabled <b>Enabled</b>	Disables or enables on-board SCSI controller.	
LAN Controller 1	Disabled <b>Enabled</b>	Disables or enables on-board LAN 1 controller.	
LAN Controller 2	Disabled <b>Enabled</b>	Disables or enables on-board LAN 2 controller.	
USB Controller	Disabled <b>Enabled</b>	Disables or enables on-board USB controller.	
Legacy USB Support	<b>Disabled</b> Enabled	Disables or enables support for USB keyboards and mice. Set to Enable for use with a non-USB aware operating system such as DOS or Unix.	
IDE Controller	Disabled <b>Enabled</b>	Enables the integrated local bus IDE adapter.	

## Monitoring Configuration Submenu

Feature	Choices or Display Only	Description	Your Setting
POST Monitoring	Disabled OptROM-END <b>POST-END</b>	Selects the point where the POST monitoring checkpoint is.	
Boot Monitoring	<b>Disabled</b> Enabled	Disable or enable the boot monitoring feature.	

## PCI Device Submenu

Feature	Choices or Display Only	Description	Your Setting
PCI IRQ1 — PCI IRQ11	Disabled <b>Auto Select</b> IRQ3 IRQ4 IRQ5 IRQ6 IRQ7 IRQ9 IRQ10 IRQ11	PCI devices use hardware interrupts called IRQs. A PCI device cannot use IRQs already in use by ISA devices. Use "Auto" only if no ISA legacy cards are installed.	

---

### Option ROM Submenu

Feature	Choices or Display Only	Description	Your Setting
Onboard SCSI	<b>Enabled</b> Disabled	Disables/Enables the mapping of the onboard SCSI BIOS.	
Onboard LAN 1	<b>Enabled</b> Disabled	Disables/Enables the mapping of the onboard LAN 1 BIOS	
Onboard LAN 2	<b>Enabled</b> Disabled	Disables/Enables the mapping of the onboard LAN 2 BIOS	
PCI Slot 1	<b>Enabled</b> Disabled	Initializes Device Expansion ROM	
PCI Slot 2	<b>Enabled</b> Disabled	Initializes Device Expansion ROM	


### Numlock Submenu

Feature	Choices or Display Only	Description	Your Setting
Numlock	<b>Auto</b> On OFF	Selects the power-on state for Numlock.	
Key Click	<b>Disabled</b> Enabled	Disables or enables keyclick.	
Keyboard Auto-repeat Rate	2/sec 6/sec <b>10/sec</b> 13.3/sec 18.5/sec 21.8/sec 26.7/sec 30/sec	Selects key repeat rate.	
Keyboard Auto-repeat Delay	0.25 sec 0.5 sec 0.75 sec <b>1 sec</b>	Selects delay before key repeat.	

---

## Security Menu

---

 **Note:** Enabling the Supervisor Password field requires a password for entering Setup. The passwords are not case sensitive.

---

Feature	Choices or Display Only	Description	Your Setting
Supervisor Password is	<b>Clear</b>	Status only, user cannot modify. Once set, this can be disabled by setting it to a null string, or by clearing password jumper on system board (see System Board Jumpers in this Chapter).	
User Password is	<b>Clear</b>	Status only, user cannot modify. Once set, this can be disabled by setting it to a null string, or by clearing password jumper on system board (see System Board Jumpers in this Chapter).	
Set Supervisor Password	Press <b>ENTER</b>	Supervisor password controls access to the setup utility.  When the <Enter> key is pressed, the user is prompted for a password; press ESC key to abort. Once set, this can be disabled by setting it to a null string, or by clearing password jumper on system board (refer to System Board Jumpers in this chapter).	
Set User Password	Press <b>ENTER</b>	When the <Enter> key is pressed, the user is prompted for a password; press ESC key to abort. Once set, this can be disabled by setting it to a null string, or by clearing password jumper on system board (refer to System Board Jumpers in this chapter).	
Password on Boot	<b>Disabled</b> Enabled	Disables or enables password entry on boot.	
Diskette Access Secure Mode	<b>Everyone</b> Supervisor	Controls access to diskette drives.	
Power Switch Mask	Masked <b>Unmasked</b>	Determines whether power switch is masked or unmasked.	
Option ROM Menu Mask	<b>Unmasked</b> Masked	Determines whether Option ROM Menu Mask is masked or unmasked.	
Processor Serial Number	<b>Disabled</b> Enabled	Determines whether Processor Serial Number feature is enabled or disabled.	

---

---

## System Hardware Menu

Feature	Choices or Display Only	Description	Your Setting
Thermal Sensor	Press <b>Enter</b>	Refer to Thermal Sensor Submenu.	
Wake On Events	Press <b>Enter</b>	Refer to Wake On Events Submenu.	
AC Link	Power On <b>Last State</b> Stay Off	Determines the mode of AC Link.	
ESM IRQ	Disabled IRQ5 IRQ10 <b>IRQ11</b>	Determines routing of the ESM interrupt.	
Error Log Initialization	Press <b>Enter</b>	Request to initialize the Error Log now. If <i>Error log clears</i> , then display "System Event Log Cleared!" If <i>Error log does not clear</i> , then display "System Event Log Not Cleared!"	
Console Redirection	Press <b>Enter</b>	Additional setup menu to configure console. The Boot-Time diagnostic screen is enabled if redirection is enabled.	

---

### Thermal Sensor Submenu

Feature	Choices or Display Only	Description	Your Setting
Thermal Sensor	<b>Enabled</b> Disabled	When enabled determines if the BIOS will disable boot (if temperature is not within a safe range).	
Upper Limit	50	Sets the upper temperature limit in centigrade.	
Lower Limit	5	Sets the lower temperature limit in centigrade.	

---

---

### Wake On Events Submenu

Feature	Choices or Display Only	Description	Your Setting
Wake On LAN	<b>Enabled</b> Disabled	Enables Wake On LAN Support	
Wake On Ring	Enabled <b>Disabled</b>	Disables Wake On Ring Support	

### Console Redirection Submenu

Feature	Choices or Display Only	Description	Your Setting
Serial Port Address	<b>Disabled</b> Serial Port 2 (3F8h/IRQ4) Serial Port 2 (2F8h/IRQ3)	If enabled, the console will be redirected to this port. If console redirection is enabled, this address must match the settings of serial port 2.	
Baud Rate	57.6K <b>19.2K</b>	Enables the specified baud rate.	
Flow Control	No Flow Control <b>XON/OFF</b>	Enables flow control.	
Console Connection	<b>Direct</b> Via Modem	Indicate whether the console is connected directly to the system or a modem is used to connect.	

---

## **Boot Menu**

Use the up or down arrow keys to select a device, then press the <+> or <-> keys to move the device higher or lower in the boot priority list.

### **Boot Device Priority Menu**

<b>Boot Priority</b>	<b>Device</b>	<b>Description</b>	<b>Your Setting</b>
1.	ATAPI CD-ROM Drive	Attempts to boot from an ATAPI CD-ROM drive.	
2.	Diskette Drive	Attempts to boot from a diskette drive.	
3.	Hard Drive	Attempts to boot from a hard drive device.	
4.	Intel UNDI, PXE-2.0 (Build 071)	Attempts to boot from diagnostic boot partition of the flash memory.	
5.	Intel UNDI, PXE-2.0 (Build 071)	Attempts to boot from diagnostic boot partition of the flash memory.	

---

## ***Exit Menu***

You can make the following selections on the Exit Menu. Select an option using the up or down arrow keys, then press <Enter> to execute the option. Pressing <Esc> does not exit this menu. You must select one of the items from the menu or menu bar to exit.

### *Exit Menu*

<b>Choices</b>	<b>Description</b>
Save Changes and Exit	Exits System Setup after saving all changes to CMOS.
Exit Without Saving Changes	Exits System Setup without saving setup data to CMOS.
Get Default Value	Loads default values for all Setup items.
Load Previous Values	Loads previous values of all Setup items.
Save Changes	Writes all Setup item values to CMOS.

---

# Adaptec SCSI Utility

The Adaptec SCSI Utility detects the SCSI host adapters on the server board.

Use the Adaptec SCSI Utility to:

- Change default values
- Check and/or change SCSI device settings that may conflict with those of other devices in the server

## Running the SCSI Utility

You access the Adaptec SCSI Utility when you turn on or reboot your system.

To run the Adaptec SCSI utility, perform the following procedure:

1. Power-on or reboot the system.
2. When this message appears on the video monitor:

*Press Ctrl-A to run SCSI Utility...*

3. Press **Ctrl+A** to run this utility. When it appears, choose the host adapter that you want to configure.
4. The SCSI utility starts. When the Adaptec SCSI Utility detects more than one AIC-78xx host adapter, it displays a selection menu listing the bus and device number of each adapter. When the selection menu appears, select the channel you wish to configure as follows:

Bus : Device : Channel	Selected SCSI Adapter
01 : 04 : A*	AIC7899
01 : 04 : B	AIC7899

\*Internal SCSI connector.

5. Once you select the adapter, the following screen is displayed:

Menu	Description
Configure/View Host Adapter Settings	Configure host adapter and device settings.
SCSI Disk Utilities	The utility scans the SCSI bus for SCSI devices, reports a description of each device. Run these utilities <i>before</i> configuring SCSI devices.

6. If you wish to format a disk, verify disk media, or display a list of devices and their SCSI IDs, select “SCSI Disk Utilities”. If you wish to configure the adapter or a device, select “Configure/View Host Adapter Settings”.

---

## Adaptec SCSI Utility Configuration Settings

The following keys are active for all Adaptec SCSI Utility screens:

Key	Action
Arrows	Up and down arrows move from one parameter to another within a screen.
ENTER	Displays options for a configurable parameter. Selects an option.
ESC	Moves back to previous screen or parameter or EXIT if at the Main menu.
F5	Switches between color and monochrome.
F6	Resets to host adapter defaults.

The Table 3-1 shows the normal settings for the Adaptec SCSI Utility and provides a place for you to record any changes you make to these settings.

**Table 3-1. Adaptec SCSI Utility Setup Configurations**

OPTION	RECOMMENDED SETTING OR DISPLAY ONLY	YOUR CONFIGURATION
<b>SCSI Bus Interface Definitions</b>		
Host Adapter SCSI ID	7	
SCSI Parity Checking	Enabled	
Host Adapter SCSI Termination	Enabled	
<b>Additional Options</b>		
Boot Device Options	Press ENTER for menu	
Boot Channel	A First	
Boot SCSI ID	0	
Boot LUN Number	0	
SCSI Device Configuration	Press ENTER for menu	
Sync Transfer Rate (MB/Sec)	160	
Initiate Wide Negotiation	Yes	
Enable Disconnection	Yes	
Send Start Unit Command	Yes	
Enable Write Back Cache	No	
BIOS Multiple LUN Support	No <sup>1</sup>	
Include in BIOS Scan	Yes <sup>1</sup>	
Advanced Configuration Options	Press ENTER for menu.	
Plug and Play SCAM Support	Disabled	
Reset SCSI Bus at IC Initialization	Enabled	

<sup>1</sup> No effect if BIOS is disabled.

---

**Table 3-1. Adaptec SCSI Utility Setup Configurations (Continued)**

---

<b>OPTION</b>	<b>RECOMMENDED SETTING OR DISPLAY ONLY</b>	<b>YOUR CONFIGURATION</b>
Display <Ctrl-A> Messages During BIOS Initialization	Enabled	
Extended BIOS Translation for DOS Drives >1 GByte	Enabled	
Verbose/Silent Mode	Verbose	
Host Adapter BIOS (Configuration Utility Reserves BIOS Space)	Enabled <sup>1</sup>	
Domain Validation	Enabled	
Support Removable Disks Under BIOS as Fixed Disks	Disabled <sup>1,2</sup>	
BIOS Support for Int13 Extensions	Enabled <sup>1</sup>	

---

<sup>1</sup>No effect if BIOS is disabled.

<sup>2</sup>Do not remove media from a removable media drive if it is under BIOS control.

### ***Exiting Adaptec SCSI Utility***

To exit the Adaptec SCSI Utility, press ESC until a message prompts you to exit (if you changed any settings, you are prompted to save the changes before you exit).

---

## Configuring the RAID Controller

The RAID (Redundant Array of Inexpensive Devices) option available for your system is the single channel SecuRAID 110 (Mylex AcceleRAID 150) RAID controller board which gives your system the added security of fault tolerance.

If you order a system with a RAID controller, the system is pre-configured at the factory according to Table 3-2.

**Table 3-2. RAID Configurations**

Number of Hard Drives	RAID Level Configured	Hard Drives in Array	Description
1	7	1	<b>JBOD (RAID 7)</b> Known as <i>Just a Bunch of Drives</i> , JBOD allows the controller to access the drives independently. This configuration has no redundancy and does not use striping.
2	1	2	<b>Mirroring (RAID 1)</b> Drives are paired and mirrored. All data is 100% duplicated on an equivalent drive (fully redundant).

If you want to change the RAID level or add additional hard disks to the array, use the RAID configuration utility. The RAID configuration utility is included with a RAID controller.

If you are adding the RAID controller to an existing system, the RAID configuration utility allows you to configure your disk array before reinstalling your network operating system. The RAID controllers support various versions of RAID technology (referred to as RAID levels). To use any RAID level, you must configure the RAID controller using the RAID configuration utility prior to installing your Network Operating System. For an explanation of this utility, refer to the documentation on the MYLEX CDROM that was shipped with the RAID controller. It describes RAID technology and provides tips on making your array perform well in your specific application. It also covers array hardware preparation, configuration, and initialization. After completing the steps in the manual, you can install your Network Operating System.

If you want to remotely configure the array (from a PC client); increase array capacity online; or monitor statistics on disk and controller activity, you must install the array manager provided with your RAID subsystem. Increasing array capacity is covered in the user's guide shipped with the option.

---

# Configuring System Board Jumpers

## Before You Begin

Only a qualified technical person should perform the procedures in this section.

---


### CAUTION

Electrostatic discharge (ESD) can damage the system board. Modify the system board only at an ESD workstation. Otherwise, wear an antistatic wrist strap attached to chassis ground.

---

The system board jumpers enable you to set specific operating parameters for your system. A jumper is a small plastic-encased conductor (shorting plug) that slips over two jumper pins.

The “System Board Jumpers” illustration (Figure 3-1) shows the location of the system board jumper block. Table 3-3 “System Board Jumper Configurations” lists the system board jumpers and their factory default settings.

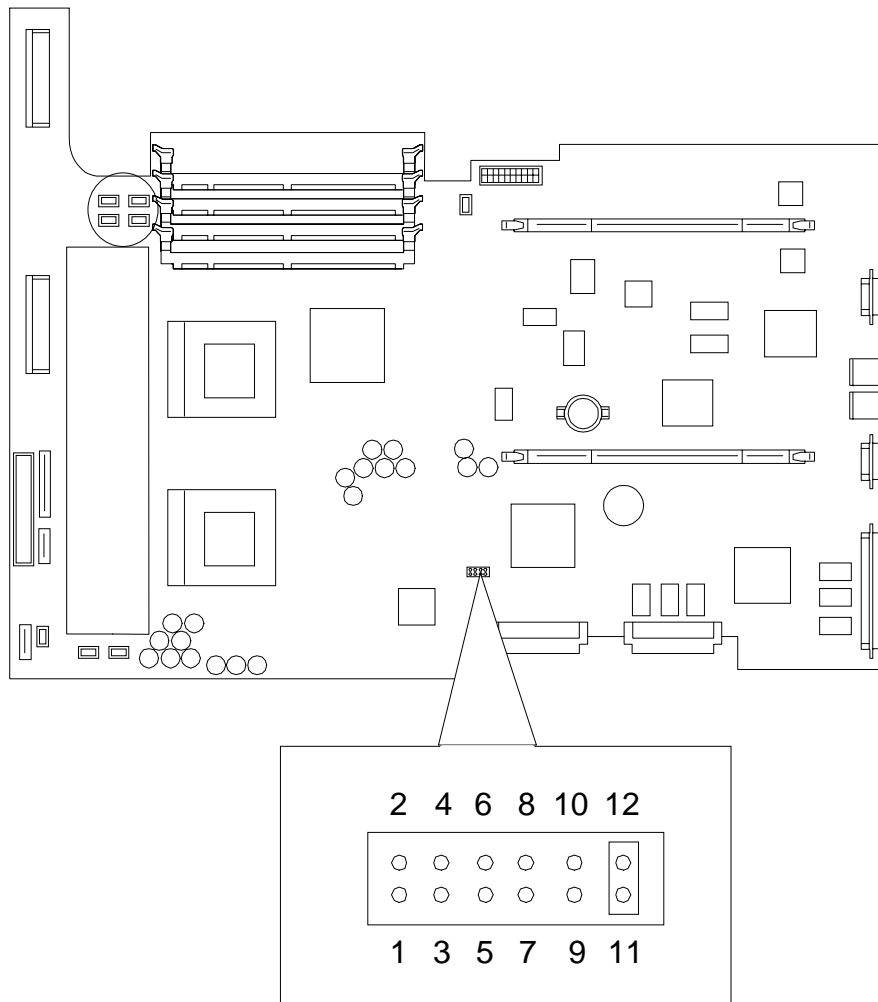

**Figure 3-1. System Board Jumpers**

---

**Table 3-3. System Board Jumper Summary**

Jumper	Function	Jumper On/Off	Description
1 - 2	CMOS clear	<b>Off, Protect</b>	Preserves the contents of CMOS.
		On, Erase	Clears CMOS.
3 - 4	Password disable	<b>Off, Enable</b>	Enables password protection.
		On, Disable	Disables the password.
5 - 6	Reserved	<b>Off, Not Used</b>	Required. Do Not Change.
7 - 8	Reserved	<b>Off, Not Used</b>	Required. Do Not Change.
9 - 10	Reserved	<b>Off, Not Used</b>	Required. Do Not Change.
11 - 12	Spare	Off, Not Used	
		<b>On, Spare</b>	Provides a spare jumper.

## **Moving System Board Jumpers**



### **CAUTION**

Before doing the procedures in this section, make sure that your system is powered off and unplug the AC power cords from the back of the chassis. Failure to disconnect power before moving the jumpers can result in personal injury and equipment damage.

Observe static precautions. Use an antistatic wrist strap.

---

To configure the system board options:

1. Power off the system and remove the front bezel and top cover as described in Chapter 4 of this guide.
2. Check to ensure the power cord is removed from the back of the server.
3. Locate the position of the jumpers on the system board you are changing. To change a jumper setting, use a pair of needle-nose pliers or your fingers to remove the jumper from its current location. Position the jumper over the two pins for the desired setting and press it onto the pins. Be careful not to bend the pins. Refer the System Board Summary table for system board jumper settings.
4. Install top cover and the power cord and power up the system. Install the front bezel.

---

## ***Clearing and Changing the Passwords***

To clear and change the passwords:

1. Power off the system and remove the front bezel and top cover as described in Chapter 4 of this guide. Remove the power cord from the server.
2. Remove the spare jumper from position 11 - 12 on jumper block.
3. Reinstall the spare jumper on position 3 - 4 (Password Disable) of the jumper block. Refer to the previous illustration “System Board Jumpers” to find the location of this jumper.
4. Connect the power cord, power on the system and while waiting for POST to complete, press the F2 key to enter BIOS setup. This automatically clears all passwords, provided you exit and save the BIOS setup.
5. Power off the system and remove the power cord.
6. Remove the Password Disable jumper from pins 3-4 and store it in position 11 - 12.
7. Replace the top cover, connect the power cord and power on the system.
8. Install the front bezel.
9. To specify a new password run the BIOS Setup Utility as described earlier in this chapter.

## ***Clearing CMOS***

Clear CMOS as follows.

1. Power off the system and remove the front bezel and top cover as described in Chapter 4 of this guide. Remove the power cord from the server.
2. Remove the spare jumper from position 11 - 12 on jumper block.
3. Reinstall the spare jumper on position 1 - 2 (CMOS Clear) of the jumper block. Refer to the previous illustration “System Board Jumpers” to find the location of this jumper.
4. Connect the power cord, power on the system and after POST completes, power down the system and unplug the power cord.
5. Remove the jumper from pins 1-2 and store the jumper on pins 11-12.
6. Replace the top cover, connect the power cord and power on the system.
7. Install the front bezel.
8. Press **F2** at the prompt to run the BIOS Setup utility, and select “Get Default Values” at the Exit menu.

# 4

## Upgrading Your System

- General Information
- Static Precautions
- Preparing Your System for Upgrade
- Equipment Log
- Front Bezel
- Top Covers
- Modifying the System Board
- DIMMs
- Option Boards
- Hard Disk Drives

---

## General Information

---

### **WARNING**

The DC push-button on/off switch on the front panel does not turn off the system AC power. Also, +5vdc is present on the system board whenever the AC power cord is connected between the system and an AC outlet. Before doing the procedures in this manual, make sure that your system is powered off and unplug the AC power cord from the back of the chassis. Failure to disconnect power before opening your system can result in personal injury and equipment damage.

---

### **CAUTION**


The server management logic on your system board monitors and logs system voltage changes. When powering down your system you may experience a 1–5 second delay from the time you press the push-button power on/off switch on the front panel and your system powering down. This is normal system operation and is required by the server management logic.

---

### **CAUTION**

Operating your system with the top covers removed can damage your system components. For proper cooling and airflow, always replace the top covers before powering on your system.

---

 **Note:** Your system error log will be lost, if your system AC power source is off or disconnected.

---

Hard disk drives are installed or removed at the front of the server. Follow the procedures in this chapter to open the front bezel to gain access to the hard disk drives. The rear top cover must be removed when installing all other server options.

Contact your sales representative or dealer for a list of approved optional peripheral devices.

---

## ***Static Precautions***

An electrostatic discharge (ESD) can damage disk drives, option boards, and other components. You can provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground when handling system components.

Electronic devices can be easily damaged by static electricity. To prevent damage, keep them in their protective packaging when they are not installed in your system.

## ***Preparing Your System for Upgrade***

Depending on the upgrade, you will need one or more of the following tools:

- Phillips screwdriver (#1 bit and #2 bit)
- Flat-head screwdriver
- Small needle nose pliers
- Pen or pencil
- ESD workstation or antistatic wrist strap (recommended)

## ***Equipment Log***

Use the equipment log form located at the end of this manual to record the model and serial number of your system, all installed options, and any other pertinent information specific to your system. You will need this information when configuring your system.

---

# Front Bezel

## Removing the Front Bezel

Refer to Figure 4-1 and remove the front bezel of the server as follows:

1. Terminate all applications.
2. Open the front door of the system rack.
3. If the front bezel is locked, unlock it by inserting the key and turning the key to the unlocked position.
4. Grasp the indentation located on the right edge of the front door and pull the bezel towards you to open it.
5. Slide the front bezel left to disengage the mounting tabs and remove the front bezel from the chassis.
6. Press the power ON/OFF button (Figure 2-12, D) to power down the server.
7. Remove the two screws securing the server to the front of the system rack.


---

### **WARNING**

To reduce the risk of personal injury, be careful when pressing the component rail release latches and sliding the component in or out of the rack. The slide rails could pinch your fingertips.

---

8. Pull the server out of the rack until the component rail release latches engage. The component rail release latches on either side of the server lock the server onto the slide rails.

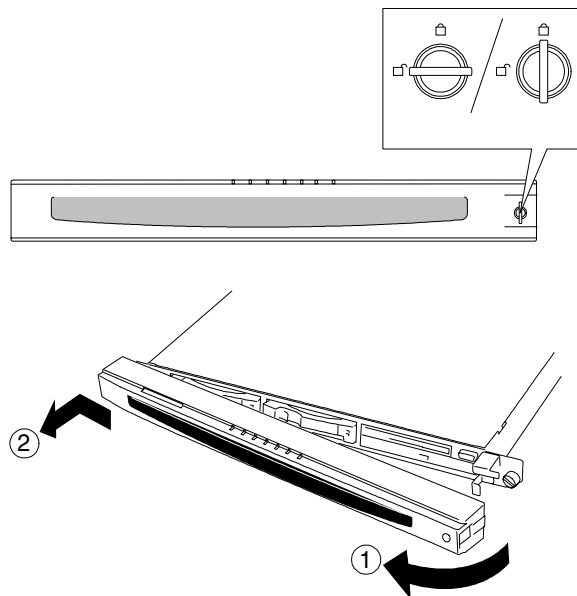


**Figure 4-1. Removing the Front Bezel**

---

## Replacing the Front Bezel

1. Position the front bezel so the mounting tabs of the front bezel are aligned with their mounting holes on the front of the system. See Figure 4-2.
2. Slide the bezel right until the bezel snaps into place.

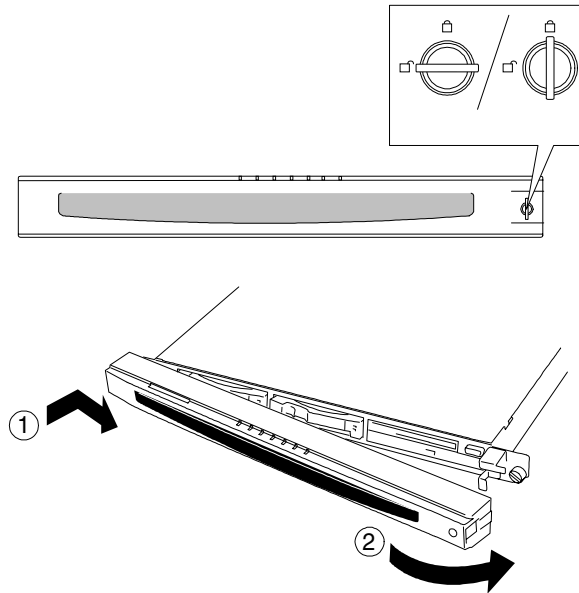

**Figure 4-2. Closing the Front Bezel**

## Top Covers

The server includes front and a rear top covers. To install options into the system board of the server, you must remove the rear top cover. When replacing the system board, front LED board, SCSI LED board, Slim FDD or slim CD-ROM drive, the front top cover must be removed.



### CAUTION

For proper cooling and airflow, do not operate the system with the top covers removed. Always replace the covers before powering on the system.

---



### WARNING

If you are removing the top covers after the system is set up, you must first power off the system and all external devices and then **Unplug** the system power cord


---

---

## ***Removing the Rear Top Cover***

To remove the rear top cover:

1. Perform all steps in “Removing the Front Bezel” described in the previous procedure.
2. Loosen the captive thumbscrew securing the top cover to the rear panel. See Figure 4-3.
3. Slide the top cover towards the rear of the server chassis until its tab fasteners unlock.
4. Lift the top cover up and away from the chassis.

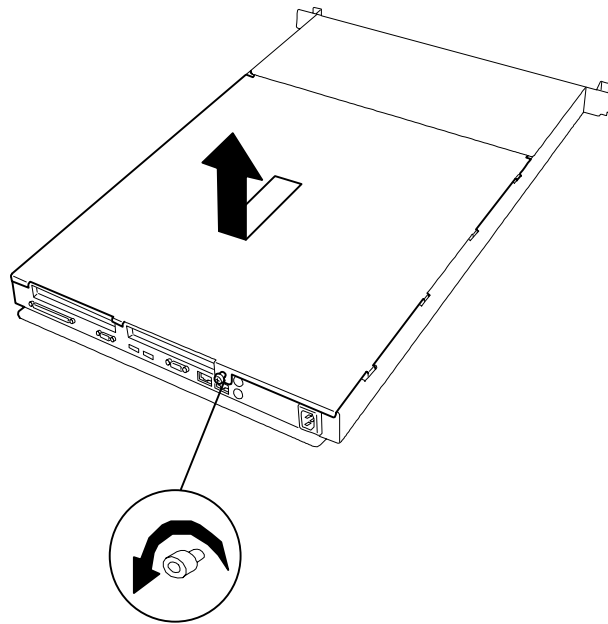


***Figure 4-3. Removing the Top Cover***

---

## Replacing the Rear Top Cover

To replace the rear top cover:

1. Position the top cover above the server and slide the cover towards the front of the server chassis until its tab fasteners lock into the chassis. See Figure 4-4.
2. Tighten the captive thumbscrew securing the top cover to the chassis.

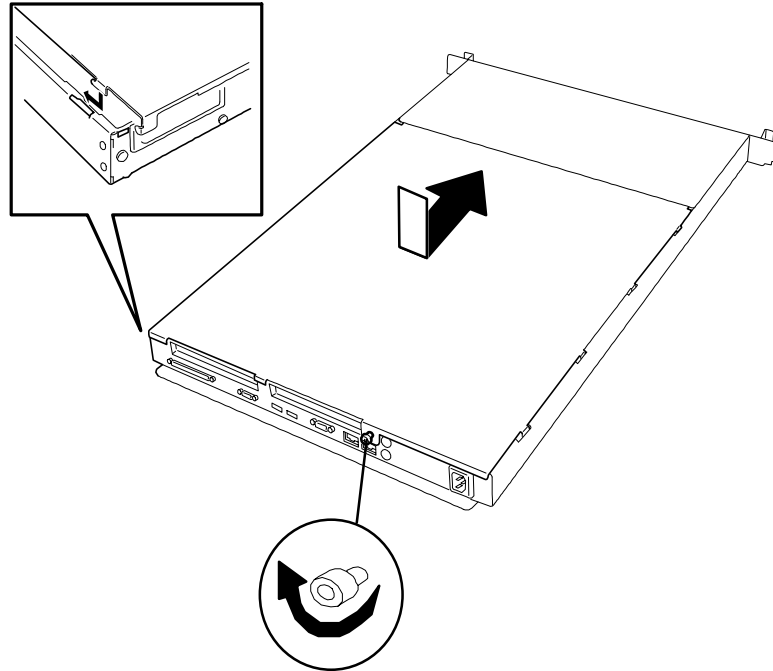

**Figure 4-4. Installing the Top Cover**

---

# Modifying the System Board

The following sections provide procedures for upgrading and configuring the system board in your system. Topics covered include:

- Replacing the real-time clock battery
- Removing and Installing a Pentium III processor
- Installing or removing DIMMs.

---

## CAUTION

Electrostatic discharge (ESD) can damage add-in boards and other components; place them on an antistatic surface. Modify the system board only at an ESD workstation. Otherwise, wear an antistatic wrist strap attached to chassis ground.

---

## Replacing the Real-time Clock Battery

You may need to replace the real-time clock battery because of its life span. The battery (Vendor Part #CR2032) is a commodity part available through many vendors. Notice the plus (+) sign on the battery. This sign will assist you in correctly positioning the battery on the system board.

---

## CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by manufacturer. Dispose of lithium batteries as required by local ordinance or as normal waste if no local ordinance exists. Do not expose the component to excessive heat or fire. Keep all batteries away from children

---

---

## CAUTION

Observe static precautions. Use an antistatic wrist strap.

---


---

## WARNING

If you are removing the top covers after the system is set up, you must first power off the system and all external devices and then **Unplug** the system power cord

---

1. Remove the system front bezel and rear top cover as described earlier in this chapter.
2. Ensure the server is powered down and the AC cable is disconnected.
3. If present, remove the protective plastic cover located over the top of the lithium battery.
4. Insert the tip of a small flat-bladed screwdriver, or equivalent, under the plastic tab on the San-in plastic retainer. See Figure 4-5.
5. Gently push down on the screwdriver to lift the battery.
6. Remove the battery from its socket.
7. Dispose of the battery according to local ordinance.
8. Remove the new lithium battery from its package, and, being careful to observe the correct polarity, insert it in the battery socket with the + sign facing up.
9. If applicable, reinstall the plastic cover on the lithium battery socket.
10. Replace the rear top cover.
11. Plug in the server power cord, and power on the server.
12. Run the BIOS Setup to restore the configuration settings to the real-time clock.
13. Slide the server into the system rack and secure it to the rack.
14. Install and secure the front bezel following procedures described earlier in this chapter.

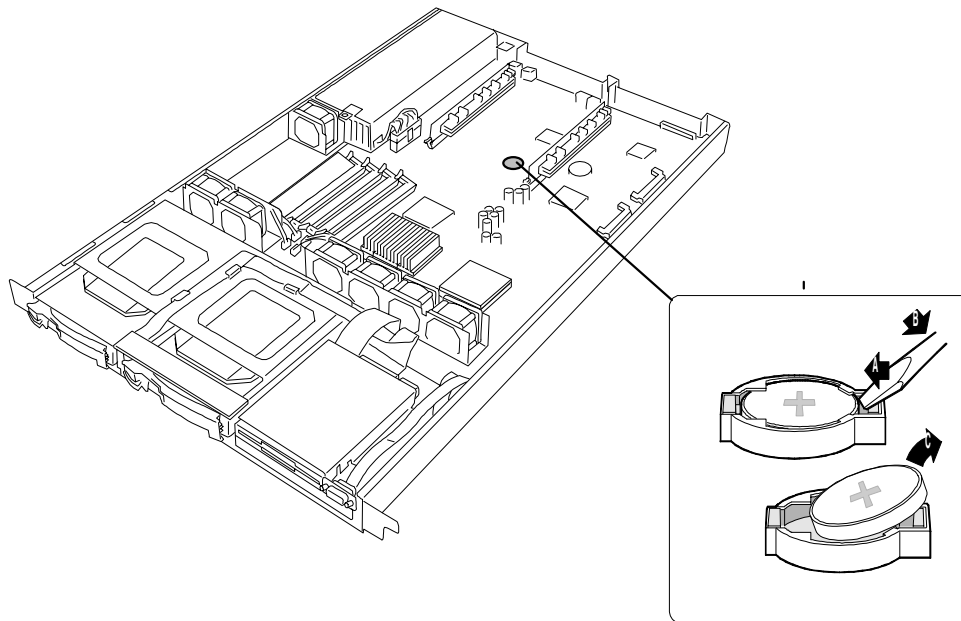

**Figure 4-5. Replacing the Real-Time Clock Battery**

---

## Removing and Installing a Pentium III Processor


This subsection provides the procedures for removing and installing a Pentium III processor in your system. The system board includes two Pentium III ZIF sockets. The primary processor socket with a processor installed is shown in Figure 4-6, A; the secondary processor socket with a terminator installed is shown in Figure 4-6, B.

---

### CAUTION

Electrostatic discharge (ESD) can damage components; place them on an antistatic surface. Modify the system board using an antistatic wrist strap attached to chassis ground.

---

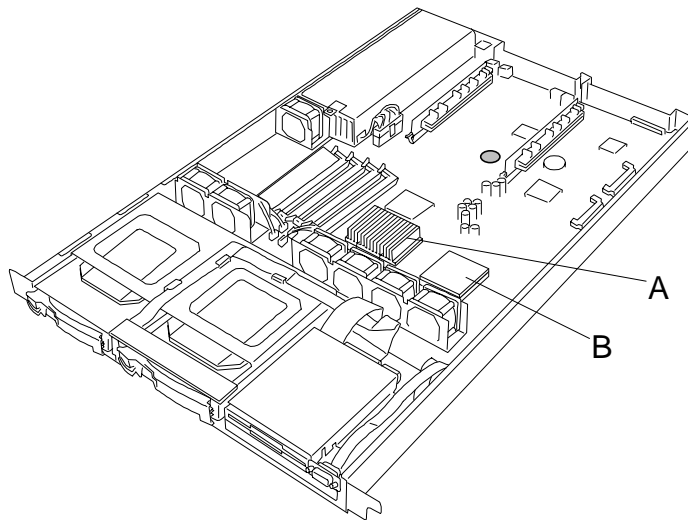

**Figure 4-6. Removing and Installing a Pentium III Processor**

---

### Removing a Processor

---

#### WARNING

If the system has been running, any processor and heat sink already installed on the board will be hot. To avoid the possibility of a burn, let the components cool for 10 minutes before continuing with the procedures described here

---


1. Remove the system front bezel and rear top cover as described earlier in this chapter.
2. Ensure the server is powered down and the AC cable is disconnected.

- 
- Using a flat bladed screwdriver, press down on the heat sink clip retention latch until it springs outward from the fastener tab on the base of the ZIF socket of the processor that you are removing. See Figure 4-7, A.

**!** **CAUTION**


When performing the remaining steps in this procedure, do not touch the thermal tape located between the heat sink and the processor as the tape is easily damaged.

- Remove the heat sink clip by pulling it up and over the center of the heat sink and detach the small end of the clip from the tab on the base of the ZIF socket, as shown in Figure 4-7, B. Remove the heat sink.

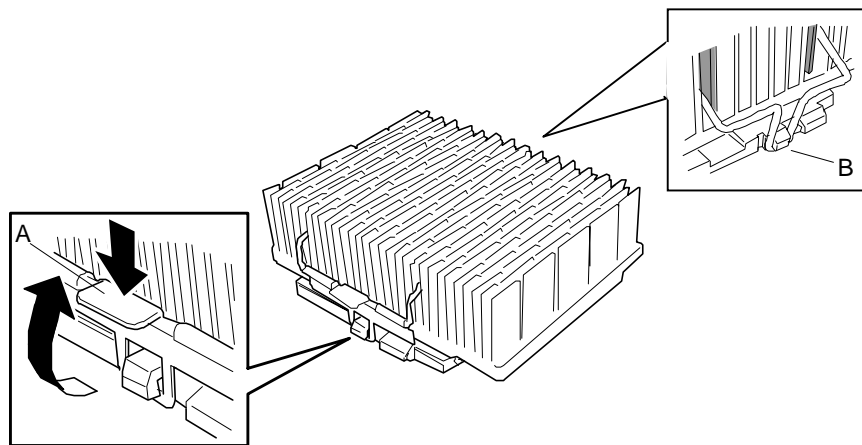

**Figure 4-7. Removing the Heat Sink Clip and Heat Sink**

- Raise the ZIF socket lever to the up position. See Figure 4-8.

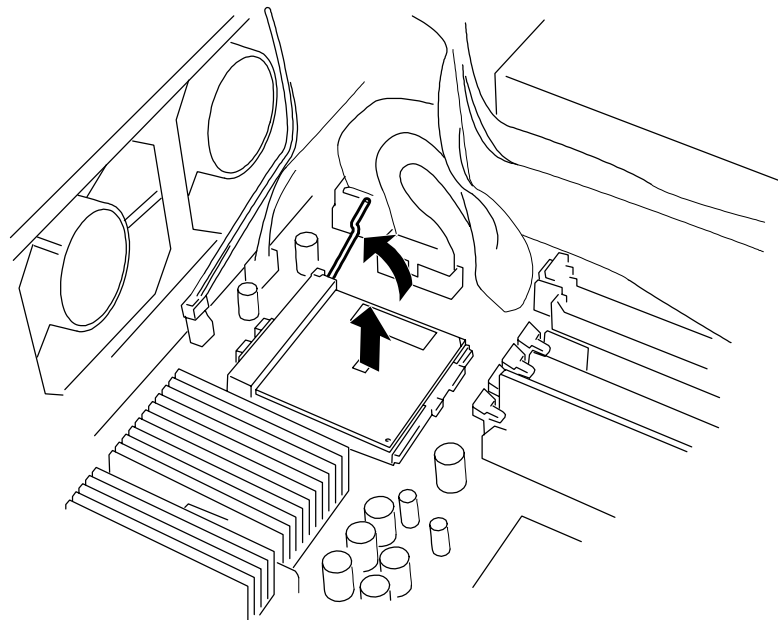

**Figure 4-8. Removing the Processor**

- 
6. Grasp the opposite sides of the processor, apply equal upward force on each side and rock it from side to side until it releases.
  7. Place the processor into an anti-static container.

### ***Installing a Processor***

---

 **CAUTION**

Observe static precautions. Use an antistatic wrist strap. Hold the processor only by its edges.

---


---


 **CAUTION**

Installing a second processor that is of a different type than the first processor will result in system damage. Do not touch or bend the processor's exposed pins.

---


---

 **Note:** If you are adding a second processor to your system, you must remove the terminator from the secondary processor socket.

 **Note:** If your system has one processor and you are replacing it, leave the terminator board intact in the empty secondary processor connector. Remove the processor you want to replace.


---

1. Remove the system front bezel and rear top cover as described earlier in this chapter.
2. Ensure the server is powered down and the AC cable is disconnected.
3. Raise the ZIF socket lever to the up position. See Figure 4-8.
4. If you are adding a second processor into your system, remove the terminator from the secondary processor socket. The terminator is shown in Figure 4-6, B.
5. Position the processor over its ZIF socket so the processor pins align with the socket holes. Note that one corner of the processor has three pins that should be positioned over the corner of the socket that has the three matching pin holes. See Figure 4-9, A.

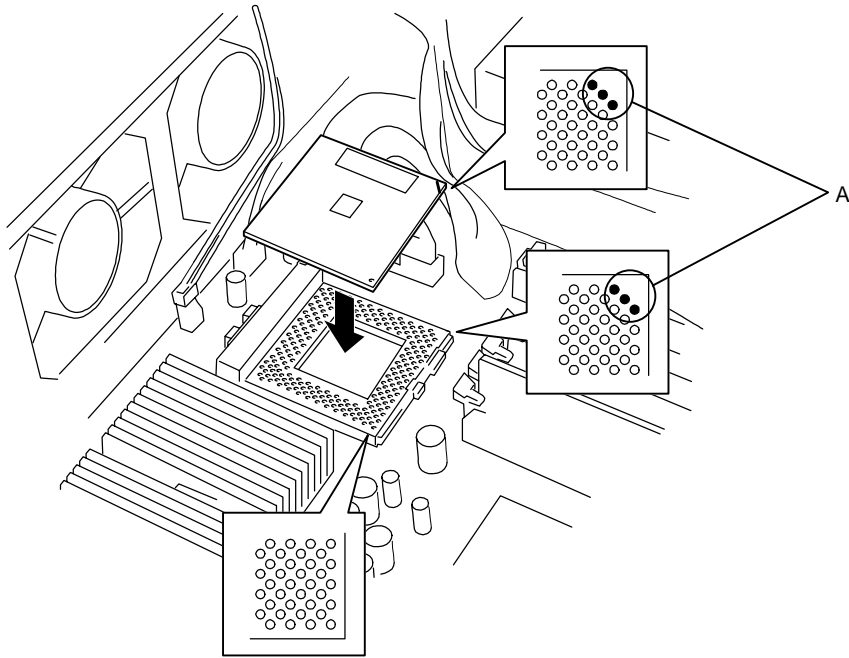

**Figure 4-9. Positioning the Processor**

6. Insert the processor pins into the socket. Apply pressure equally over the top surface of the processor until it seats in the socket. The processor should easily fit, do not force the processor into the socket.
7. Lower the ZIF socket lever into the locked position. See Figure 4-10.

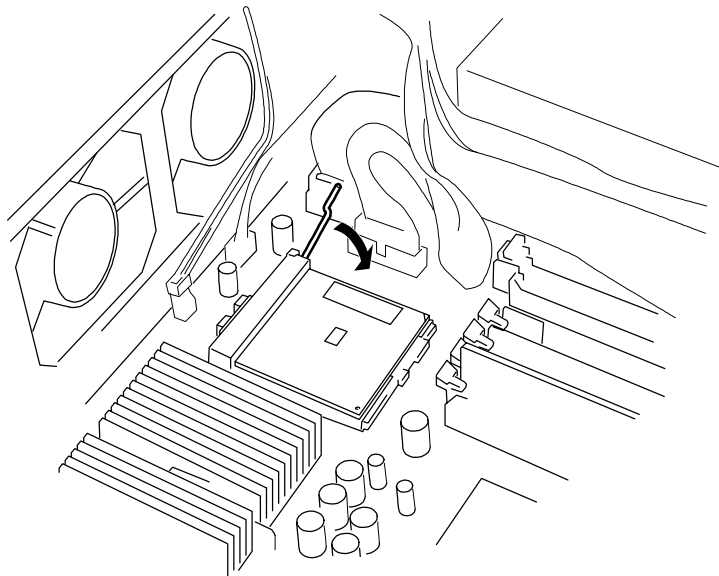

**Figure 4-10. Installing the Processor**


---

**!** **CAUTION**

The thermal pad is very delicate and tears easily. Handle with extreme care. Perform the next two steps exactly as described to ensure proper heat transfer from the processor to the heat sink.

---


8. One side of the thermal pad is shiny metallic foil. The other side of the thermal pad is covered with a clear plastic liner. Carefully peel the liner away from the pad. The clear liner is not used and may be discarded.
9. Position the thermal pad on top of the processor with the shiny side facing down and the yellow sticky side of the pad facing up. Ensure the pad is positioned over the center of the processor as shown in Figure 4-11.

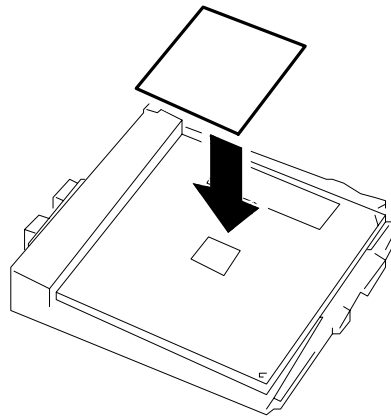

**Figure 4-11. Installing Thermal Pad**

10. Ensure the small end of the heat sink clip is positioned into the heat sink as far as it will go.

---

 **Note:** The heat sink included with this upgrade may not resemble the heat sink on the processor in your system. Several types of heat sinks are used with the Pentium III processor.

---



---

**!** **CAUTION**

When performing the next three steps, be sure the heat sink is held firmly in position. If the heat sink should slide across the top of the processor, the thermal pad may be damaged.


---

11. Attach the small end of the heat sink clip to the tab located on the base of the ZIF socket. See Figure 4-12. Gently lower the heat sink onto the processor, being careful not to move the heat sink from side to side.

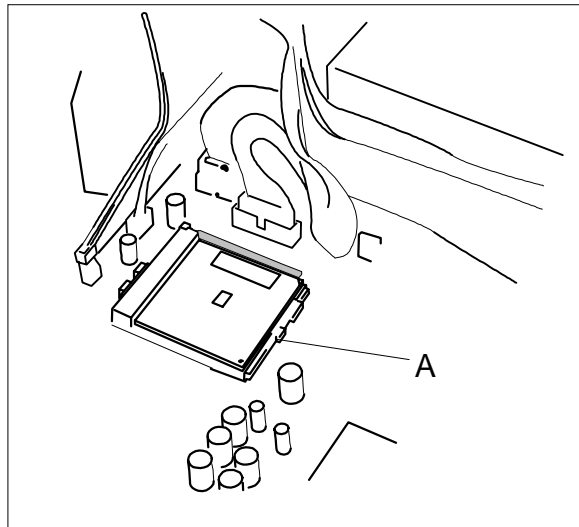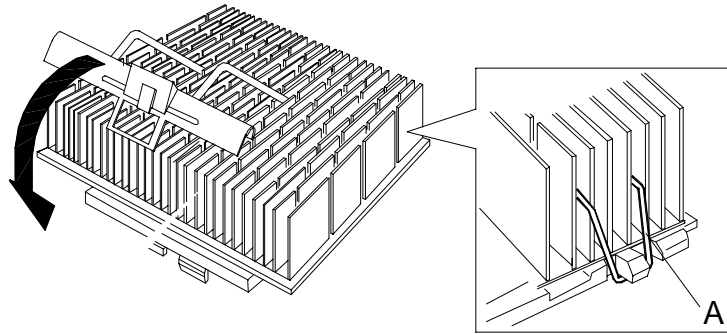

**Figure 4-12 . Positioning the Heat Sink Clip**

12. Using a small flat blade screwdriver, press down on the heat sink clip retention latch and hook it under the fastener tab on the base of the ZIF socket, as shown in Figure 4-13, A. The heat sink clip is now secured to the fastener tab of the ZIF socket.

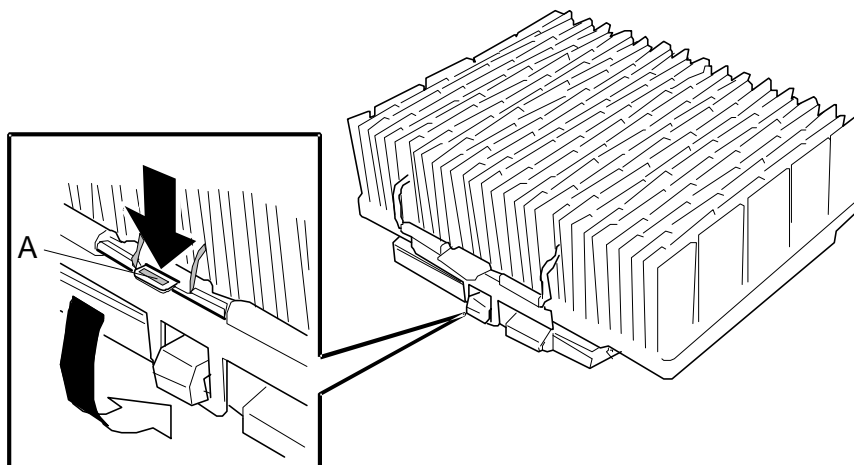


**Figure 4-13. Installing Heat Sink Clip**

13. Record the processor in the equipment log.

---

# DIMMs

The system board contains four DIMM sockets labeled 1 through 4 (Figure 4-14). Each socket can hold a single 72-bit DIMM module with 64MB, 128MB, 256MB, 512MB, or 1GB of memory. When all four sockets are populated, the system board supports a maximum of 4 GB of memory with 1GB DIMMs. A DIMM will always be installed in socket 1. When you install additional DIMMs, you must start with the first empty socket next to the DIMMs already installed. When you remove DIMMs, you must start with the highest number occupied DIMM socket on the system board.

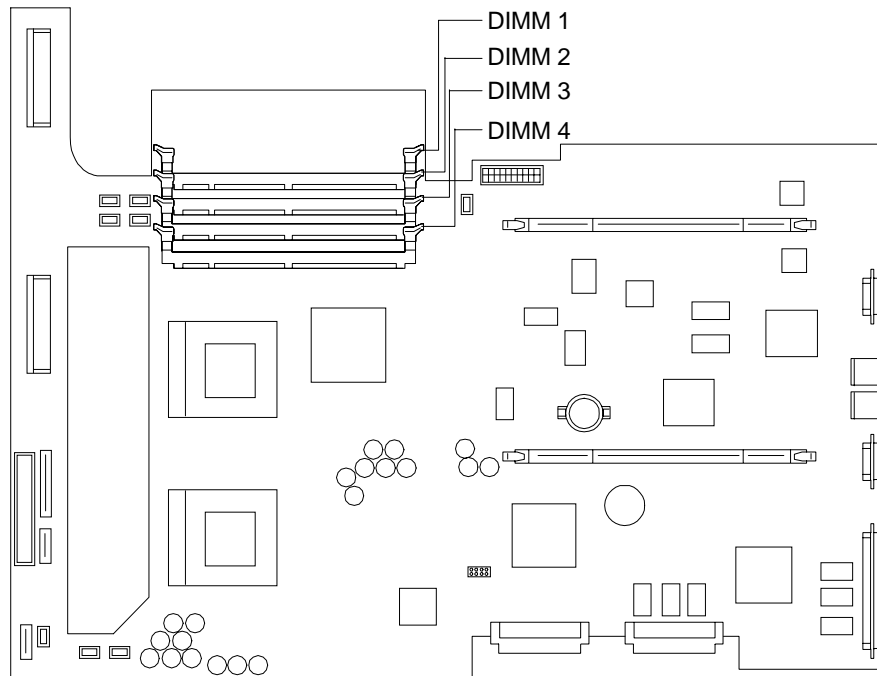

**Figure 4-14. DIMM Locations**

## Installing DIMMs

1. Remove the system front bezel and rear top cover as described earlier in this chapter.
2. Ensure the server is powered down and the AC cable is disconnected.


---

**CAUTION**

Observe static precautions. Use an antistatic wrist strap.  
Hold DIMMs only by their edges.


---

3. Gently open the plastic ejector levers on the socket by pushing them outward from the socket. See Figure 4-15

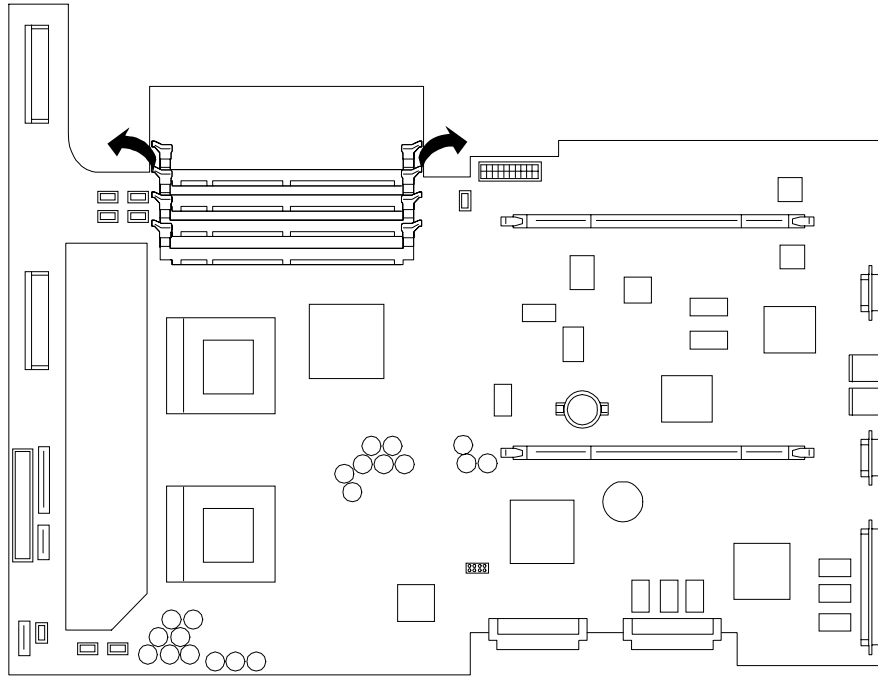

**Figure 4-15. Opening the Ejector Levers**

4. Holding the DIMM module only by the edges, remove it from its antistatic package.
5. Position the DIMM so that the two notches in the bottom edge of the DIMM align with the keyed socket. See Figure 4-16.

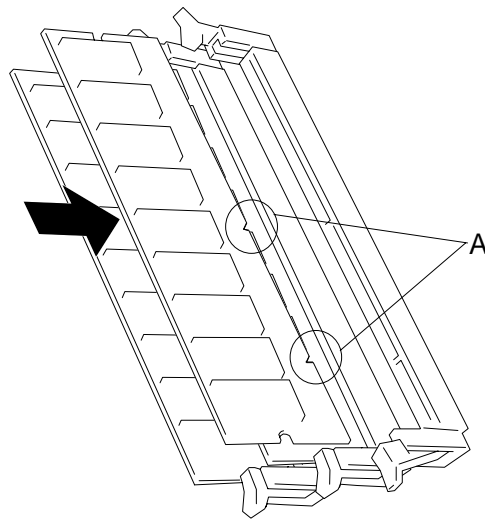

**Figure 4-16. Inserting Memory DIMMs**

6. Insert the bottom edge of the DIMM into the socket, and press down firmly on the DIMM until it seats correctly.
7. Gently push the plastic ejector levers on the socket ends to the upright position.
8. Repeat the steps to install each additional DIMM.

- 
9. Replace the rear top cover.
  10. Plug in the server power cord, and power on the server.
  11. Slide the server into the system rack and secure it to the rack.
  12. Install and secure the front bezel following procedures described earlier in this chapter.

### ***Removing DIMMs***




Use extreme care when removing a DIMM. Too much pressure can damage the socket slot. Apply only enough pressure on the plastic ejector levers to release the DIMM.

---

1. Remove the system front bezel and rear top cover as described earlier in this chapter.
2. Ensure the server is powered down and the AC cable is disconnected.
3. Gently push the plastic ejector levers out and down to eject a DIMM from its socket. See Figure 4-15.
4. Hold the DIMM only by its edges, being careful not to touch its components or gold edge connectors. Carefully lift it away from the socket, and store it in an antistatic package.
5. Repeat the above steps to remove the remaining DIMMs.
6. Replace the rear top cover.
7. Plug in the server power cord, and power on the server.
8. Slide the server into the system rack and secure it to the rack.
9. Install and secure the front bezel following procedures described earlier in this chapter.

### ***Option Boards***

This section describes how to install and remove PCI option boards. PCI option boards plug into PCI riser cards which are inserted into the system board. Your system includes two PCI riser cards as shown in Figure 4-17.

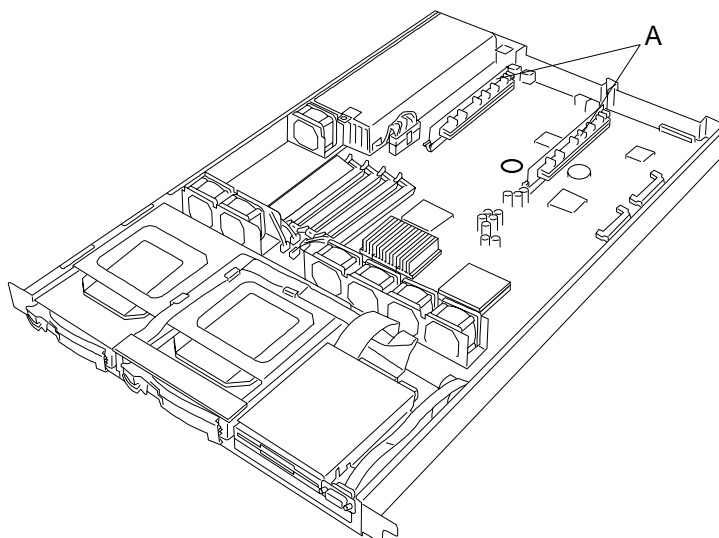

**Figure 4-17. PCI Riser Card Locations**

### **Installing a PCI Option Board**




#### **CAUTION**

Observe static precautions. Use an antistatic wrist strap.


---

1. Remove the system front bezel and rear top cover as described earlier in this chapter.
2. Ensure the server is powered down and the AC cable is disconnected.
3. Locate the option slot in the rear panel of your server where you are installing the PCI board. Remove and save the expansion slot PCI bracket assembly. See Figure 4-18.

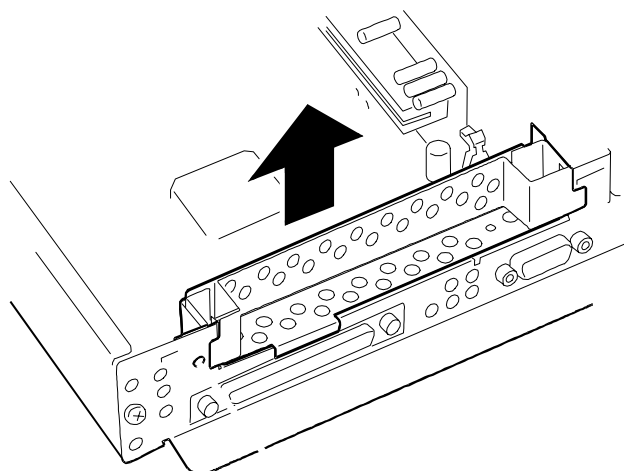


**Figure 4-18. Removing the PCI Bracket Assembly**

4. Remove the expansion slot cover from the PCI bracket assembly by removing the attachment screw and sliding the cover up from the bracket assembly. See Figure 4-19. Save the slot cover.

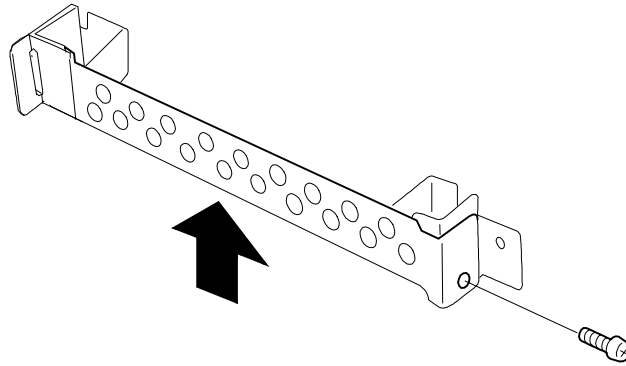


**Figure 4-19. Removing the Expansion Slot Cover**

5. Remove the option board from its protective wrapper, holding the board only by the edges. Do not touch the board components or the gold connectors.
6. Record the option board serial number in the equipment log.
7. Set any board jumpers. Refer to the documentation accompanying the option board.
8. Attach the PCI bracket to the option board and secure it with the screw removed in Step 6. See Figure 4-20. Set the option board aside on an anti-static surface.

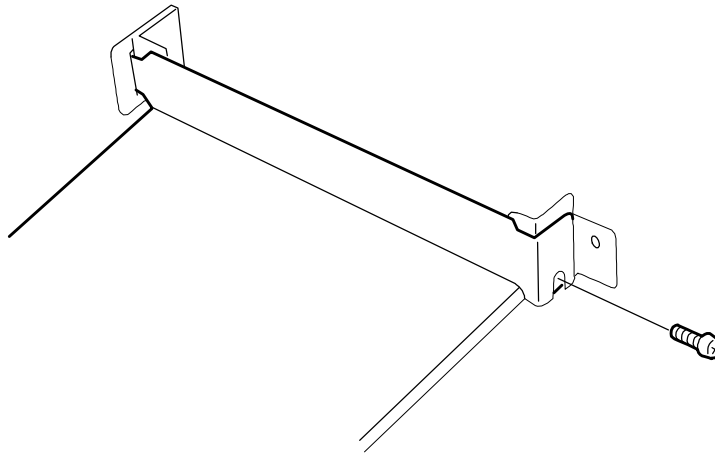


**Figure 4-20. Attaching the PCI Bracket to the Option Board**

9. Gently push the plastic ejector levers out and down to eject the PCI riser card from its socket on the system board. See Figure 4-21. The locations of the two PCI riser cards on the system board are shown in Figure 4-17.

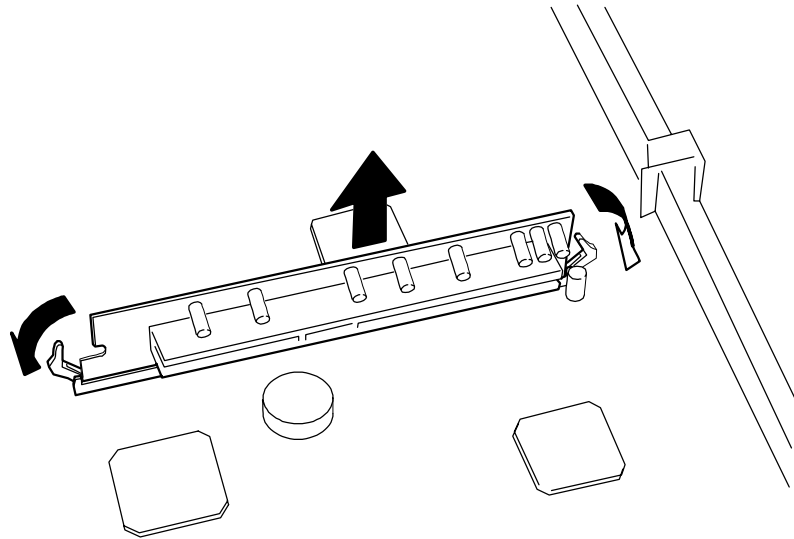


**Figure 4-21. Removing the PCI Riser Card**

- 10.** Hold the PCI riser card only by its edges, being careful not to touch its components or gold edge connectors. Carefully lift it away from the socket.
- 11.** Slide the PCI riser card into protective sheath to protect it from electrostatic discharge (ESD) while performing the next few steps. See Figure 4-22, A.

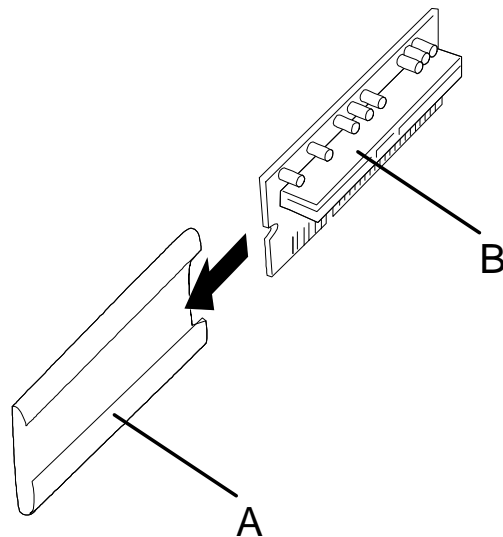


**Figure 4-22. Installing the Anti-static Sheath**

- 12.** The PCI riser card may include a dust cover covering the option board connector (Figure 4-22, B). Remove the dust cover if one is installed.
- 13.** Grasp the option board by its edges and insert it into the connector on the PCI riser card. See Figure 4-23.

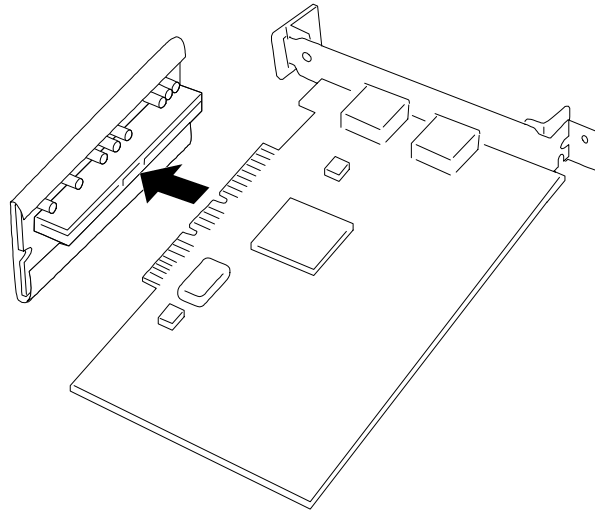


**Figure 4-23. Inserting the Option Board into the PCI Riser Card Connector**

14. Remove the protective sheath from the PCI riser card, if installed in Step 11.
15. Position the PCI bracket within the opening in the rear panel ensuring the tab on the bracket extends over the rear panel as shown in Figure 4-24, A. The edges of the PCI bracket slide into slots on the rear panel as shown in Figure 4-24, B.

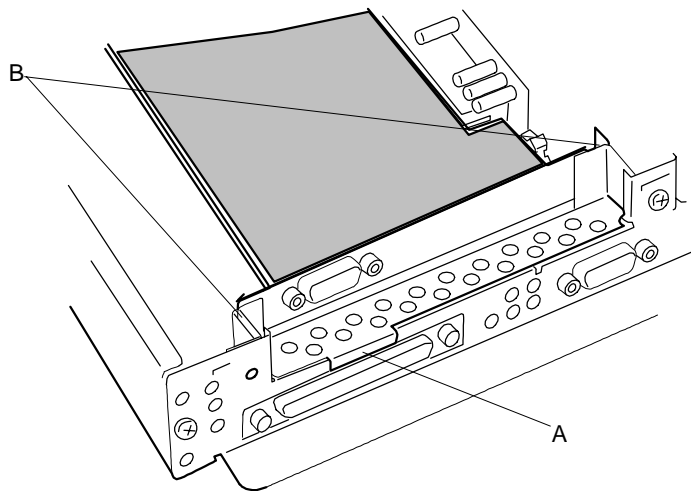

**Figure 4-24. Installing a PCI Option Board**

16. Ensure the riser card socket plastic ejector levers are positioned outward as shown in Figure 4-21.
17. Grasp each side of the PCI riser card and exert a downward pressure on the card at the points shown until the board is seated in its connector on the system board. See Figure 4-25.

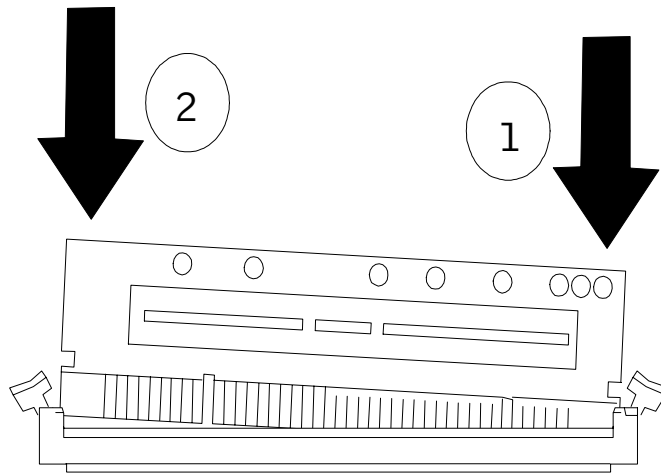


**Figure 4-25. Installing the PCI Riser Card**

- 18.** Connect any external cables (if they are needed) to all installed option board.
- 19.** Replace the rear top cover.
- 20.** Plug in the server power cord, and power on the server.
- 21.** Slide the server into the system rack and secure it to the rack.
- 22.** Install and secure the front bezel following procedures described earlier in this chapter.


### **Removing a PCI Option Board**

---

 **Note:** Expansion slot covers must be installed on all vacant slots to maintain the electromagnetic emissions characteristics of the system and to assure proper cooling of the system components.


---

- 1.** Remove the system front bezel and rear top cover as described earlier in this chapter.
- 2.** Ensure the server is powered down and the AC cable is disconnected.
- 3.** Disconnect any cables attached to the option board you are removing.
- 4.** At the server rear panel, locate the option board you are removing. See Figure 4-26.

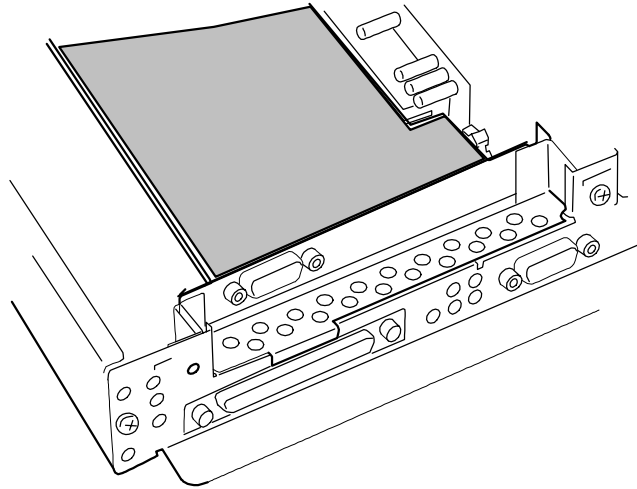


**Figure 4-26. Removing the PCI Option Board**

5. Gently push the plastic ejector levers out and down to eject the PCI riser card from its socket on the system board. See Figure 4-27. The locations of the two PCI riser cards on the system board are shown in Figure 4-17.

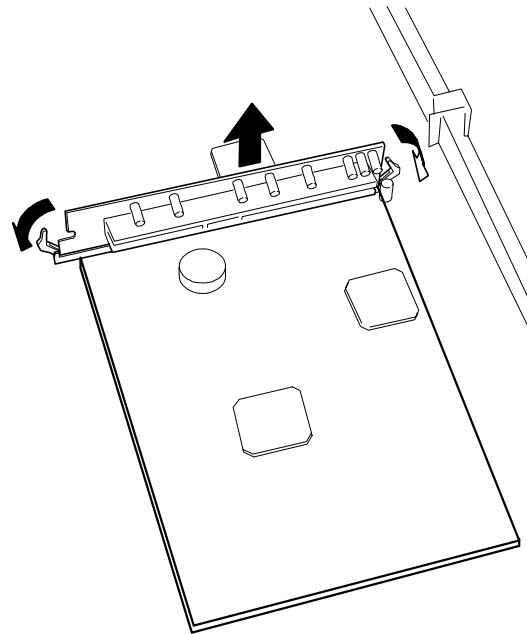

**Figure 4-27. Removing the PCI Riser Card**


6. Hold the PCI riser card only by its edges, being careful not to touch its components or gold edge connectors. Carefully lift it and the attached option board up and away from the socket.
7. Slide the PCI riser card into protective sheath to protect it from electrostatic discharge (ESD) while performing the next few steps. See Figure 4-22, A.
8. Grasp the option board by its edges and remove it from the connector on the PCI riser card. See Figure 4-28.

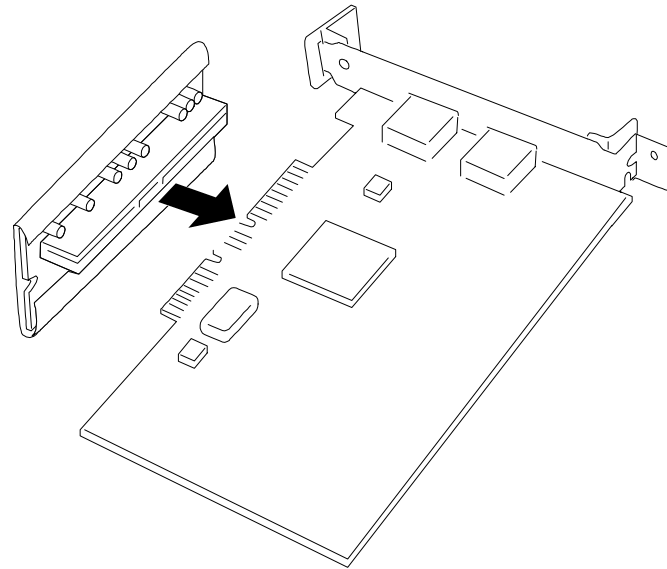

**Figure 4-28. Removing the Option Board from the PCI Riser Card Connector**


- 
9. Remove the PCI bracket from the option board by removing the attachment screw. See Figure 4-20. Set the PCI bracket aside.
  10. Holding the option board only by the edges, insert the option board into a protective wrapper.
  11. Remove the option board serial number from the equipment log.

---

 Note: If you are installing another option board, perform the applicable steps in the *Installing an Option Board* procedure, starting with Step 5; if you are not installing another option board, continue with Step 12 of this procedure.


---

12. Install the expansion slot cover onto the PCI bracket assembly by sliding the cover down into the bracket assembly. Secure with attachment screw. See Figure 4-29.

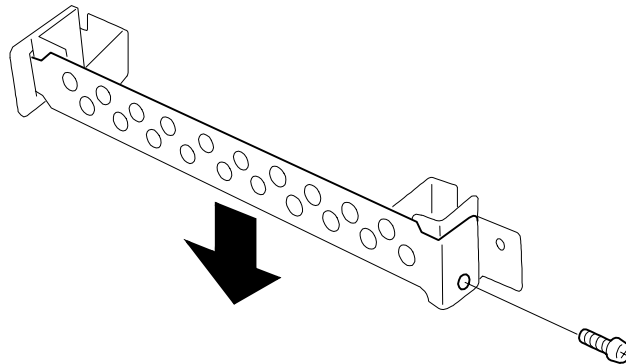


**Figure 4-29. Installing the Expansion Slot Cover to the Bracket Assembly**

13. Position the PCI bracket assembly within the opening in the rear panel ensuring the tab on the bracket extends over the rear panel as shown in Figure 4-30, A. The edges of the PCI bracket slide into slots on the rear panel as shown in Figure 4-30, B.

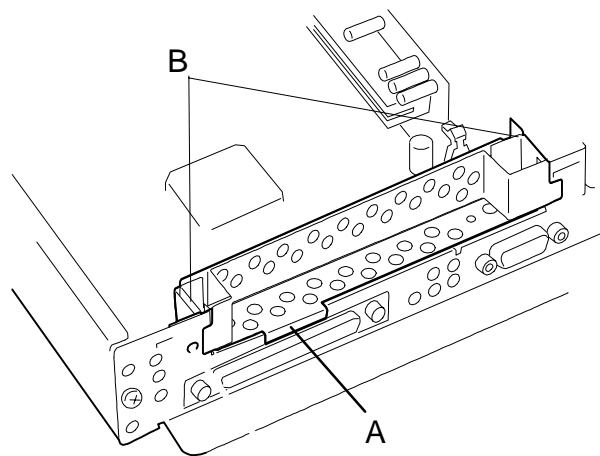

**Figure 4-30. Installing the PCI Bracket Assembly**

- 
- 14.** Remove the protective sheath from the PCI riser card, if installed in Step 7.
  - 15.** Ensure the riser card socket plastic ejector levers are positioned outward as shown in Figure 4-21.
  - 16.** Grasp each side of the PCI riser card and exert a downward pressure on the card at the points shown until the board is seated in its connector on the system board. See Figure 4-31.

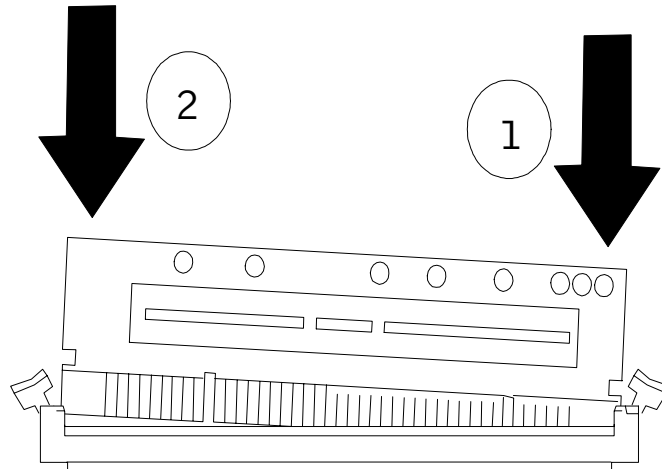

**Figure 4-31. Installing the PCI Riser Card**

- 17.** Replace the rear top cover.
- 18.** Plug in the server power cord, and power on the server.
- 19.** Slide the server into the system rack and secure it to the rack.
- 20.** Install and secure the front bezel following procedures described earlier in this chapter.

---

## Hard Disk Drives

Your system supports a variety of SCSI hard disk drives. The SCSI drives must use the industry standard 80-pin Single Connector Attachment (SCA) connector. Contact your sales representative or dealer for a list of approved devices. The internal hard disk drives are located in the SCSI disk drive bays.


If you are adding or removing a SCSI hard disk device, consider the following:

---

### CAUTION

Do not hot swap a single-ended disk drive into an LVD-disk-drive only system for it may cause data corruption. The only way a single-ended disk drive can be used with an all LVD-disk-drive system is by first powering down the system, installing the single-ended disk drive, and then powering the system back up.


---

 **Note:** Installing a single-ended disk drive into an all LVD-disk-drive system causes all the drives to operate in the non-LVD mode, thereby reducing performance.

---

## SCSI ID Assignment

Your system contains a hard disk drive cage containing one SAF-TE controller and slots to hold a maximum of two hard disk drives. The hard disk SCSI bay and address assignments for drives in the drive cage are shown in Figure 4-32 and Table 4-2.

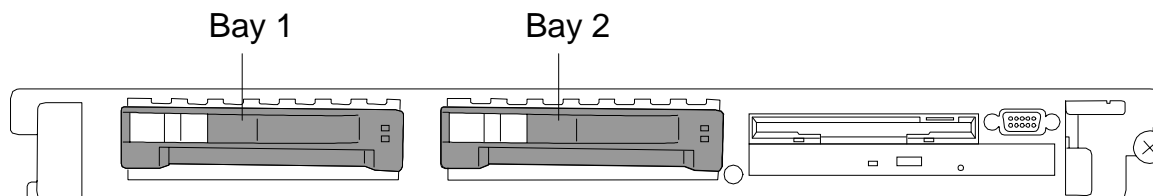

**Figure 4-32. SCSI Bay Assignments**

**Table 4-1. SCSI ID Address Assignments**


Bay	Device	SCSI ID Address
1	First Hard Disk	0
2	Second Hard Disk	1

---

## ***Installing or Swapping a Hard Disk Drive in a Hot-swap Bay***

This procedure describes installing a new drive or swapping out a faulty drive from one of the two hot-swap SCSI disk drive bays. The SCSI drives use the industry standard 80-pin Single Connector Attachment (SCA) connector. Each drive must be installed in a drive carrier.


---

 **Note:** To order a disk with a carrier, contact your sales representative or dealer.

---

- If installing new drives, follow an installation scheme starting with the Bay 1. Fill the bays right to left. See Figure 4-32.
- If your system includes a RAID controller, hard disk drives may be removed or installed without powering down the system; if your system is connected to a non-RAID SCSI host controller, you must power down the system before hard disk drives may be removed and installed.
- If an individual SCSI drive fault LED (amber light) is on steadily, this indicates that the drive has been flagged as faulty by the RAID host controller. Follow the procedure described in this section to remove the faulty drive and swap in a good one.

---

 **Note:** ESD can damage disk drives, boards, and other parts. This SYSTEM can withstand normal levels of environmental ESD while you are hot-swapping SCSI hard drives. However, we recommend that you do all procedures in this chapter only at an ESD workstation or provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground—any unpainted metal surface—on your system when handling parts.

---

---

### **CAUTION**

Drive manufacturers caution against moving a disk drive that is still spinning because of possible damage to the drive.

---

After you determine which drive has been flagged as faulty, the procedure is the same to swap a drive or to install one for the first time.

---

## Installing or Swapping a Hard Disk Drive

1. If your system includes a non-RAID SCSI controller, terminate all applications and remove the system front bezel as described earlier in this chapter.

---

 **CAUTION**

Observe static precautions. Use an antistatic wrist strap.

---

2. Power down the system.
3. If installing a new drive, go to Step 5. If swapping a hard disk drive, remove its carrier from the SCSI hard disk drive bay by performing the following procedures:


---

 **CAUTION**

Depending on the drive fault, the drive may be still spinning when you remove it. Follow the next steps exactly when removing drives.

---


- Grasp the handle of the hard disk carrier and unlock the lever located on the left side of the carrier handle, See Figure 4-33. The hard disk carrier will come out approximately 1/2-inch so that its handle is fully accessible.

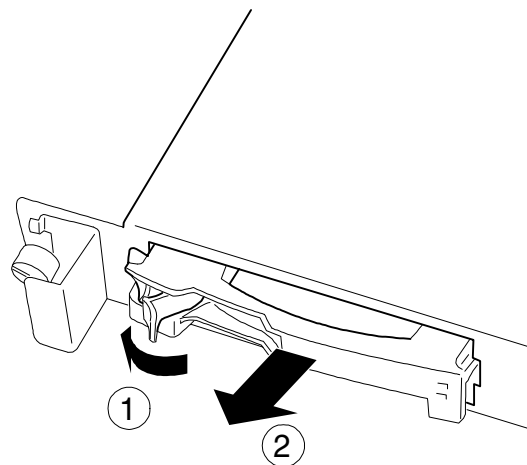

**Figure 4-33. Removing the Hard Disk Carrier from the Drive Bay**


- Pull the drive carrier out of the bay far enough to disengage the drive connector from the backplane. Wait 30 seconds until the drive spins down.
  - Remove the carrier from of the drive bay.
4. Remove the hard disk drive from the disk carrier by removing the four screws. See Figure 4-34.

5. Remove the new drive from its protective wrapper, and place on an antistatic surface.
6. Record the drive model and serial numbers in the equipment log.
7. Place the drive in the carrier, with its connector facing the rear of the carrier.
8. Secure the drive in the carrier with the four screws supplied with the disk drive. See Figure 4-34.

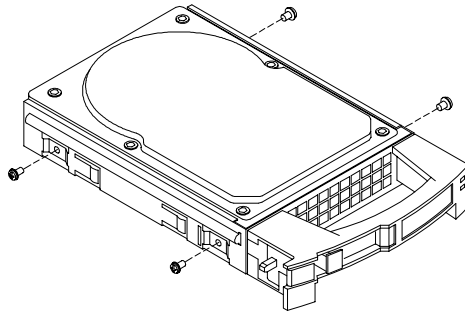

**Figure 4-34. Securing the Drive in the Carrier**

9. Install the drive carrier with drive into the bay (Figure 4-35) as follows:
  - Open the drive carrier locking lever located on the left side of the carrier.
  - Align the drive carrier with the bay guide rails.
  - Slide the drive carrier into the bay until it docks with the SCSI connector. See Figure 4-35, A.
  - Press the carrier lever into its locked position so that it is flush with the front of the carrier. See Figure 4-35, B.
10. Plug in the server power cord, and power on the server.
11. Slide the server into the system rack and secure it to the rack.
12. Install and secure the front bezel following procedures described earlier in this chapter.

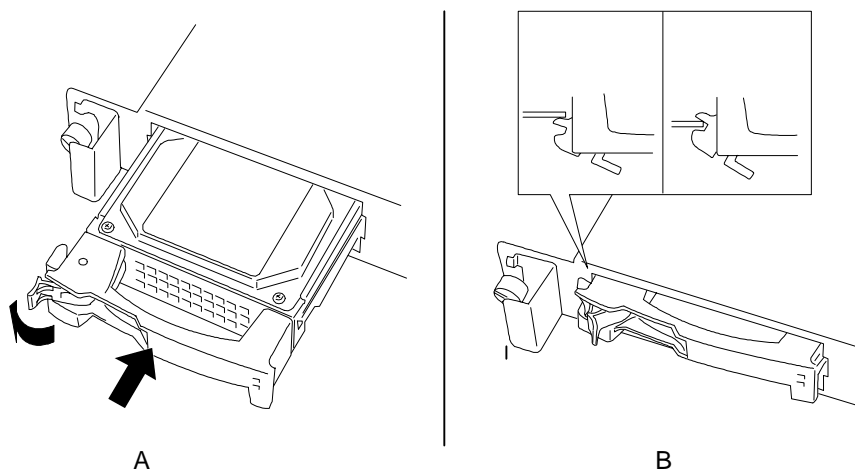

**Figure 4-35. Installing a Disk Carrier into the Bay**



# 5

## Problem Solving

- Problem Solving
- Static Precautions
- Troubleshooting Checklists
- Diagnostic Testing
- Specific Problems and Corrective Actions
- Problems with the Network
- Plug and Play Installation Tips
- BIOS User's Information
- How to Identify BIOS and BMC Revision Levels
- How to Identify System Event Log Data

---

## ***Problem Solving***

This chapter helps you identify and solve problems that may occur during system installation or while using your system. The first section of this chapter tells you how to reset your system in the event of problems. The next few sections provide troubleshooting checklists and procedural steps that help you isolate specific system problems. The last section includes BIOS, system, and disk status user information.

---

### **WARNING**

The DC push-button on/off switch on the front panel does not turn off the system AC power. Also, +5vdc is present on the system board whenever the AC power cord is connected between the system and an AC outlet. Before doing the procedures in this manual, make sure that your system is powered off and unplug the AC power cords from the back of the chassis. Failure to disconnect power before opening your system can result in personal injury and equipment damage

---

### **CAUTION**

Operating your system with the side panels removed can damage your system components. For proper cooling and airflow, always replace the side panels before powering on your system.

---

## ***Static Precautions***

An electrostatic discharge (ESD) can damage disk drives, option boards, and other components. You can provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground when handling system components.

Electronic devices can be easily damaged by static electricity. To prevent damage, keep them in their protective packaging when they are not installed in your system.

---

# Troubleshooting Checklists

The following subsections provide troubleshooting checklists for problems that occur at initial system startup, when you run new application software, and after the system hardware and software have been running correctly.

## ***Initial System Startup***

Incorrect installation or configuration usually causes problems that occur at initial system startup. Hardware failure is a less frequent cause. If you have problems during initial system startup, check the following:

- Is the system power cord properly connected to the system and plugged into a NEMA 5-15R outlet (100-120 Vac) or a NEMA 6-15R outlet (200-240 Vac)?
- Is AC power available at the wall outlet?
- Is the power on/off push-button switch on the front panel in the ON position (power on LED should be lit)?
- Are all cables correctly connected and secured?
- Are all the PCI option boards fully seated in their PCI riser card connector on the system board?
- Are all jumpers and switch settings on option boards and peripheral devices correct? If applicable, ensure that there are no conflicts; for example, two option boards sharing the same interrupt.
- Are all DIMMs fully seated and installed correctly? Refer to Chapter 4 for installation instructions?
- Are all option boards and disk drives installed correctly? Refer to the Chapter 4.
- Is the system hard disk drive properly formatted or defined?
- Is the operating system properly loaded? Refer to the operating system documentation.
- Are all drivers properly installed? For information about installing drivers, refer to your Network Operating System Configuration Guide.
- Are the configuration settings in BIOS Setup and the Adaptec SCSI Utility correct? For information about running these utilities, refer to the “Configuring Your System” chapter.

If the above items are all correct, but the problem reoccurs, refer to “Additional Troubleshooting Procedures” in this chapter.

---

## ***Running New Application Software***

Problems that occur when you run new application software are usually related to the software. Faulty equipment is much less likely, especially if other software runs correctly. If you have problems while running new application software, check the following:

- Does the system meet the minimum hardware requirements for the software? Refer to the software documentation.
- Is the software an authorized copy? Unauthorized copies often do not work. Obtain an authorized copy of the software.
- If you are running the software from a diskette, is it a good copy?
- If you are running the software from a hard disk drive, is the software correctly installed? Were all necessary procedures followed and files installed?
- If you are running the software from a CD-ROM disk is the disk scratched or dirty?
- Are the correct device drivers installed?
- Is the software correctly configured for the system?
- Are you using the software correctly?
- If other software runs correctly on the system, contact your vendor about the failing software.

If the problems persist with the software, contact the software vendor's customer service representative.


---

## ***After System Has Been Running Correctly***

Problems that occur after the system hardware and software have been running correctly often indicate equipment failure. However, many situations that are easy to correct can also cause such problems. If you have problems after the system has been running correctly, check the following:

- If you are running the software from a diskette or CD-ROM, try a new copy of the software.
- If you are running the software from a hard disk drive, try running it from a floppy. If the software runs correctly, there may be a problem with the copy on the hard disk. Reinstall the software on the hard disk drive and try running it again. Make sure all the necessary files are installed.
- If the problem recurs, you may need to reformat the hard disk drive. The hard disk drive, the drive controller, or the system board may be defective.
- If the problems are intermittent, there may be a loose cable, dirt in the keyboard (if keyboard input is incorrect), a marginal power supply, or other random component failures.
- If you suspect that a transient voltage spike, power outage, or brownout might have occurred, reload the software and try running it again. Symptoms of voltage spikes include a flickering video display, unexpected system reboots, and the system not responding to user commands.

---

 **Note:** Voltage spikes can corrupt or destroy data files on the drive. If you are experiencing voltage spikes on the power line, install a surge suppresser between the power outlet and the system power cord.

---

If the problem recurs after you have checked and corrected all of the above items, refer to “Diagnostic Testing” in this chapter.

---

# Diagnostic Testing

This section provides a more detailed approach to diagnostic testing and identification of a problem and locating its source.

## Error Checking

Each time you turn on the system, POST (Power-On-Self-Test) runs automatically and checks the system boards, processors, memory, keyboard, and most installed peripheral devices.

If POST finds an error, it displays an error message. Refer to the *Error Message* section in this chapter for an explanation of each error message.

## Troubleshooting Guide


Use the following troubleshooting procedures to help you identify a problem. These general procedures lead you through the following:

- Preparing the system for diagnostic testing
- Monitoring POST while it is running
- Verifying proper operation of key system LEDs
- Confirming loading of the operating system.

### Preparing the System for Diagnostic Testing

To prepare the system for diagnostic testing, perform the following:

---

 **Note:** Before disconnecting any peripheral cables from the system, turn off the system and any external peripheral devices. Failure to do so can cause permanent damage to the system and/or the peripheral devices.

---

1. Turn off the system and all external peripheral devices. Disconnect all devices from the system except the keyboard and video monitor.
2. Make sure the system power cord is plugged into a properly grounded AC outlet.
3. Make sure your video display monitor and keyboard are correctly connected to the system. Turn on the video monitor. Set its brightness and contrast controls to at least two-thirds of their maximum ranges (refer to the documentation supplied with your video display monitor).
4. If the operating system normally loads from the hard disk drive, make sure there is no diskette in drive A. Otherwise, place a diskette containing the operating system files in drive A.
5. Turn on the system. If the power indicator LED does not light, refer to “Power Light Does Not Light” found later in this chapter.

---

## Monitoring POST

Each time you turn on the system, the Power-On Self-Test (POST) runs automatically and checks the system board, processor board, memory, keyboard, and most installed peripheral devices.

During the memory test, POST displays the amount of memory that it is able to access and test. Depending on the amount of memory, it may take several minutes to complete the memory test.

Press **F2** to enter SETUP. If you do not press **F2**, the above message remains for a few seconds and the boot process continues.

If POST finds an error, it displays an error message and, in case there is a problem with the display, it emits a series of long and short beeps. Write down any beep code emitted. This information is useful to your service representative.

Refer to the “BIOS User’s Information” section in this chapter for a list of items to check for each error code and for an explanation of the error beep codes.

The POST Tests table at the end of this chapter lists keys active during POST and provides a description of errors that may occur.

The BIOS indicates errors by writing an error code to the PS/2-standard logging area in the Extended BIOS Data Area, and by displaying a message on the screen, which is sometimes preceded by the POST Error Code. The error code will also be logged to the Event Logging area.

Report any error code to your service representative.

---

## **POST Keys and Errors**

<b>Action/Message</b>	<b>Description</b>
If POST Beeps Before Video Appears	Initialization failed before video initialized. Most beep code errors are fatal; initialization cannot continue. Refer to the section "BIOS User's Information" in this chapter.
If Monitor Displays Error	Note error; press <b>F1</b> to continue boot or <b>F2</b> to enter Setup. Refer to the section "BIOS User's Information" in this chapter.
To Enter Setup	Setup changes specific options, then writes to CMOS, NVRAM. Press <b>F2</b> during initialization to run Setup. If you do not press <b>F2</b> , the boot process continues.
Enter BOOT Diskette	If prompted, insert the boot diskette.

### *Verifying Proper Operation of Key System Indicators*

As POST determines the system configuration, it tests for the presence of each mass storage device installed in the system. As each device is checked, its activity indicator should turn on briefly. Check for the following:

- Does the diskette drive activity indicator turn on briefly? If not, refer to "Diskette Drive Activity Indicator Does Not Light" in this chapter.
- If there is a hard disk drive or SCSI devices installed in the system, does the hard disk drive activity indicator turn on briefly? If not, refer to "Hard Disk Drive Activity Indicator Does Not Light" in this chapter.

### *Confirming Loading of the Operating System*

Once the system boots up, the operating system prompt appears on the screen. The prompt varies according to the operating system. If the operating system prompt does not appear, refer to "Problems with Application Software" found later in this chapter.

---

## ***Specific Problems and Corrective Actions***

This section provides possible solutions for the following specific problems:

- Power LED does not light
- No beep or incorrect beep pattern
- No characters appear on screen
- Characters on the screen appear distorted or incorrect
- System cooling fan does not rotate
- Diskette drive activity LED does not light
- Hard disk drive activity LED does not light
- CD-ROM drive activity LED does not light
- Problems with application software
- The startup prompt “Press <F2> key if you want to run Setup” does not appear on the screen.
- The bootable CD-ROM is not detected.

Try the solutions in the order given. If you cannot correct the problem, contact your service representative for assistance.

### ***Power LED Does Not Light***

Check the following:

- Is the system operating normally? If so, the power LED is probably defective.
- Are there other problems with the system? If so, check the items listed under System Cooling Fans Do Not Rotate.

---

## ***Incorrect or No Beep Code***

If the system operates normally, but there was no beep, the piezo buzzer located on the system board, may be defective. Contact your service representative for assistance.

Record the beep code emitted by POST, and see the “Messages and Beep Codes” section found later in this chapter.

## ***No Characters Appear on Screen***

Check the following:

- Is the keyboard working? Check to see if the **Num Lock** light is functioning.
- Is the video display monitor plugged in and turned on?
- Are the brightness and contrast controls on the video monitor properly adjusted?
- Are the video monitor switch settings correct?
- Is the video monitor signal cable properly installed?
  
- Is the onboard video controller enabled?

If you are using a video controller board, verify that the video controller board is fully seated in the system board connector.

If there are still no characters on the screen after you reboot the system, contact your service representative or authorized dealer for assistance.

POST emits one long beep and two short beeps pattern to indicate a possible problem with the video display controller. If you do not receive a beep pattern and characters do not display, the video display or video controller may have failed. Contact your service representative or authorized dealer for assistance.

---

## ***Characters are Distorted or Incorrect***

Check the following:

- Are the brightness and contrast controls properly adjusted on the video display? Refer to the documentation supplied with your video display.
- Are the video monitor's signal and power cables properly installed?
- If the problem persists, the video monitor may be faulty or it may be the incorrect type. Contact your service representative for assistance.

## ***System Cooling Fans Do Not Rotate***

Check the following:

- Is AC power available at the wall outlet?
- Are the system power cords properly connected to the power supplies and the AC wall outlets?
- Are the power connectors for the cooling fans connected?
- Is the front panel power on indicator lit?

If the switches and connections are correct and the power outlet is functioning, the power supply has probably failed. Contact your service representative for assistance.

## ***Diskette Drive Activity LED Does Not Light***

Check the following:

- Is the diskette drive's combined power and signal cables properly installed?
- Is the diskette drive properly configured?
- Is the diskette drive activity light always on? If so, the signal cable may be plugged in incorrectly.

If you are using the onboard diskette drive controller, use BIOS Setup to make sure that the diskette drive controller is set to Enabled. For information about running BIOS Setup, refer to the “Configuring Your System” chapter.

If the problem persists, there may be a problem with the diskette drive, system board, or drive signal cable. Contact your service representative for assistance.

## ***CD-ROM Drive Activity Light Does Not Light***

Check the following:

- Is the power and signal cable to the CD-ROM drive properly installed?
- Are all relevant switches and jumpers on the drive set correctly?
- Is the drive properly configured?
- Is the onboard IDE controller enabled?

---

## ***Problems with Application Software***

If you have problems with application software, perform the following:

- Verify that the software is properly configured for the system. Refer to the software installation and operation documentation for instructions on setting up and using the software.
- Verify a different copy of the software to see if the problem is with the copy that you are using.
- Make sure all cables are installed correctly.
- Verify that the system board jumpers are set correctly. Refer to the “Configuring Your System” chapter for jumper settings.
- If other software runs correctly on the system, contact your vendor about the failing software.

If the problem persists, contact the software vendor's customer service representative for assistance.

## ***Bootable CD-ROM Is Not Detected***

Check the following:

- Is the BIOS set to allow the CD-ROM to be the first bootable device? Check your BIOS Setup (F2) configuration.

## ***Problems with the Network***

Diagnostics pass, but the connection fails:

- Make sure the network cable is securely attached. ACT/Link activity LED located on the front panel should be blinking if there is activity between the system and the network.

The controller stopped working when an add-in adapter was installed:

- Make sure the cable is connected to the port from the onboard network controller.
- Make sure the other adapter supports shared interrupts. Also, make sure your operating system supports shared interrupts; OS/2 does not.
- Try reseating the add-in adapter.

The add-in adapter stopped working without apparent cause.

- Try reseating the adapter first; then try a different slot if necessary.
- The network driver files may be corrupt or deleted. Delete and then reinstall the drivers.
- Run the diagnostics.

---

## ***Plug and Play Installation Tips***


Some common PCI tips are listed here.

- Reserve interrupts (IRQs) and/or memory addresses specifically for an ISA adapter. This prevents PCI cards from trying to use the same settings an ISA card is using. Use the BIOS Setup Utility to keep track of ISA adapter resources.
- Certain drivers may require interrupts that are not shared with other PCI drivers. The BIOS Setup Utility can be used to adjust the interrupt numbers for PCI devices. For certain drivers, it may be necessary to alter settings so that interrupts are not shared.

## ***BIOS User's Information***

This section describes the various screen messages and beep codes of the system BIOS. The BIOS indicates errors by writing an error code to the PS/2-standard logging area in the Extended BIOS Data Area, and by displaying a message on the screen, which is sometimes preceded by the POST Error Code. The error code will also be logged to the Event Logging area.

---

 **Note:** Your system error log will be lost, if your system ac power source is off or disconnected.

---

---

## **POST Error Codes and Messages**

Whenever a recoverable error occurs during POST, BIOS displays a message on the video display screen and causes the speaker to beep as the message appears. BIOS also issues a beep code (one long tone followed by two short tones) during POST if the video configuration fails or if an external ROM module does not a checksum of zero. The “POST Error Codes and Messages” table is a list of the error codes and messages written at the start of each POST test. The “POST Error Beep Codes” table is a list of beep codes issued for each POST test. Figure 5-1 shows the location of specific components referenced in the POST Error Codes and Messages Table.

**Table 5-1. POST Error Codes and Messages**

<b>Code</b>	<b>Error Message</b>
0210	Stuck Key
0211	Keyboard error
0212	Keyboard Controller Failed
0230	System RAM Failed at offset
0231	Shadow RAM Failed at offset
0232	Extended RAM Failed at address line
0233	Memory type mixing detected
0234	Single-bit ECC error
0235	Multiple-bit ECC error occurred
0250	System battery is dead - Replace and run SETUP
0251	System CMOS checksum bad - Default configuration used
0260	System timer error
0270	Real time clock error
0271	Check date and time
02B0	Diskette drive A error
02D0	System cache error - Cache disabled
0B1B	PCI System Error on Bus/Device/Function
0B1C	PCI Parity Error on Bus/Device/Function
0B28	Unsupported CPU detected in CPU socket #1
0B29	Unsupported CPU detected in CPU socket #2
0B30	Chassis Fan 1 Alarm occurred
0B31	Chassis Fan 2 Alarm occurred
0B32	Chassis Fan 3 Alarm occurred
0B33	Chassis Fan 4 Alarm occurred
0B34	Chassis Fan 5 Alarm occurred

---



**Table 5-1. Post Error Codes and Messages (Continued)**

<b>Code</b>	<b>Error Message</b>
0B35	Chassis Fan 6 Alarm occurred
0B36	Chassis Fan 7 Alarm occurred
0B46	ESMINT not configured
0B50	CPU #1 with error taken off line
0B51	CPU #2 with error taken off line
0B5F	Forced to use CPU with error
0B60	DIMM group #1 has been disabled
0B61	DIMM group #2 has been disabled
0B62	DIMM group #3 has been disabled
0B63	DIMM group #4 has been disabled
0B6F	DIMM group with error is enabled
0B70	The error occurred during temperature sensor reading
0B71	System Temperature out of range
0B74	The error occurred during voltage sensor reading
0B75	System Voltage out of range
0B7C	The error occurred during fan sensor reading
0B80	BMC Memory Test Failed
0B81	BMC Firmware Code Area CRC check failed
0B82	BMC core hardware failure
0B83	BMC IBF or OBF check failed
0B90	BMC Platform Information Area Corrupted
0B91	BMC update firmware corrupted
0B92	Internal Use Area of BMC FRU corrupted
0B93	BMC SDR Repository empty
0B94	IPMB signal lines do not respond
0B95	BMC FRU device failure
0B96	BMC SDR Repository failure
0B97	BMC SEL device failure
0BB0	SMBIOS - SROM data read error
0BB1	SMBIOS - SROM data checksum bad
0BD0	1 <sup>st</sup> SMBus device address not acknowledged
0BD1	1 <sup>st</sup> SMBus device Error detected
0BD2	1 <sup>st</sup> SMBus timeout

---

**Table 5-1. Post Error Codes and Messages (Continued)**

<b>Code</b>	<b>Error Message</b>
0C00	RomPilot reports error number xx
None	Expansion ROM not initialized
None	Invalid System Configuration Data
None	System Configuration Data Read error
None	Resource Conflict
None	System Configuration Data Write Source
None	NOTICE: Your System Redundant Power Supply is not configured
None	WARNING:IRQ not configured

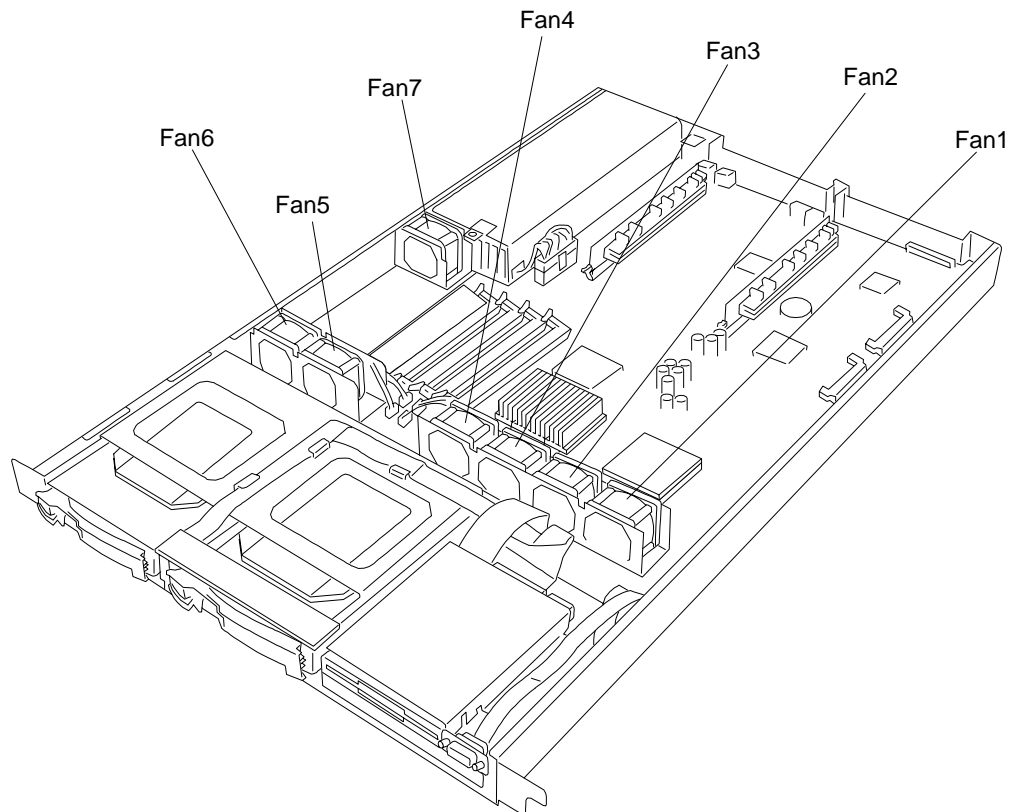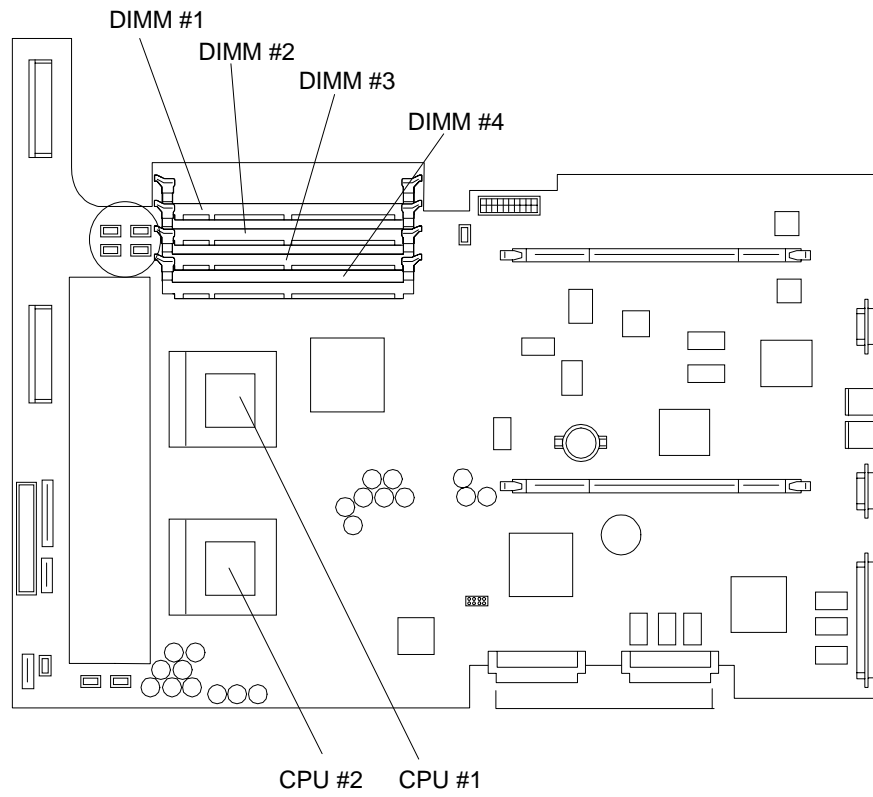

**Figure 5-1. Component Locations**

---

**Table 5-2. Post Error Beep Codes**

<b>Beeps</b>	<b>Error</b>	<b>Cause</b>	<b>Recommended Action</b>
1-2-2-3	ROM Checksum Error	—	Change system board
1-3-1-1	DRAM Refresh Test Error	—	Change memory DIMM's
1-3-1-3	Keyboard Controller Test Error	—	Change system board
1-3-3-1	Memory Not Detected	No memory. Can not write to memory	Verify DIMM installation. Change memory DIMM's
2-2-3-1	Unexpected Interrupt Test Error	Unexpected interrupt	Change CPU or system board
1-2	Option ROM Initialization Error	Failure to initialize Option ROM BIOS	Change system board or option board
1-2	Video configuration fails	Failure to initialize VGA BIOS	Change option video board or system board
1-2	OPTION ROM Checksum Error	Failure to initialize Option BIOS	Change M/B or option board

---


# How to Identify BIOS and BMC Revision Levels

To help you identify your system's current BIOS and BMC revision levels, refer to the following subsections.

## BIOS Revision Level Identification

During system Power-On Self Test (POST), which runs automatically when your system is powered on, your system monitor displays several messages, one of which identifies the BIOS revision level currently loaded on your system, see the example below.

---

 **Note:** In order to see the diagnostic messages, the ESC key must be pressed.


---

Example: BIOS Revision Level

```
Phoenix BIOS 4.0 Release 6.0.250A
```

In the example above, BIOS 6.0.250A is the current BIOS revision level loaded on your system.

---


 **Note:** The BIOS Revision Level stated in the example may not reflect the actual BIOS setting in your system.

---

## BMC Revision Level Identification

During system Power-On Self Test (POST), which runs automatically when your system is powered on, system diagnostics are run. Following the memory test diagnostic, several messages will appear informing you that the mouse was detected and system configuration data updated, when you see these messages the BMC messages are displayed next.

---

 **Note:** In order to see the diagnostic messages, the ESC key must be pressed.

---


To identify your system's current BMC revision level, see the example below.

Example: BMC Messages

```
Base Board Management Controller
Copyright (c) 1999 NEC Corporation, all rights reserved.
Device ID      :01      Device Revision  :00
IPMI Version   :1.0     Firmware Revision :00.60
Self Test Result :
```

In the example above, Firmware Revision 00.60 is the current BMC revision level loaded on your system.

---

 **Note:** The Firmware Revision Level stated in the example may not reflect the actual BMC revision level setting in your system.

---

# How to Identify System Event Log Data

To help you identify your System Event Log Data, refer to the following Tables.

**Table 5-3. System Event Logging Data**

Sensor Type	Sensor Type Code	Sensor Specific Offset	Event Type
Reserved	00h	–	Reserved
Temperature	01h	–	Temperature
Voltage	02h	–	Voltage
		01h	Performance Lags
Fan	04h	–	Fan
Physical Security	05h	04h	LAN Leash Lost (System LAN Unplugged)
Platform Security Violation Attempt	06h	00h	Secured Mode Violation Attempt
		03h	Pre-boot Password Violation - Network Boot Password
Processor	07h	00h	IERR
		01h	Thermal Trip
		02h	FRB1/BIST Failure
		04h	FRB3/Processor Startup/Initialization Failure (CPU didn't start)
		08h	Processor Disabled
Power Unit	09h	03h	Interlock Power Down
Memory	0Ch	00h	Correctable ECC
		01h	Noncorrectable ECC
POST Memory Resize	0Eh	–	POST Memory Resize
POST Error	0fh	–	POST Error
Event Logging Disabled	10h	00h	Correctable Memory Error Logging Disabled
		01h	Event "Type" Logging Disabled
		02h	Log Area Reset/Cleared
		03h	All Event Logging Disabled
System Event	12h	00h	System Reconfigured
		01h	OEM System Boot Event (Hard Reset)
Critical Interrupt	13h	00h	NMI (Dump Switch)
		02h	I/O Channel Check NMI
		04h	PCI SERR
		05h	PCI PERR

**Table 5-3. System Event Logging Data (Continued)**

Sensor Type	Sensor Type Code	Sensor Specific Offset	Event Type
Button	14h	00h	Power Button
		01h	Sleep Button
		02h	Reset Button
Module/Board	15h	–	CPU/Terminator Missing
System Boot Initiated	1Dh	03h	User Requested PXE boot
		04h	Automatic Boot to Diagnostic
Boot Error	1Eh	00h	No Bootable Media
		02h	PXE Server Not Found
OS Boot	1Fh	01h	C: Boot Completed
		02h	PXE Boot Completed
		03h	Diagnostic Boot Completed
		04h	CD-ROM Boot Completed
OS Critical Stop	20h	00h	Stop during OS Load/Initialization
		01h	Run-Time Stop
System ACPI Power State	22h	00h	S0/G0 Working
		01h	S1 "Sleeping with System N/W & Processor Context Maintained"
		04h	S4 "Non-Volatile Sleep/Suspend-To-Disk"
		05h	S5/G2 "Soft-OFF"
		07h	G3/Mechanical Off
		08h	Sleeping Cannot Differentiate between S1-S3
Watchdog 2	23h	01h	Hard Reset
		02h	Power Down
		08h	Timer Interrupt
SMI Timeout	F3h	–	SMI Timeout
EMP	F5h	00h	Communication Error
Sensor Failure	F6h	00h	I2C Bus Device Address Not Acknowledged
		01h	I2C Bus Device Error Detected
		02h	I2C Bus Timeout
OEM Reserved	F7h - FFh	–	–


---

**Table 5-4. Sensor Type Codes**

<b>Sensor Number</b>	<b>Sensor Type</b>
01h	Ambient Temp (MB)
02h	CPU#1 Temp
03h	CPU#2 Temp
20h	+3.3V
21h	+5V
22h	+12V
23h	+3.3Vs
24h	VCCP0 (CPU#1 VRM)
25h	VCCP1 (CPU#2 VRM)
29h	+1.5V
2Ah	+2.5V
2Ch	SCSI A +2.85V
2Dh	SCSI B +2.85V
2Eh	SCSI A Vref0
2Fh	SCSI A Vref1
30h	SCSI A Vref2
31h	SCSI B Vref0
32h	SCSI B Vref1
33h	SCSI B Vref2
40h	CPU Rear Fan (Fan #1)
41h	CPU Front Fan (Fan #2)
42h	Chassis (HDD) Fan (Fan #3)





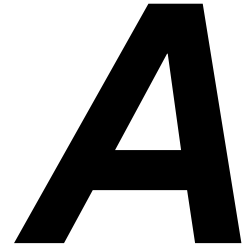

# System Cabling

- System Cabling
- Before You Begin
- Static Precautions
- Standard Configuration
- RAID Configuration

---

## ***System Cabling***

This appendix contains information and procedures on cabling configurations used in your system.

The cabling configurations include:

- Standard Configuration
- RAID Configuration.

## ***Before You Begin***

---

### **WARNING**

The DC push-button on/off switch on the front panel does not turn off the system AC power. Also, +5vdc is present on the system board whenever the AC power cords are connected between the system and an AC outlet. Before doing the procedures in this manual, make sure that your system is powered off and unplug the AC power cords from the back of the chassis. Failure to disconnect power before opening your system can result in personal injury and equipment damage.

---

## ***Static Precautions***

An electrostatic discharge (ESD) can damage disk drives, option boards, and other components. You can provide ESD protection by wearing an antistatic wrist strap attached to chassis ground when handling system components.

Electronic devices can be easily damaged by static electricity. To prevent damage, keep them in their protective packaging when they are not installed in your system.

---

## ***Standard Configuration***

Your system is cabled using a single channel on-board IDE Controller and dual channel on-board Adaptec AIC7899 SCSI Controller. Figure A-1 illustrates the standard system configuration.


The on-board IDE controller supports the internally mounted CD-ROM (H) as its master device. If only one device is on a channel connector it must be set as the master device.

The AIC7899 SCSI controller (A) contains two independent SCSI interfaces. Each interface is capable of operations using either 8- or 16-bit SCSI providing 160 MB/s (Ultra-160/M) or 40 MB/s (Wide Ultra) throughput.

One SCSI interface is available at a 68-pin Ultra-160M SCSI interface connector (B) on the system board. A SCSI loopback cable (C) attached to this connector routes this interface to a 68-pin Ultra-160M SCSI interface connector (D) on the system board. From this connector the interface is internally connected to the two 160/M SCA drives (J and L).

The second SCSI interface can be used to support external SCSI devices attached to the SCSI connector (O) located on the rear panel.

A 3.5-inch diskette drive (F)) is installed in all systems and interfaces separately to the system board.

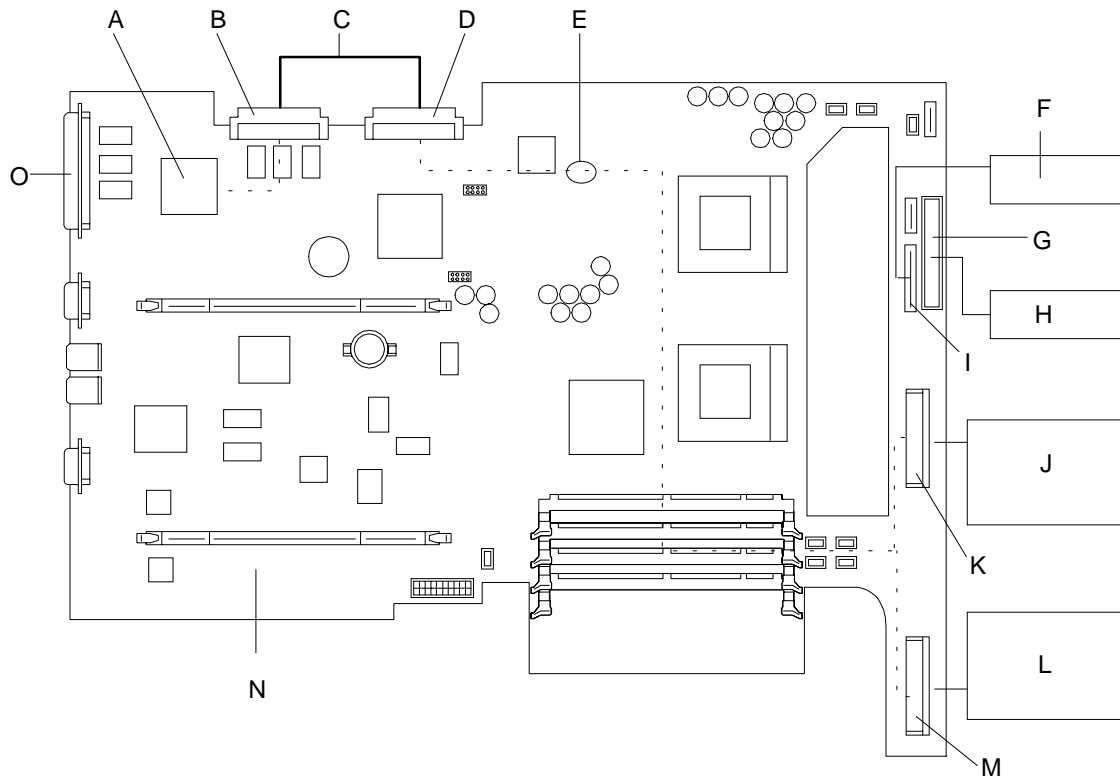


- |   |   |
|---|---|
| <b>A</b> – SCSI controller  | <b>I</b> – Diskette drive connector     |
| <b>B</b> – SCSI connector (to SCSI controller)                    | <b>J</b> – SCSI hard drive 1            |
| <b>C</b> – SCSI loop cable  | <b>K</b> – SCSI hard drive 1 connector  |
| <b>D</b> – SCSI connector (to hard drive connectors)              | <b>L</b> – SCSI hard drive 0            |
| <b>E</b> – Internal connection from SCSI connector to hard drives | <b>M</b> – SCSI hard drive 0 connector  |
| <b>F</b> – Diskette drive   | <b>N</b> – System board                 |
| <b>G</b> – CD-ROM drive connector                                 | <b>O</b> – External SCSI wide connector |
| <b>H</b> – CD-ROM drive   |   |

**Figure A-1. Standard System Cable Configuration**

# RAID Configuration

The RAID options available for your system provide your system with the added security of fault tolerance.

If you order a system with a SecuRAID 110 controller, the system is pre-cabled at the factory as shown in Figure A-2. In this configuration the SCSI loopback cable (D) is disconnected from the SCSI controller connector (C), as shown in the Standard System Cabling Configuration (Figure A-1) and is instead connected to the RAID controller (B).

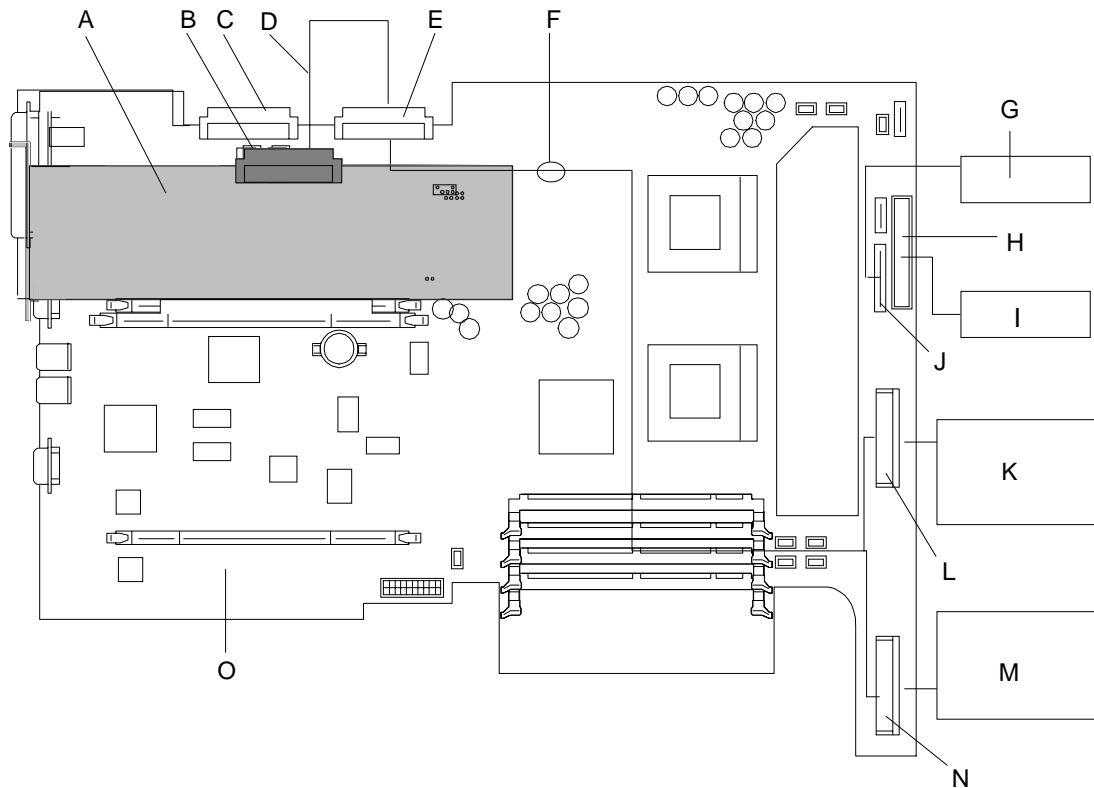

- |  |                                 |
|--|---------------------------------|
| A – RAID controller  | I – CD-ROM drive                |
| B – Raid controller SCSI connector                         | J – Diskette drive connector    |
| C – SCSI connector (to SCSI controller)                    | K – SCSI hard drive 1           |
| D – SCSI loopback cable                                    | L – SCSI hard drive 1 connector |
| E – SCSI connector (to hard drive connectors)              | M – SCSI hard drive 0           |
| F – Internal connection from SCSI connector to hard drives | N – SCSI hard drive 0 connector |
| G – Diskette drive   | O – System board                |
| H – CD-ROM drive connector                                 |                                 |

**Figure A-2. RAID Cable Configuration**



# ***B***

## **Interrupt Request/ PCI IRQ Device/ I/O Port Address Assignments**

- Interrupt Request Assignments
- PCI IRQ Device Assignments
- I/O Port Address Assignments

---

This appendix provides the Interrupt Requests (IRQs), PCI IRQ device, and I/O port addresses that are factory assigned for this system. Use these values for reference when installing an optional device.

## ***Interrupt Request Assignments***

Table B-1 lists the factory assigned Interrupt Requests (IRQs).

***Table B-1. Interrupt Request Assignments***

<b>IRQ</b>	<b>Peripheral Device (Controller)</b>	<b>IRQ</b>	<b>Peripheral Device (Controller)</b>
0	System timer	8	Real-time clock
1	Keyboard	9	PCI//SCI
2	Cascaded connection	10	PCI
3	COM2 serial port (PCI)	11	ESMINT/PCI
4	COM1 serial port (PCI)	12	Mouse
5	PCI/LPT2 parallel port	13	Math co-processor
6	Floppy disk	14	Primary IDE (CD-ROM drive)
7	PCI/LPT1 parallel port	15	–

---

## ***PCI IRQ Device Assignments***

The PCI devices are assigned IRQs as listed in Table B-2. To change the PCI IRQ device assignment settings use the procedures in subsection *BIOS Setup Utility* of chapter 3.

***Table B-2. PCI IRQ Device Assignments***

<b>Menu Option</b>	<b>Interrupt</b>
PCI IRQ 1	On-board SCSI (Channel A)
PCI IRQ 2	On-board SCSI (Channel B)
PCI IRQ 3	On-board LAN1
PCI IRQ 4	On-board Video
PCI IRQ 5	PCI slot #1 (INT A)
PCI IRQ 6	PCI slot #2 (INT A)
PCI IRQ 7	On-board LAN2
PCI IRQ 8	Not used
PCI IRQ 9	PCI slot (INT C)
PCI IRQ 10	PCI slot (INT D)
PCI IRQ 11	PCI slot (INT B)

---

---

## ***I/O Port Address Assignments***

Table B-3 lists the I/O port address assignments. In Table B-3 the addresses are listed in hexadecimal notation and the I/O port address of a PCI device is set according to its type and number.

***Table B-3. I/O Port Address Assignments***

<b>Address</b>	<b>Item</b>
00 - 1F	8-bit DMA control register
20 - 21	Master 8259 programming interface
2E - 2F	Configuration
40 - 43	8254 programming interface
60	Keyboard/mouse
61	NMI status register
64	Keyboard/mouse
70 - 71	NMI enable register/real-time clock
80 - 8F	16-bit DMA control register
A0 - A1	Slave 8259 programming interface
C0 - DF	DMA controller pageregister
E0 - E9	Base address register
F0	Register IRQ 13
F1 - FF	Logical device configuration
170 - 177 or BAR2	EDMA2 compatible mode primary command block register
1F0 - 1F7 or BAR0	EDMA2 compatible mode secondary command block register
278 - 27F	(Parallel port 3)
2F8 - 2FF	Serial port 2
376 or BAR3	EDMA2 compatible mode secondary command block register
370 - 377	(Floppy disk drive 2), IDE 2
378 - 37F	(Parallel port 2)
3B0 - 3BB	VGA
3BC - 3BF	Parallel port 1
3C0 - 3DF	VGA
3E8 - 3EF	(Serial port)
3F6 or BAR3	EDMA2 compatible mode primary command block register
3F0 - 3F7	(Floppy disk drive 2), IDE 1
3F8 - 3FF	Serial port 1

***Table B-3. I/O Port Address Assignments (Continued)***

---

<b>Address</b>		<b>Item</b>
	40B	DMA1 extended write mode register
	4D0	Master 8259 ELCR programming
	4D1	Slave 8259 ELCR programming
4D6	or BAR1	DMA2 extended write mode register
	C00	PCI IRQ mapping index register
	C01	PCI IRQ mapping data register
	C14	PCI error status register
	C49	Address/status control
	C4A	Rise time counter control
	C52	General-purpose register (GPMs)
	C6C	ISA wait register
	C6F	Other control registers
CA2	- CA3	IPMI (IMPI KCS interface)
CA4	- CA5	IPMI (SMI interface)
CA6	- CA7	IPMI (SCI/SW1 interface)
	CD6	Power management index register
	CD7	Power management data register
CF8	- CFC	PCI configuration space
	CF9	Reset control
F50	- F58	General-purpose chipset
BAR4+00	- 0F	EDMA2 PCI base address register 4



# C

## **Technical Specifications**

- Server Unit

---

This appendix provides the technical specifications for your server unit.

## Server Unit

Table C-1 lists the server unit technical specifications.

**Table C-1. Server Unit Technical Specifications**

Item	Specification
<b>Chassis</b>	
Dimensions	Width: 19.02 inches (483 mm) Height: 1.73 inches (44mm) Depth: 27.4 inches (696mm)
Weight (Maximum)	Approximately 26.46lbs. (12.0kg)
Enclosure	Tower or 19-inch rack mountable (1U)
Environment	Temperature: 50° to 86°F (10° to 30°C) Relative humidity: 20% to 80% (non-condensing)
Peripheral Interface (rear access)	PS/2 style (6-pin mini-DIN) keyboard connector PS/2 style (6-pin mini-DIN) mouse connector Two USB (4-pin) port connectors Two serial (9-pin) port connectors Two RJ-45 T/10Base-T/100Base Ethernet port connectors SVGA (15-pin) port connector Wide-SCSI device (68-pin) port connector
Option PCI Slots	Two 64-bit PCI bus (33 MHz) slots
Storage Device Capacity	One CD-ROM drive One 3 1/2-inch floppy diskette drive One hot-swap SCSI hard disk drive bay for mounting up to two SCSI hard disk drives
<b>System Board</b>	
Processor	Intel® Pentium® III Xeon™ Processor Clock rate: 700/900 MHz
Cache	Primary: Integrated 16KB (L1) cache memory Secondary: 256KB (L2) cache memory

---

**Table A-1. Server Unit Technical Specifications (Continued)**

---

<b>Item</b>	<b>Specification</b>
Optional Processor Support	Upgradeable from one to two processors
Chipset	ServerSet III HE + OSB4
Graphics	ATI RAGE IIC (4 MB VRAM) Resolutions: 640x480, 800x600, 1024x768, 1280x1024 Colors: 16 Meg @ 640x480/800x600 64K @ 1024x768 256 @ 1280x1024
Dual Fast Ethernet PCI Bus Controllers	Intel 82559 10BASE-T/100BASE-TX network controller
Dual Interface SCSI Controller	Embedded Adaptec AIC7899 dual function controller
Real-Time Clock/Battery	Lithium battery (vendor part no. CR2450)
Peripheral Controller	PC97317 (Super I/O) controller
System Board Management Controller (BMC)	DS80CH11 BMC
<b>Memory Board</b>	Up to 4GB of ECC SDRAM DIMM memory.
<b>Keyboard</b>	PS/2-compatible 104-key 12 function keys separate numeric and cursor pads
<b>Mouse</b>	PS/2 serial mouse 2-button
<b>Power Supply</b>	200 Watt auto-voltage-sensing power supply
<b>System Power</b>	AC input: 100 - 120VAC or 200 - 240VAC, 50/60 HZ Power consumption: 250VA at 235W (maximum two processors)

---



---

# Glossary

## A

### AC

(Alternating Current) The type of current available in wall outlets. All computers must convert alternating current to direct current to operate. See also DC.

### address

A label, name, or number that identifies a location in computer memory.

### ASCII

(American Standard Code for Information Interchange) A standard number assigned to each of the alphanumeric characters and keyboard control code keys to enable the transfer of information between different types of computers and peripherals.

## B

### backplane slot

A connector on the backplane board in desktop computers and expansion boxes that allows you to install circuit cards.

### backup

A copy of data for safe-keeping. The data is copied from computer memory or disk to a floppy disk, magnetic tape, or other media.

### backup battery

The battery in your computer that maintains the real-time clock and the configuration information when the computer's power is removed.

### base memory

An area of memory between 0 and 640 kilobytes.

### baud rate

The speed with which data is transmitted during serial communication. The computer's operating system and software program must be configured for the same baud rate as the communication device, such as a serial printer. See also bps.

### BIOS

(Basic Input/Output System) A program stored in flash EPROM or ROM that controls the keyboard, disk drives, video monitor, and other devices. See also flash EPROM, EPROM, and ROM.

### bit

Derived from BInary digiT, a bit is the smallest unit of information a computer handles. See also byte.

---

**BMC**

(Baseboard Management Controller) Contains all of the server management functions. One major function of the BMC is to monitor system management events and log their occurrence in the System Event Log (SEL).

**boot**

The process of loading the operating system into memory.

**bps**

(bits per second) The number of bits transferred in one second during serial communication, such as modem transmission.

**byte**

A group of eight bits.

**C****cache memory**

A very fast, limited portion of RAM set aside for temporary storage of data for direct access by the microprocessor.

**CD-ROM drive**

(Compact Disk ROM drive) A type of mass storage device that reads information from a compact disk.

**Centronics port**

An industry standard parallel port. See also parallel port.

**CGA**

(Color Graphics Adapter) A type of video display system that provides low-resolution text and graphics on TTL monochrome and color monitors.

**CMOS**

(Complimentary Metal-Oxide Semiconductor) A type of low-power integrated circuit used in computers. See also TTL.

**COM1 or COM2**

The name you can assign a serial port to set or change its address. See also serial port.

**command**

An instruction that directs the computer to perform a particular operation.

**configuration**

The way in which a computer is set up to operate. Some configurable options include CPU speed, serial port designation, and memory allocation.

---

**CPU**

(Central Processing Unit) See microprocessor.

**CRT**

(Cathode-Ray Tube) The type of video display used in monitors for desktop computers.

**D****DC**

(Direct Current) The type of current available in the rechargeable battery packs used in portable computers. See also AC.

**default**

The factory setting your computer uses unless you instruct it otherwise. For example, when powering up, the computer will boot from the default drive.

**density**

The capacity of information (bytes) that can be packed onto a storage device, such as a floppy disk.

**device driver**

A software program that a computer must use to recognize and operate certain hardware, such as a mouse or a video monitor.

**disk drive**

A device that stores data on a hard or floppy disk. A floppy disk drive requires a floppy disk to be inserted; a hard disk drive has a permanently encased hard disk.

**DOS**

(Disk Operating System) See operating system.

**DRAM**

(Dynamic RAM) See RAM.

**E****ECC**

(Error Checking and Correction) A method of detecting and correcting errors.

**EEPROM**

(Electrically Erasable Programmable Read-Only Memory) A type of memory device that stores password and configuration information.

**EGA**

(Enhanced Graphics Adapter) A type of video display system that provides medium-resolution text and graphics on TTL monochrome, color, and enhanced color monitors.

---

**EMP**

The Emergency Management Port (EMP) provides an interface to the console manager. This interface allows remote server management via a modem or direct connection.

**EMS**

(Expanded Memory Specification) A method of accessing memory beyond the 640K limit of DOS by exchanging data in and out of main memory at high speeds. Some software requires EMS to operate.

**EPROM**

(Erasable Programmable Read-Only Memory) A type of memory device that is usually used to store system BIOS code. This code can be erased with ultraviolet light, but is not lost when the computer is powered off. See also flash EPROM and ROM.

**expansion slot**

See backplane slot.

**extended memory**

The protected memory above 1M that is directly accessible by the microprocessor through certain utilities and operating systems.

**F****flash EPROM**

A type of memory device that is usually used to store system BIOS code. This code can be replaced with updated code from a floppy disk, but is not lost when the computer is powered off. See also EPROM and ROM.

**floppy disk drive**

See disk drive.

**format**

The process used to organize a hard or floppy disk into sectors so it can accept data. Formatting destroys all previous data on the disk.

**FRB (Fault Resilient Boot)**

A server management feature. FRB attempts to boot the system using the alternate processor or DIMM.

**G****(Gigabyte)**

1,073,741,824 bytes. See also byte.

---

## H

### **hard disk drive**

See disk drive.

### **hardware**

The physical parts of your computer, including the keyboard, monitor, disk drives, cables, and circuit cards.

### **hot swap**

A method used to insert or remove SCSI disk drives into or from an operating bus. This method is typically used in RAID subsystems. When used in non-RAID subsystems the operating system must typically be restarted.

## I

### **IC**

(Integrated Circuit) An electronic device that contains miniaturized circuitry.

### **IDE**

(Integrated Drive Electronics) A type of hard disk drive with the control circuitry located inside the disk drive rather than on a drive controller card.

### **interface.**

A connection between the computer and a peripheral device that enables them to exchange data. See also parallel port and serial port.

### **ISA**

(Industry Standard Architecture) An industry standard for computers and circuit cards that transfer 16 bits of data at a time.

## J

### **jumper**

A small electrical connector used for configuration on some computer hardware.

## K

### **(Kilobyte)**

1,024 bytes. See also byte.

## L

### **LAN**

(Local Area Network) A group of computers linked together within a limited area to exchange information.

### **LCD**

(Liquid Crystal Display) The type of video display used in portable computers.

---

**LED**

(Light-Emitting Diode) A small electronic device that glows when current flows through it.

**LPT1 or LPT2**

The name you can assign a parallel port to specify its address. See also parallel port.

**LVD**

Super-fast Ultra 2 SCSI Low Voltage Differential (LVD) Parallel SCSI Interface. A new SCSI interface that provides greater I/O bandwidth, device connectivity, data reliability, and longer cable lengths for Ultra2 SCSI hard disk drives. Note that in order to achieve LVD performance all devices including cable, controller, and drive must support LVD.

**M****(Megabyte)**

1,048,576 bytes. See also byte.

**memory**

The circuitry in your computer that stores data and programs. See also EMS, extended memory, RAM, and ROM.

**microprocessor**

The integrated circuit that processes data and controls the basic functions of the computer.

**modem**

A device used to exchange information with other computers over telephone or data lines.

**module**

A circuit board that plugs into a dedicated connector on the system board in your computer.

**mouse**

A small input device that you guide on a flat surface to control the cursor movement and operation of the computer when using certain software programs.

**N****NVRAM**

(Nonvolatile RAM) A type of RAM that retains its contents even after the computer is powered off. This memory stores EISA configuration information. See also RAM and SRAM.

**O****operating system**

A set of programs that provides the interface between other software programs and the computer.

---

## P

### **parallel port**

The connector on the back of your computer that allows the transfer of data between the computer and a parallel device, such as a parallel printer.

### **partition**

The process of dividing the storage space on a hard disk into separate areas so that the operating system treats them as separate disk drives.

### **password**

A security feature that prevents an unauthorized user from operating your computer. See also EEPROM.

### **PCI**

Peripheral Component Interconnect. PCI is a high-performance peripherals I/O bus supporting data transfers of up to 528MB per second.

### **Pentium**

A type of microprocessor, with a built-in math coprocessor, cache memory, and memory and bus controllers, that processes and communicates 32 bits of data at a time. This microprocessor also contains power management capabilities.

### **peripheral**

A device connected to and controlled by the computer, such as an external disk drive or a printer.

### **pixel**

The smallest element that is visible on a video display. The resolution of a video display system is measured in pixels.

### **PnP**

(Plug-n-Play) Plug-and-play is the ability to plug a device into a computer and have the computer recognize that the device is there. The user doesn't have to tell the computer.

### **POST**

Power-On-Self-Test.

## R

### **RAM**

(Random-Access Memory) A temporary storage area for data and programs. This type of memory must be periodically refreshed to maintain valid data, and is lost when the computer is powered off. See also NVRAM and SRAM.

### **real-time clock**

The IC in your computer that maintains the time and date.

---

**ROM**

(Read-Only Memory) A type of memory device that usually is used to store system BIOS code. This code cannot be altered and is not lost when the computer is powered off. See also BIOS, EPROM, and flash EPROM.

**RS-232C port**

An industry standard serial port. See also serial port.

**S****SAF-TE**

(SCSI Accessed Fault Tolerant Enclosure) A specification for monitoring the state of the drives and enclosure environment (fan, power supply, temperature, etc.) using the SCSI bus to indicate faults.

**save**

To store information on a floppy disk, hard disk, magnetic tape, or some other permanent storage device.

**SCSI**

(Small Computer System Interface) An industry standard interface that provides high-speed access to tape drives, hard disk drives, and other peripheral devices.

**SEL**

(System Event Log) A record of system management events. The information stored includes the name of the event, the date and time the event occurred and data pertinent to the event. Event data may include POST error codes that reflect hardware errors or software conflicts within the system.

**serial communication**

Information sent sequentially, one bit at a time.

**serial port**

The connector on the back of your computer that allows the transfer of data between the computer and a serial device, such as a mouse, a modem, or a serial printer.

**setup program**

The program that you use to change the configuration of some ISA desktop and notebook computers. This program also contains information about the hardware in the computer.

**software**

Programs with specific functions, such as word processing, data base management, communications, and operating system.

**SRAM**

(Static RAM) A temporary storage area for data and programs. This type of memory does not need to be refreshed, but it is lost when the computer is powered off. See also NVRAM and RAM.

---

**SVGA**

(Super VGA) A type of video display system that provides very high-resolution text and graphics on analog color monitors.

**system board**

The main circuit board in your computer. It contains most of the connectors and ports.

**T****tape drive**

A type of storage device using magnetic tape.

**TTL**

(Transistor-Transistor Logic) A type of integrated circuit used in computers. See also CMOS.

**U****ultra 160/m SCSI**

Ultra 160/m is a parallel SCSI interface based on Ultra3 SCSI technology. This interface features data transfer speeds up to 160MB/second (double-edge clocking), cyclical redundancy checking (CRC) providing higher levels of data reliability, and domain validation that detects the configuration of the SCSI bus and automatically tests and adjusts the SCSI bus transfer rate to optimize interoperability. Note that the Ultra 160/m uses the standard Ultra2 LVD cabling and termination, making it backward compatible for easy implementation.

**V****VGA**

(Video Graphics Array) A type of video display system that provides high-resolution text and graphics on analog color monitors.



---

# Equipment Log

Use this equipment log form to record pertinent information about your system. You will need some of this information to run the System Setup Utility. Be sure to update the equipment log when you add options.

Record the model and serial numbers of the system components, dates of component removal or replacement, and the name of the vendor from whom the component was purchased. Be sure to record the same information for any components added to the system, such as a power supply, hard disk drives, add-in boards, or printers.

Record the model and serial numbers of the unit and system baseboard. The model and serial numbers of the system unit are recorded on a label attached to the rear of the unit. The serial number of the system board is located along the left side of the board, near the PCI expansion slot covers.

The location of serial numbers on add-in boards, hard disk drives, and external equipment, such as video displays or printers, varies from one manufacturer to another. Literature accompanying these products should illustrate or describe the location of model and serial numbers.

<b>Component</b>	<b>Manufacturer Name &amp; Model</b>	<b>Serial Number (if available)</b>	<b>Date Installed</b>
Server			
System Board			
Processor 1			
Processor 2			
DIMM Slot 1			
DIMM Slot 2			
DIMM Slot 3			
DIMM Slot 4			
Modem			
Diskette Drive			
CD-ROM Drive			
Hard Disk Drive 1			
Hard Disk Drive 2			
Optional RAID Controller			
Network Controller 1			
Network Controller 2			
Monitor			
Keyboard			
Mouse			
External Peripheral 1			
External Peripheral 2			
Power Supply (standard)			

---

# Index

## A

- AC linkage mode, 1-13
- Administrative password, 1-14
- Advance menu
  - configuring in setup, 3-6

## B

- Battery
  - installing, 4-9
- BIOS, 3-3
- BMC, 1-11, 1-12
- Boot menu
  - configuring in setup, 3-14

## C

- Configuring system board jumpers
  - summary description, 3-21
- Controller
  - network, 1-10
  - system board management (BMC), 1-11, 1-12

## E

- Exit menu
  - configuring in setup, 3-15

## F

- Front doors
  - removing, 4-5

## H

- Hard Disk Drives
  - Installing or Swapping, 4-29
  - SCSI ID Assignment, 4-28
- Hot Swappable Power Supplies, 1-5

## I

- I/O port address assignments, B-4
- Integrated peripheral configuration menu,
  - configuring in Setup, 3-8
- Interrupt request assignments, B-2
- Intrusion detection, 1-11, 1-12

## J

- Jumpers
  - CMOS clear, 3-21
  - password, 3-21

## L

- Lithium backup battery
  - installing, 4-9

## M

- Main menu
  - configuring in setup, 3-5
- Memory
  - addresses, 1-8
- Monitoring system status, 1-11, 1-12

## N

- Network
  - controller, 1-10

## O

- Overview, 1-2

## P

- Password
  - administrative, 1-14
  - clearing and changing, 3-22
  - user, 1-14
- PCI IRQ device assignments, B-3
- Power supply
  - monitoring power state, 1-11, 1-12
- Problems
  - bootable CD-ROM not detected, 5-12
  - CD-ROM drive activity light, 5-11
  - network, 5-12
  - PCI installation tips, 5-13

## R

- RAID
  - controller configuration, 3-19
- Real-time clock
  - running SCU to configure settings, 4-9
- Removing termination board, 4-12

## S

- SCSI utility
  - adaptec, 3-16
- SCU
  - software locking feature, 1-14
- Security, 1-13
  - software lock, SCU, 1-14
- Security menu
  - configuring in Setup, 3-11
- Server management

---

BMC, 1-11, 1-12  
features, 1-11, 1-12

Setup

- advanced menu, 3-6
- boot menu, 3-14
- exit menu, 3-15
- integrated peripheral configuration menu, 3-8
- main menu, 3-5
- security menu contents, 3-11

Specifications

- server unit technical specifications, C-2

System, 5-20

- configuring, 3-2

System board

- configuration jumpers, 3-21

System Chassis, 1-4

System hardware menu

- configuring in setup, 3-12

## **T**


Termination board

- removing, 4-12

## **U**

User password, 1-14





456-01561-001