

PROPRIETARY NOTICE AND LIABILITY DISCLAIMER

The information disclosed in this document, including all designs and related materials, is the valuable property of NEC Computer Systems Division, Packard Bell NEC (NECCSD, PBNEC) and/or its licensors. NECCSD and/or its licensors, as appropriate, reserve all patent, copyright and other proprietary rights to this document, including all design, manufacturing, reproduction, use, and sales rights thereto, except to the extent said rights are expressly granted to others.

The NECCSD product(s) discussed in this document are warranted in accordance with the terms of the Warranty Statement accompanying each product. However, actual performance of each such product is dependent upon factors such as system configuration, customer data, and operator control. Since implementation by customers of each product may vary, the suitability of specific product configurations and applications must be determined by the customer and is not warranted by NECCSD.

To allow for design and specification improvements, the information in this document is subject to change at any time, without notice. Reproduction of this document or portions thereof without prior written approval of NECCSD is prohibited.

NEC is a registered trademark of NEC Corporation and NEC PowerMate and MultiSync are registered trademarks of NEC Technologies, Inc. These registered trademarks are used under license by Packard Bell NEC, Inc.

MS-DOS and Windows are registered trademarks of Microsoft Corporation.

All other product, brand, or trade names used in this publication are the trademarks or registered trademarks of their respective trademark owners.

First Printing — April 1997

Copyright 1997
NEC Computer Systems Division
Packard Bell NEC, Inc.
1414 Massachusetts Avenue
Boxborough, MA 01719
All Rights Reserved

Contents

Using This Guide

Text Conventions.....	x
Related Documents	xi

1 Introducing Your Computer

Front Features	1-2
System Controls and Lamps.....	1-3
Diskette Drive A.....	1-5
CD-ROM Reader.....	1-6
Back Features	1-8
External Connectors.....	1-9
Power Supply Features	1-11
Speakers	1-12
Microphone	1-13

2 Getting Started

Using a Mouse.....	2-1
About Your Online Documentation	2-2
Where to Go from Here.....	2-4

3 Installing Options

Option Installation Procedures	3-2
Safety Precautions	3-4
Removing the System Unit Cover	3-5
Replacing the System Unit Cover	3-7
Expansion Boards	3-8
Locating Expansion Slots.....	3-8
Installing an Expansion Board.....	3-10
Installing an Expansion Board in the Inside Slot ...	3-12
Removing an Expansion Board	3-14
Removing an Expansion Board from Inside Slot ...	3-15

SIMM Upgrade	3-17
Checking System Memory.....	3-18
Removing a SIMM	3-20
Installing a SIMM	3-21
Video Upgrade.....	3-22
Processor Upgrade.....	3-24
Removing the Processor.....	3-24
Installing the Processor	3-25
Data Storage Devices.....	3-26
Locating Device Slots	3-26
Preparing the Device.....	3-27
Device Cables.....	3-28
Diskette Drive Signal Cable	3-29
IDE Signal Cables	3-30
System Power Cables.....	3-31
Cabling Storage Devices	3-31
Cabling an IDE Device	3-32
Cabling a Diskette Drive	3-33
Installing Storage Devices.....	3-34
Removing the 3 1/2-Inch Drive Bracket.....	3-34
3 1/2-Inch Drive Installation	3-36
Removing the Front Panel	3-37
Installing the 5 1/4-Inch Device.....	3-38
Replacing the Front Panel	3-41
Replacing the 3 1/2-Inch Drive Bracket.....	3-42
Adding External Options.....	3-43
Connecting a Parallel Printer.....	3-43
Connecting an RS-232C Device	3-44

4 Setting System Parameters

The Setup Utility	4-2
How to Start Setup	4-3
How to Use Setup.....	4-4
The Menu Bar	4-5
The Legend Bar	4-6
Selecting a Menu Item.....	4-7
Displaying a Submenu	4-7
Getting Help	4-7
Main Menu Options.....	4-7
IDE Adapters.....	4-9
Memory Cache	4-11
Memory Shadow.....	4-12
Boot Options	4-12
NumLock	4-13
The Advanced Menu.....	4-14
Integrated Peripherals Menu.....	4-15
The Security Menu	4-17
The Power Menu	4-20
The Boot Menu.....	4-22
The Exit Menu.....	4-22
Save Changes & Exit.....	4-22
Discard Changes & Exit	4-23
Get Default Values	4-23
Load Previous Values	4-24
Save Changes	4-24
Restoring System Software	4-24
System Restore Options	4-25
Restore Individual Files.....	4-26
Selecting Files.....	4-27
Checking Selected Files.....	4-27
Restoring the Files	4-28
System Recovery	4-29

5 Setting System Board Jumpers	
Changing Processor Jumper Settings	5-2
Clearing Your Password	5-5
6 Using Voyetra Sound Software	
Power Bar	6-2
Audio Mixer	6-3
Adjusting the Sound with Software.....	6-3
Adjusting the Sound with Speakers.....	6-4
CD Player.....	6-4
WAV Player.....	6-4
Recording Digital Audio Files	6-5
Playing Digital Audio Files	6-5
Editing Digital Audio Files.....	6-6
MIDI Player	6-6
7 If You Have a Problem	
Problem Checklist.....	7-2
Solutions to Common Problems.....	7-3
System Problems	7-3
Diskette Drive Problems	7-5
Monitor Problems	-6
Keyboard/Mouse Problems	7-7
CD-ROM Problems	7-7
Speaker Problems	7-8
Microphone Problems	7-8
Replacing the CMOS Battery.....	7-9
Diagnostic Diskette.....	7-12
Getting Technical Help	7-12

A Setting Up a Healthy Work Environment

Making Your Computer Work for You.....	A-1
Arrange Your Equipment	A-3
Adjust Your Chair	A-4
Adjust Your Input Devices	A-6
Adjust Your Monitor	A-9
Vary Your Workday	A-11
Pre-Existing Conditions and Psychosocial Factors	A-12
Checking Your Comfort: How Do You Measure Up?	A-13
Checking Your Chair	A-13
Checking Your Keyboard.....	A-13
Checking Your Mouse	A-13
Checking Your Monitor	A-13
Checking You	A-14

B Reviewing System Interrupts

Interrupt Controller.....	B-1
---------------------------	-----

C Limited Warranty

How Long Is the Warranty.....	C-1
Who Is Protected?.....	C-1
What Is Covered and What Is Not Covered	C-1
What We Will Pay For and What We Will Not Pay For	C-3
How You Can Get Warranty Service.....	C-3
Limitation of Damages and Implied Warranties	C-4
How State Law Relates to the Warranty.....	C-4
For Warranty Information.....	C-5

List of Tables

Quick Reference to Information About Your Computer	2-5
Setup Key Functions	4-6
Main Menu Parameters	4-8
IDE Hard Disk Parameters.....	4-11
Memory Cache Parameters	4-12
Boot Option Parameters	4-13
Keyboard Features Parameters	4-14
Advanced Menu Parameters	4-15
Integrated Peripherals Parameters	4-16
System Security Options	4-19
Power Management Parameters.....	4-21
Interrupt Level Assignments.....	B-1

Index

Using This Guide

The *PowerMate Ve ETC Series User's Guide* provides a quick reference to information about your computer.

The guide contains the following information:

- Chapter 1, *Introducing Your Computer*, provides a look at system components. See this chapter to familiarize yourself with your system.
- Chapter 2, *Getting Started*, gives you information about using a mouse, using online documentation, and what you should do after your system is up and running.

The chapter includes a quick-reference chart for finding information about a variety of topics.

- Chapter 3, *Installing Options*, provides installation procedures for internal and external options.
- Chapter 4, *Setting System Parameters*, describes the Setup utility and explains how to use it to configure your system.
- Chapter 5, *Setting System Board Jumpers*, provides information on changing jumper settings when reconfiguring your system.
- Chapter 6, *Using Voyetra Sound Software*, explains how to use Voyetra®'s Multimedia Sound Software to play music CDs, record, play and edit audio files, and play and edit MIDI files.
- Chapter 7, *If You Have a Problem*, contains troubleshooting tips for solving simple problems and provides information on where you can find help when you cannot solve a problem yourself.

-
- Appendix A, Setting Up a Healthy Work Environment, contains guidelines to help you use your computer productively and safely. This appendix also instructs you on how to set up and use your computer to reduce your risk of developing nerve, muscle, or tendon disorders.
 - Appendix B, Reviewing System Interrupts, provides the interrupt settings used by the system.
 - Appendix C, Limited Warranty, includes warranty information about your PowerMate® Ve ETC Series Desktop Computer.

 **WARNING**

Prolonged or improper use of a computer workstation may pose a risk of serious injury. To reduce your risk of injury, set up and use your computer in the manner described in Appendix A, Setting Up a Healthy Work Environment.

TEXT CONVENTIONS

This guide uses the following text conventions.

- Warnings, cautions, and notes have the following meanings:

 **WARNING**

Warnings alert you to situations that could result in serious personal injury or loss of life.



CAUTION

Cautions indicate situations that can damage the hardware or software.



Notes give important information about the material being described.

- Names of keyboard keys are printed as they appear on the keyboard, for example, **Ctrl**, **Alt**, or **Enter**.
- Text or keystrokes that you enter appear in boldface type. For example, type **return** and press **Enter**.
- File names are printed in uppercase letters.

RELATED DOCUMENTS

In addition to this guide, the following printed documentation ships with your PowerMate Ve ETC Series system. See the NEC PowerMate Customers Catalog included with your system for other related documentation.

- *NEC PowerMate Ve ETC Series Quick Setup/ Quick-Reference Roadmap*
Quick Setup contains information for quickly getting your system up and running. Read this information to set up the system for the first time.

The Quick-Reference Roadmap gives you a look at the documentation, NEC tools, software applications, and services available to you.

- *How Does Your Workplace Measure Up?*

This brochure provides information for setting up and using your computer productively and safely. Information includes guidelines to reduce the risk of injury associated with using a computer.

- *Windows® 95 User's Guide*

This guide is a quick reference to information about using Windows 95.

Your system comes with the following online documentation on the hard disk:

- *PowerMate Ve ETC Series System Documentation*

This online documentation is your comprehensive source of information about your system. It contains a System Tour, User's Guide, Product Information Center, Option Installation Center, and Support Center.

- *Healthy Environment*

This is an online version of the "How Does Your Workplace Measure Up?" brochure.

- *Using Windows 95*

Contains information for using Windows 95.

Most of your application programs provide extensive online help. Some programs provide separate online user's guides for specific applications.

Windows 95 provides extensive online help and "wizards" to guide you through procedures.

1 Introducing Your Computer

 **WARNING**


Prolonged or improper use of a computer workstation may pose a risk of serious injury. To reduce your risk of injury, set up and use your computer in the manner described in Appendix A, Setting Up a Healthy Work Environment.

After setting up your computer, familiarize yourself with your system. The following sections provide a brief look at the front and back features of your system.

For a comprehensive source of information about your computer, see the online *NEC PowerMate Ve ETC Series System Documentation*. The online documentation can be accessed through NEC's PowerMate Online Documents group on the Windows 95 desktop.

FRONT FEATURES


The following figure shows the features on the front of the system. A brief description of the features follows the figure.

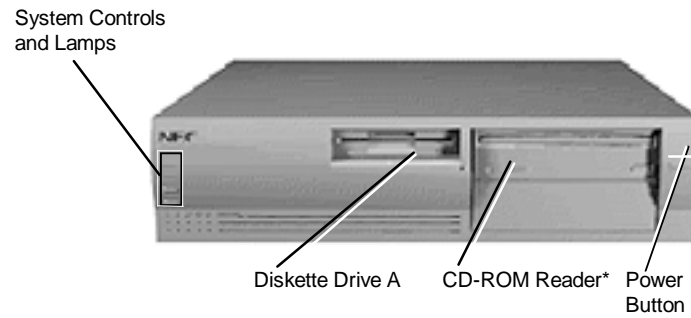

*Multimedia systems only.

Front features

The following figure depicts in detail the system lamps and controls called out in the previous figure.

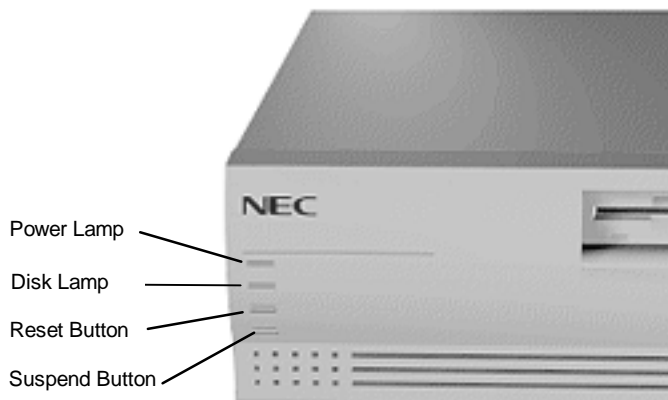

System controls and lamps

System Controls and Lamps

System controls let you select specific system operations. Lamps let you know the status of system operation. Your computer has the following controls and lamps:

- **Power button**
Press this button to turn on system power. Press it again to turn off the power.
- **Suspend button**
Lets you initiate a power-saving mode of operating your computer. Press this button to suspend system operation when you plan to be away from your computer for a short time. Press any key or move your mouse to resume system operation to where you stopped it. See “The Power Menu” in Chapter 4 for more information on the Suspend operation.

A blinking system unit power lamp lets you know that the system is in a power-saving mode.

- **Reset button**

The reset button lets you manually restart your system when it does not respond to keyboard commands.



CAUTION

Resetting your system can result in the loss of data. Press the reset button only when all other methods of restarting your computer fails.

- **Power lamp**

The power lamp indicates whether system power is on or off. It also lets you know if the system is operating in a power-saving mode.

A steady green lamp indicates that the power is on to all system components. A blinking green lamp indicates that the system is in Suspend mode with full power reduction.

- **Disk lamp**

Indicates if your hard disk is doing anything. A green lamp tells you that the hard disk is reading or writing data.




CAUTION

Do not turn off the system, unless absolutely necessary, while the disk lamp is lit. To do so can damage your hard disk or data.

Diskette Drive A

Diskette drive A loads and starts programs from a diskette. Diskette drive A is your primary “bootable” drive.

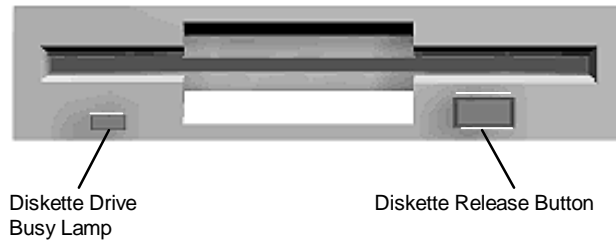

Diskette drive A features

Your diskette drive has the following features:

- Diskette drive busy lamp
Lights when your diskette drive is reading to or writing from a diskette.



CAUTION

To prevent damage to your diskette drive and data, do not turn off the system or remove a diskette while the diskette drive busy lamp is lit.

- Diskette release button
Press this button to release a diskette from the diskette drive.

CD-ROM Reader

An eight-speed CD-ROM reader is a standard feature in multimedia models. The CD-ROM reader is assigned as drive F.

Use the CD-ROM reader to load and start programs from a compact disc (CD). You can also use the CD-ROM reader to play your audio CDs.




You can boot your system from the CD-ROM with a bootable CD. To enable the system to boot from the CD-ROM, see "Boot Menu" in Chapter 4.

The CD-ROM reader operates at different speeds depending on whether the CD you are using contains data or music. This allows you to get your data faster and to see smoother animation and video.



The CD-ROM reader in your system might look different from the one shown here.

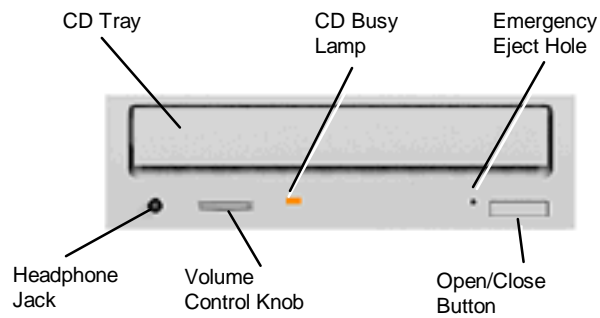

CD-ROM reader features


The CD-ROM reader has the following features:

- **Headphone jack**
Allows the connection of an optional set of headphones with a stereo mini-jack plug.
- **Volume control knob**
Lets you adjust the volume of an optional set of headphones.
- **Open/close button**
Opens or closes the reader's loading tray. Press this button when the computer power is on to insert or remove a CD into or out of the reader.
- **Emergency eject hole**
Allows the manual ejection of a CD if the eject function is disabled by software or if a power failure occurs.

-
- CD busy lamp
Lights when the reader is retrieving data, music, or graphics/audio from a CD. Do not eject the CD or turn off the system unit when the lamp is on.
 - CD tray
Provides a surface for loading a CD into the reader.
Press the open/close button to open or close the CD tray.


BACK FEATURES

On the back of your computer, you'll find external connectors, power supply features, and expansion board slots. The following figures show these features. (The slot location of the network board in your system might vary from the slot location shown in the figures.)

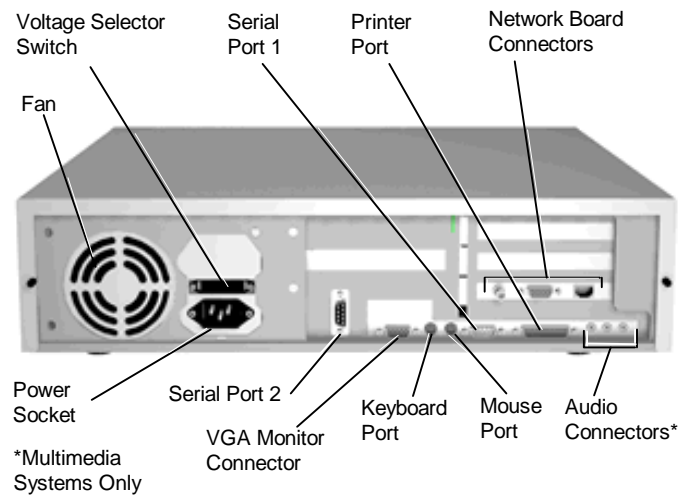

Rear features

The following figure identifies the audio connectors (multimedia systems only) and network board connectors called out in the previous figure.

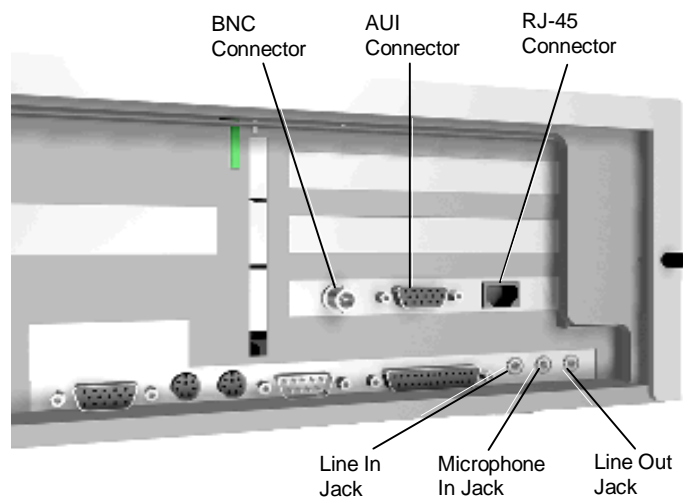

Audio and network board connectors

External Connectors

External connectors let you attach peripheral devices, such as a monitor, keyboard, mouse, and printer to your system. Your system has the following external connectors:

- **VGA monitor connector**
Attach the signal cable from your monitor to this connector. Supports an NEC MultiSync[®] monitor or other video graphics array (VGA)-compatible monitor with a 15-pin connector.

- **Audio connectors**

These connectors come integrated on multimedia models. The connectors include microphone in, line in, and line out jacks.

- The microphone in jack lets you connect a microphone for recording audio information in your data system files.
- The line in jack lets you connect a stereo audio device such as a stereo amplifier or a cassette or minidisc player for playback or recording.
- The line out jack allows you to connect an *amplified* output device such as powered speakers, stereo tape recorder, or an external amplifier for audio output. Use this jack to connect the stereo speakers that come with your system.

- { XE "Network board connectors" }Network board connectors

These connectors allow connection to an Ethernet network and communications with other computers. The board has three connectors for coaxial and twisted-pair network cabling.

- The BNC connector supports thin coaxial cables.
- The AUI connector supports thick coaxial cables.
- The RJ-45 connector supports twisted-pair 10BASE-T cables.

- **Printer Port**

Use this port to connect a parallel printer with a 25-pin connector to the system. The enhanced printer port supports Enhanced Capabilities Port (ECP) and Enhanced Parallel Port (EPP) modes.

- **Serial Ports**

Attach a serial device with a 9-pin connector to each serial port. Serial devices include a pointing device, serial printer, or modem. The buffered high-speed serial port supports transfer rates of up to 19.2 KB per second.

- **Keyboard port**

Attach your keyboard to this connector. The keyboard port supports a personal system (PS)/2[®]-compatible keyboard with a 6-pin mini DIN connector.

- **Mouse port**

Attach your mouse to this port. The mouse port supports a PS/2-compatible mouse.

Power Supply Features

Your system has the following power supply features:

- **Power supply fan**

Keep this area clear for proper ventilation. The power supply fan cools system components.

- **Voltage selector switch**

Sets the voltage for your system to 115 volts or 240 volts.



CAUTION

Set the switch correctly for the voltage in your area. Most wall outlets in the United States and Canada are 115 volts. Outlets in Europe, Australia, and Asia (except Taiwan) are 240 volts. Taiwan uses 115-volt outlets.


- **Power socket**

Connect your power cable to this socket.

SPEAKERS

Multimedia models come with a pair of high-quality, 8-watt stereo speakers that you can arrange to suit your work environment.

An AC adapter comes with the system. To take full advantage of your stereo speakers and system's sound capabilities, set up the speakers with the AC adapter. The speakers connect to the line out jack on the back of the system unit.

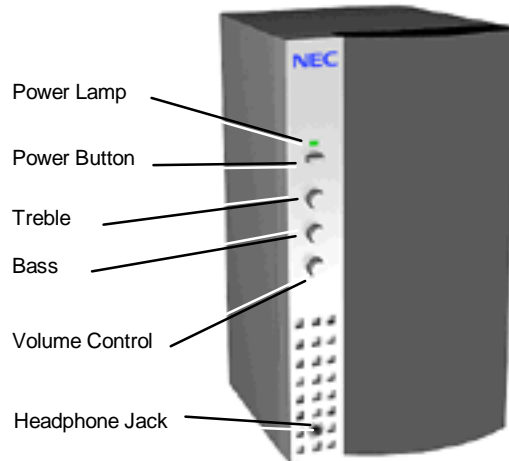

8-watt speaker

The right speaker features a power button, power lamp, volume knob, treble and bass controls, and headphone jack.

Adjust the speaker volume by using the volume control or by using the preinstalled sound system software. See “Integrated Peripherals” in Chapter 4 for more information. Use the sound software to balance the speakers.

The sound software is Voyetra Multimedia Sound Software. See Chapter 6 for information on using the Multimedia Sound Software.

MICROPHONE

The microphone allows you to record voice and sound into your computer data files. See Chapter 6 for information on recording sound using the Multimedia Sound Software.



Microphone

2 Getting Started

This chapter provides the information you need to start using your system. Information includes:

- **Using a Mouse**
If you are already familiar with using a mouse, skip this section.
- **About Your Online Documentation**
Read this section for an explanation of the online document format and where to access it on your computer.
- **Where to Go from Here**
Look at this section for a quick reference to what you can do and where you can get information.

USING A MOUSE

Use the mouse to quickly move around on the screen, to select menu items, and to choose functions specific to your software.

Use the mouse to

- **Click**
Clicking selects an object on your screen. To “click,” point to the object and press and release the left mouse button.
- **Double click**
Some actions require a double click to execute them. To “double click” an object, point to the object and press and release the left mouse button twice.

- Press

Pressing the mouse button holds an action until you release the mouse button.

- Drag

Dragging the mouse attaches the pointer to an object on the screen and allows you to highlight text or move an object. To drag an object, point to the object, press the left mouse button, and move the mouse to the new location.

Typical screen objects that you click or double click are icons, buttons, and menu options.



If your mouse pointer disappears, move your mouse in wide circles to bring it back into the screen.

For more information about your mouse, see your online User's Guide and your application documentation. Also included in the online documentation is information on cleaning your mouse.

ABOUT YOUR ONLINE DOCUMENTATION

Besides this printed user's guide, your system comes with online documentation conveniently available right from the Windows 95 desktop.

To access the online system documentation, locate NEC's PowerMate Online Documents group on the Windows 95 desktop. Double click NEC's PowerMate Online Documents icon. A welcome screen appears with the information you need to use the online documentation.

The *NEC PowerMate Ve ETC Series System Documentation* is a comprehensive source of information about your system. To help you find the information you need, the documentation is organized by topic and the following modules:

- System Tour
- User's Guide
- Product Information Center
- Option Installation Center
- Support Center.



Run the online NEC PowerMate Ve ETC Series System Documentation at the shipping default video resolution — 800 by 600 with 256 colors with small fonts.

Other online documents include:

- *Healthy Environment*

Access the document by clicking Start on the Windows 95 desktop and pointing to Programs and NEC Information Center.

- *Using Windows 95*

Access the document by clicking Start on the Windows 95 desktop and pointing to Programs, Modern Age Books, and Windows 95.

Most of your application programs provide extensive online help at the touch of a button (usually the Help button). Some programs provide separate online user's guides for specific applications. Windows 95 provides extensive online help and "wizards" to guide you through procedures.

WHERE TO GO FROM HERE

Once you have your system up and running, we suggest that you do the following:

- If you have options to install, see Chapter 3, *Installing Options*.
- Make the distribution media, see “Operating System Backup Utility” in Chapter 4.
- Read Appendix A, *Setting Up a Healthy Work Environment*.
- Take the System Tour in your online *NEC PowerMate Ve ETC Series System Documentation*.
- See the online User’s Guide in your online *NEC PowerMate Ve ETC Series System Documentation*.
- Install any applications. See the documentation that comes with the application.

See the following quick reference chart to find information about some of the things you might want to do:

Quick Reference to Information About Your Computer

WHAT YOU WANT TO FIND	WHERE TO FIND IT
Basic information about my computer	Online User's Guide in <i>NEC PowerMate Ve ETC Series System Documentation</i>
Ask A.N.D.I.E.™ and What On Earth	Online <i>System Tour in NEC PowerMate Ve ETC Series System Documentation</i> Printed <i>Ingenius Ask A.N.D.I.E and What On Earth documentation</i>
Microsoft® Office 97 Standard Edition	Online <i>Online help for each application</i>
Setting a password	"Setting a Password" in the online User's Guide (<i>NEC PowerMate Ve ETC Series System Documentation</i>) Chapter 4 in this guide
Using Windows	Online <i>Using Windows 95</i> Printed <i>Windows 95 User's Guide</i> The NEC PowerMate Customer catalog offers additional Windows 95 and MS-DOS 6.2 documentation.
Loading a CD	"Loading a CD" in the online User's Guide (<i>NEC PowerMate Ve ETC Series System Documentation</i>)
Playing a music CD	Multimedia models: AudioStation online help Chapter 6 in this guide
Using the suspend button	"Saving Power" and "Managing Power" in the online User's Guide (<i>NEC PowerMate Ve ETC Series System Documentation</i>)

Quick Reference to Information About Your Computer

WHAT YOU WANT TO FIND	WHERE TO FIND IT
Adding options	“Adding Internal Options” or “Adding External Options,” in the online Option Installation Center (<i>NEC PowerMate Ve ETC Series System Documentation</i>) Chapter 3 in this guide
Understanding power management	“Saving Power” and Managing Power” in the online User’s Guide (<i>NEC PowerMate Ve ETC Series System Documentation</i>)
Changing video drivers	“Changing Video Drivers” in the online User’s Guide (<i>NEC PowerMate Ve ETC Series System Documentation</i>)
Protecting my system from viruses	“Scan95” and “WebScan” in the online System Tour (<i>NEC PowerMate Ve ETC Series System Documentation</i>)
Using Desktop Management Interface	“Desktop Management Interface” in the online Product Information Center (<i>NEC PowerMate Ve ETC Series System Documentation</i>)
Using support services	“24-Hour Information Services” in the online Support Guide (<i>NEC PowerMate Ve ETC Series System Documentation</i>) Chapter 7 in this guide
Taking care of my system	“Taking Care of Your System” in the online User’s Guide (<i>NEC PowerMate Ve ETC Series System Documentation</i>)

3 Installing Options

Your PowerMate system supports a variety of industry-standard and NEC expansion options. There are many optional components available for you to customize your computer.

- monitors – your system supports the connection of a VGA-compatible monitor such as NEC MultiSync XE and XP series.
- SIMM memory – your system comes with 16 MB of Extended Data Out (EDO) RAM upgradeable to 128 MB of 32-bit, 60-ns high-speed memory using SIMM sticks.
- video DRAM – your system comes standard with 1 MB of video DRAM that provides resolutions of up to 1280 by 1024 with 16 colors, 1024 by 768 with 256 colors, 800 by 600 with 256 colors, or 640 by 480 with 64,000 colors.

With the upgrade to 2 MB of DRAM, your system supports resolutions up to 1280 by 1024 with 256 colors or 640 by 480, 800 by 600, and 1024 by 768 with 16 million colors.

- processor upgrade – a 320-pin zero insertion force (ZIF) socket on the system board supports the primary processor or an OverDrive processor for upgrades.


-
- drives – your system supports a total of four storage devices. In addition to the standard 3 1/2-inch 1.44 MB diskette drive, three other storage device slots are available. Hard disk configurations come with a hard disk drive installed and multimedia systems include an installed CD-ROM reader.

OPTION INSTALLATION PROCEDURES

Installation instructions for the following options are provided in this chapter:

- expansion boards
- SIMM memory upgrade
- video memory upgrade
- processor upgrade
- data storage devices
- external options.

Some of the options require locating the connector on the system board. See the following figure for connector locations.

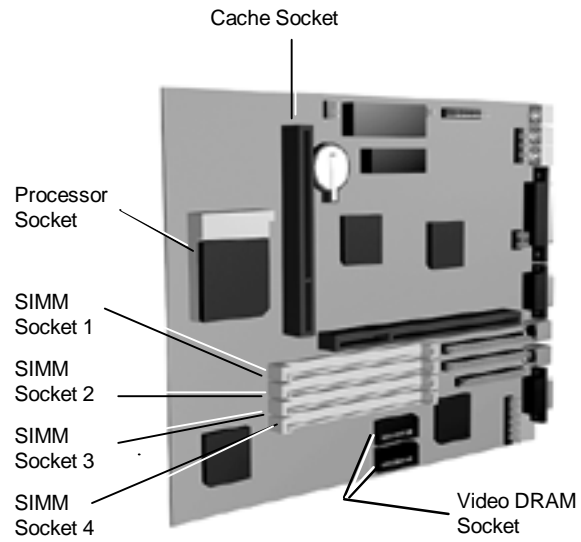

System board sockets and connectors

All options require the system cover removal. Procedures for removing the cover are explained later in this chapter.

Safety Precautions

Take care when working inside the system and when handling computer components. Avoid electric shock or personal injury by observing the following warning.

**WARNING**

Before removing the system unit cover, turn off the power and unplug the system power cable. Power is removed only when the power cable is unplugged.

Static electricity and improper installation procedures can damage computer components. Protect computer components by following these safety instructions.

**CAUTION**

Electrostatic discharge can damage computer components. Discharge static electricity by touching a metal object before removing the system unit cover.

- Avoid carpets in cool, dry areas. Leave an option, such as a board or chip, in its anti-static packaging until ready to install it.
- Dissipate static electricity before handling any system components (boards, chips, and so on) by touching a grounded metal object, such as the system's unpainted metal chassis.

If possible, use anti-static devices, such as wrist straps and floor mats.

-
- Always hold a chip or board by its edges. Avoid touching the components on the chip or board.
 - Take care when connecting or disconnecting cables. A damaged cable can cause a short in the electrical circuit. Misaligned connector pins can cause damage to system components at power-on.

When installing a cable, route the cable so it is not pinched by other components and is out of the path of the system unit cover. Prevent damage to the connectors by aligning connector pins before you connect the cable.

When disconnecting a cable, always pull on the cable connector or strain-relief loop, not on the cable.

Removing the System Unit Cover

The following procedure describes how to remove the system unit cover.

**WARNING**


Before removing the system unit cover, turn off the power and unplug the system power cable. Power is removed only when the power cable is unplugged.

1. Turn off and unplug the system unit.
2. Disconnect the keyboard, mouse, monitor, and any other external options (such as a printer) from the rear of the system unit.

 **CAUTION**

Electrostatic discharge can damage computer components. Discharge static electricity by touching a metal object before removing the system unit cover.

3. Remove the two cover screws from the rear of the system unit.

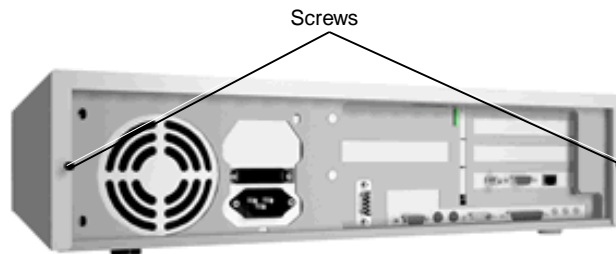

Removing cover screws

4. From the rear of the system, grasp the sides and slide the cover about an inch away from the front.



The cover fits tightly. Press the front edge of the cover to release it from the front panel. Also press against the rear panel to slide the cover one inch away from the front panel.




Releasing the cover

5. Lift the cover up and away from the system unit.

Replacing the System Unit Cover

Replace the cover as follows.

1. Align the tabs on the sides of the cover with the inside unit frame as you position the cover over the chassis.

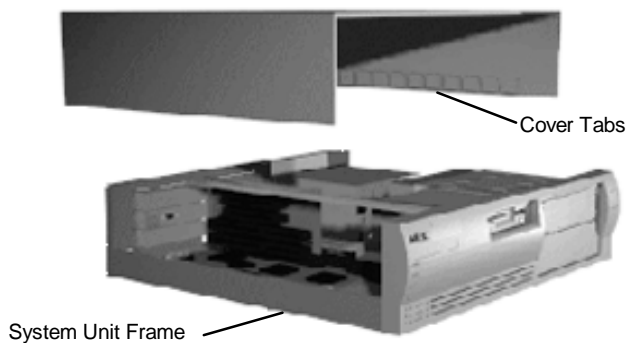

Replacing the system unit cover

-
2. Slide the cover forward to meet the front panel.



The cover fits tightly. If the cover does not slide all the way to the front panel, place one hand on the front of the unit while you slide the cover forward from the rear.

3. Secure the cover with the two cover screws removed earlier. (See “Removing the System Unit Cover,” earlier in this chapter.)
4. Reconnect all external peripherals.
5. Plug in your power cables.

EXPANSION BOARDS

Your PowerMate supports ISA Plug and Play expansion boards. With Plug and Play expansion boards, you can install a board in an expansion slot without changing the hardware settings. There are no system resource conflicts to resolve. Plug and Play automatically configures the board for the system.

Industry-standard 8- and 16-bit ISA, and 32-bit PCI expansion boards are supported in the system unit. ISA expansion boards can be Plug and Play or non-Plug and Play boards.


Locating Expansion Slots

The PowerMate system has four expansion slots as follows.

- two ISA slots (one slot occupied by the network board)
- one PCI slot
- one shared PCI/ISA slot.

ISA expansion slots support industry-standard 8-bit or 16-bit expansion boards. The shared PCI/ISA slot also supports a PCI expansion board. As noted in the following figure, full size expansion boards cannot be installed in the bottom slot and the inside slot. The bottom slot contains the half-length network board (not shown in the figure). The inside slot can be used for a three-quarter length board.

PCI expansion boards run at the system's processor speed. The PCI bus handles 32 bits of data at a time, being wider as well as faster than the standard ISA bus. PCI boards can send and receive data much faster which boosts system performance.

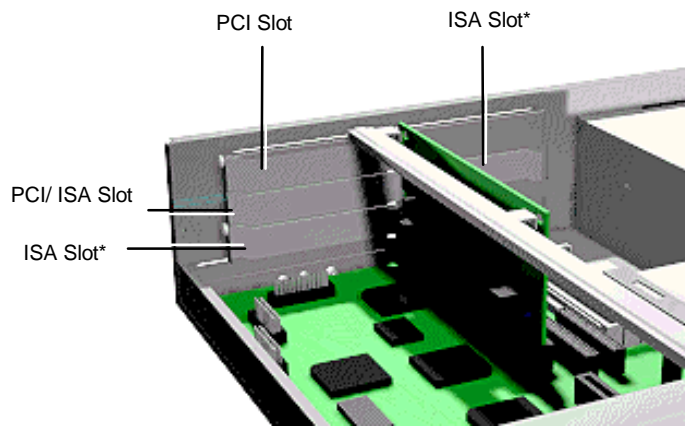

* Full size expansion boards cannot be installed in these slots.

Locating expansion slots

Installing an Expansion Board

Install expansion boards in the system as follows.


1. Remove the system unit cover.
2. Follow any preinstallation instructions that come with the expansion board (such as setting switches or jumpers on the board).
3. If installing a board in the inside expansion slot (next to the power supply), see “Installing an Expansion Board in the Inside Slot.” Otherwise, continue to the next step.
4. Remove the screw securing an expansion slot cover and remove the cover.

Save the screw for installing the expansion board. Save the slot cover for future use.

 **CAUTION**

A slot cover can damage the system board or any option board if it falls into the system. Take care to keep the slot cover from falling when removing the screw.

If the slot cover does fall into the unit, remove it before replacing the cover.

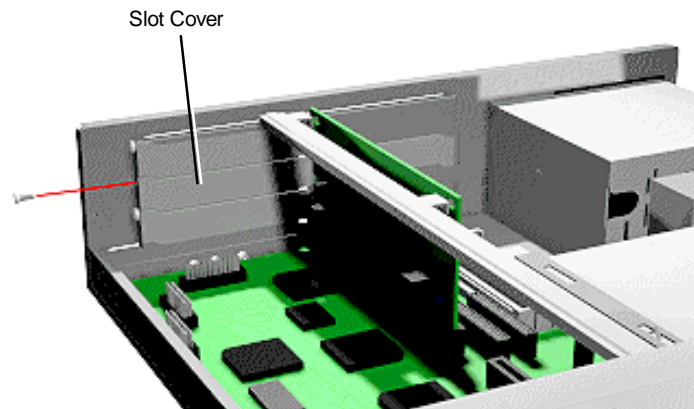


Removing a slot cover

5. Hold the board by its edges and insert it into the expansion slot (see the figure on the following page). Align full-size expansion boards with the guide rail at the front of the system unit.

Press the board firmly into the expansion slot connector. Gently rock the board from side-to-side to seat it into the connector.

6. Insert the screw removed earlier to secure the expansion board to the support bracket.

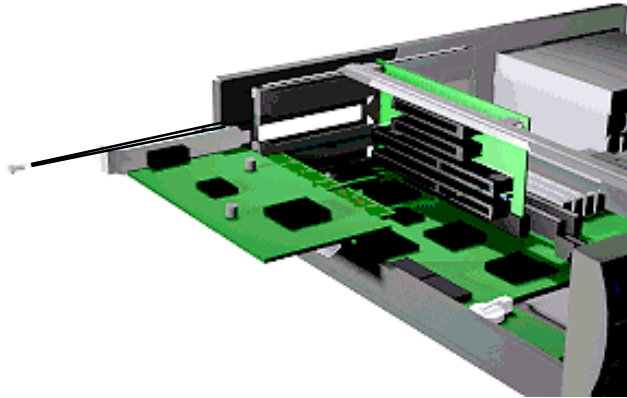

Installing the expansion board

7. Attach any signal cables required by the expansion board.
8. Replace the system unit cover.

Installing an Expansion Board in the Inside Slot

Use this procedure if installing an expansion board into the inside slot in your system.


1. Remove the system unit cover.
2. Follow any preinstallation instructions that comes with the expansion board (such as setting switches or jumpers on the board).
3. Remove the two screws that secure the slot cover support and expansion slot cover to the rear of the system.

Remove the slot cover support and slot cover from inside the system unit.



CAUTION

Take care not to drop the slot cover and support into the system.

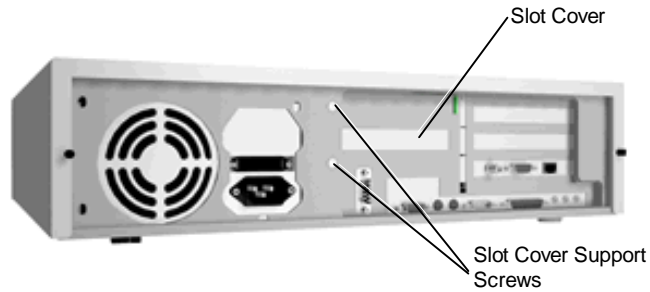


Removing the slot cover support screws

4. Hold the board by its edges, component side down and the bracket end facing the rear of the unit, and insert it into the expansion slot.

Press the board firmly into the expansion slot connector. Gently rock the board from side-to-side to seat it into the connector.

-
5. Hold the slot cover support over the expansion board bracket and replace the two screws removed earlier. The slot cover support secures the expansion board in place.

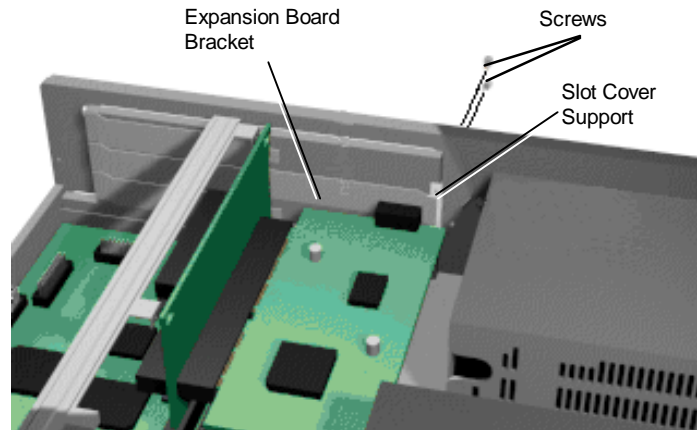

Attaching the slot cover support

6. Attach any signal cables required by the expansion board.
7. Replace the system unit cover.


Removing an Expansion Board

1. Remove the system unit cover as previously described.
2. Label and remove any cables connected to the board.



To remove a board from an inside slot, see "Removing an Expansion Board from the Inside Slot."

-
3. Remove the screw that secures the board to the support bracket.

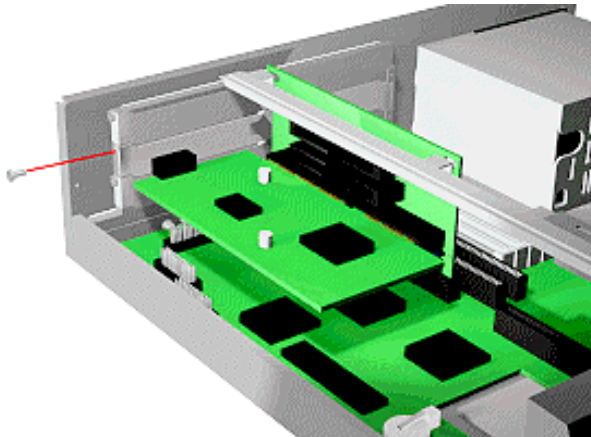

Removing the screw

4. Pull the board out of the connector. Gently rock the board from side-to-side to release it from its connector.
5. Replace the slot cover that was removed when the option board was installed.
6. Replace the system unit cover.

Removing an Expansion Board from the Inside Slot

Use this procedure if removing an expansion board from the inside slot in your system.

1. Remove the system unit cover.
2. Label and remove any cables from the expansion board.


-
3. Remove the two screws that secure the slot cover support and expansion board bracket to the rear of the system.

Remove the slot cover support from inside the system unit.



CAUTION

Take care not to drop the slot cover support into the system, as it could damage the system board.

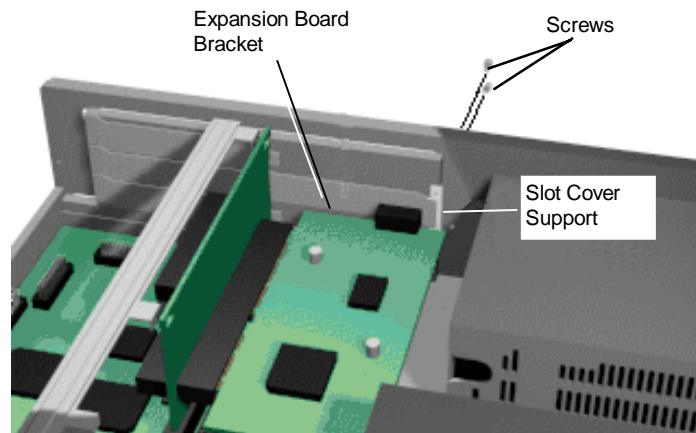

Removing the slot cover screw

4. Pull the board out of the connector. Gently rock the board from side-to-side to release it from the connector.
5. Replace the slot cover that was removed when the option board was installed.
6. Replace the system unit cover.

SIMM UPGRADE

Your PowerMate system comes with 16 MB of main system memory. Four sockets on the system board support up to 128 MB of high-speed memory using industry-standard, tin-plated, single in-line memory modules (SIMM).



You can install 60-ns EDO, parity or non-parity SIMMs into the SIMM sockets.

Supported SIMMs include:

- 1-MB by 32-bit (4-MB stick)
- 2-MB by 32-bit (8-MB stick)
- 4-MB by 32-bit (16-MB stick)
- 8-MB by 32-bit (32-MB stick).



CAUTION

To avoid corrosion between different metals, only use tin-plated SIMM sticks.

Checking System Memory

Use the following procedure to:

- check the memory installed in the system
- determine the SIMM configuration needed to increase memory



SIMM memory must be installed in pairs of the same memory type.

- identify SIMM sockets.
1. Locate the four SIMM sockets on the system board (see “Option Installation Procedures” earlier in the chapter.

If any cables block access to the SIMM sockets, label and disconnect them. If any boards block access to the sockets, remove them.
 2. Use the following table to determine the SIMM configuration needed to upgrade memory and to identify the sockets for SIMM installation.

Recommended Memory Upgrade Path


TOTAL MEMORY	SIMM		SIMM	
	SOCKET 1	SOCKET 2	SOCKET 3	SOCKET 4
8 MB	4 MB	4 MB	Empty	Empty
16 MB	4 MB	4 MB	4 MB	4 MB
16 MB	8 MB	8 MB	Empty	Empty
24 MB	4 MB	4 MB	8 MB	8 MB
24 MB	8 MB	8 MB	4 MB	4 MB
32 MB	8 MB	8 MB	8 MB	8 MB
32 MB	16 MB	16 MB	Empty	Empty
40 MB	4 MB	4 MB	16 MB	16 MB
40 MB	16 MB	16 MB	4 MB	4 MB
48 MB	8 MB	8 MB	16 MB	16 MB
48 MB	16 MB	16 MB	8 MB	8 MB
64 MB	16 MB	16 MB	16 MB	16 MB
64 MB	32 MB	32 MB	Empty	Empty
72 MB	4 MB	4 MB	32 MB	32 MB
72 MB	32 MB	32 MB	4 MB	4 MB
80 MB	8 MB	8 MB	32 MB	32 MB
80 MB	32 MB	32 MB	8 MB	8 MB
96 MB	16 MB	16 MB	32 MB	32 MB
96 MB	32 MB	32 MB	16 MB	16 MB
128 MB	32 MB	32 MB	32 MB	32 MB

Removing a SIMM

Use the following procedure to remove a SIMM.

CAUTION: Reduce static discharge by touching the system's metal chassis.

1. Remove the system unit cover.
2. Locate the SIMM sockets (see “Option Installation Procedures” earlier in the chapter).
3. Press the metal clips at the outer edges of the socket away from the SIMM.
4. Push the SIMM away from the locking tabs and remove it from the socket.

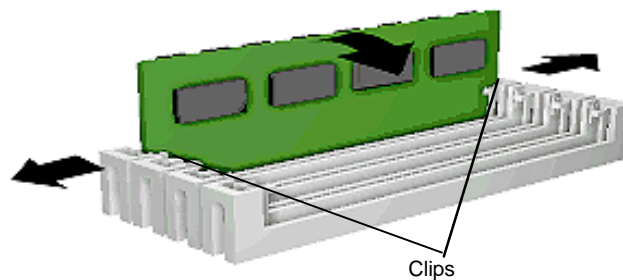

Removing a SIMM

Use the following procedure to install a SIMM stick.

Installing a SIMM

Install a SIMM as follows.

1. Remove the system unit cover.
2. Locate the SIMM sockets (see “Option Installation Procedures” earlier in the chapter).

Remove any currently installed SIMMs that are not needed.




CAUTION

Before installing a SIMM, reduce static discharge by touching the system's metal chassis.

3. Align the notched end of the SIMM with the socket end closest to the front of the system.
4. Insert the SIMM at an angle into the socket.

-
5. Tilt the SIMM towards the locking tabs using equal pressure at the ends of the SIMM until it locks into the socket.

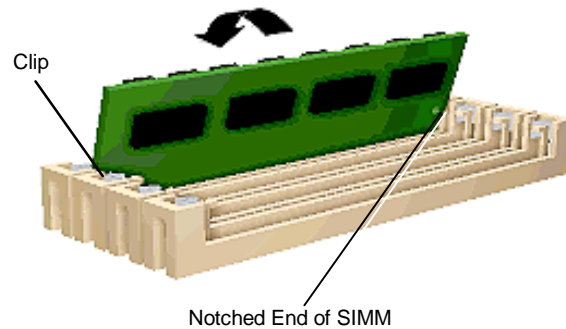

Inserting the SIMM

6. Replace any cables or boards that may have been removed.
7. Replace the system unit cover.

VIDEO UPGRADE

Upgrade the video memory to 2 MB by adding two 512-KB by 16-bit video DRAM modules as follows.

1. Remove the system unit cover as previously described.
2. Locate the video DRAM sockets (see “Option Installation Procedures” earlier in this chapter).


If any expansion boards are obstructing your view of the sockets, remove the boards (see “Removing an Expansion Board”).



CAUTION

Reduce static discharge by touching the system's metal chassis.

3. Align the notched ends of the module and socket. Using equal pressure, gently press the module into the socket. Repeat for the second module.

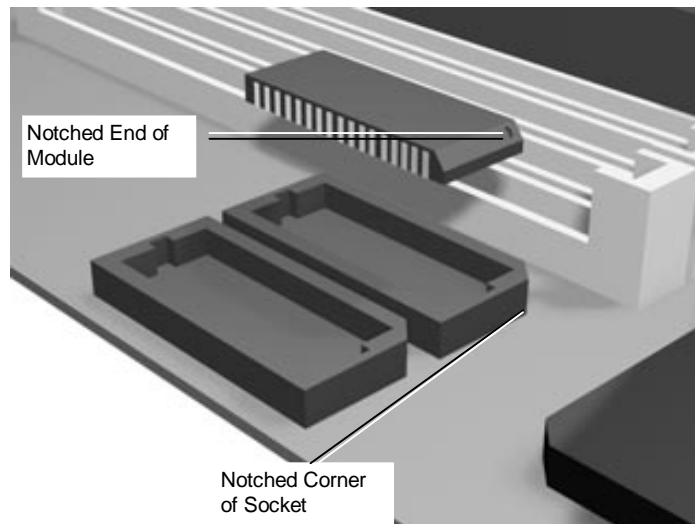

Aligning the video DRAM module with the socket

4. Replace any boards that were removed.
5. Replace the system unit cover.

PROCESSOR UPGRADE

The zero-insertion force (ZIF) socket accepts pin-grid-array (PGA) processors, such as the primary processor or an OverDrive™ processor.



CAUTION

Incorrect installation of the processor can damage the processor, system board, or both. Follow the installation instructions carefully.

The system requires a heatsink on the OverDrive processor. Verify that you have the correct heatsink for the processor.

When upgrading the processor, first remove the processor currently installed in the system, then install the OverDrive processor.

Removing the Processor

Remove the processor installed on the system board as follows.

1. Remove the system unit cover.
2. Locate the processor socket (see “Option Installation Procedures” earlier in this chapter).

If any expansion boards are obstructing the socket, remove the boards.

3. Release the heatsink clip from the tabs on the socket.
4. Release the processor by pulling the lever on the socket away from the socket and as far back as it goes without forcing.



CAUTION

Before picking up the processor, reduce static discharge by touching the metal frame of the system unit. See "Safety Precautions" in this chapter.

5. Lift the processor out of the socket.

Installing the Processor

1. Remove the processor currently in the system (see previous procedure).



CAUTION

Before picking up the processor, reduce static discharge by touching the metal frame of the system unit.

2. Align the notched corner of the processor with the alignment corner in the socket and insert the processor.
3. Swing the lever down to lock the processor into the socket.



CAUTION

Remember to either reattach the heatsink used with the old processor or install the new heatsink supplied with the OverDrive processor.

-
4. Check to see if the newly installed processor requires a system board jumper change (see Chapter 5, Setting System Board Jumpers).
 5. Replace any boards removed during this procedure.
 6. Replace the system unit cover.

DATA STORAGE DEVICES

The system board in the computer supports the following storage devices:

- up to two diskette drives, including the standard 1.44-MB diskette drive
- up to four IDE devices such as IDE hard disks and an IDE CD-ROM reader.

Other storage devices might require the installation of a compatible controller board.

Locating Device Slots

Your system has four storage device slots (see the figure on the following page):


- a 3 1/2-inch accessible device slot which contains the standard 1.44-MB diskette drive
- one internal hard disk drive slot (1-inch high, thin-height) with an IDE hard disk installed
- two accessible device slots (1.6-inch high, half-height)

In multimedia models, one accessible device slot contains the standard CD-ROM reader.

Other accessible devices (diskette drive, tape drive, CD-ROM reader) can be installed in the 5 1/4-inch slots.

A hard disk with a 5 1/4-inch form factor can be installed in a 5 1/4-inch slot.

The following figure shows the device slot locations.

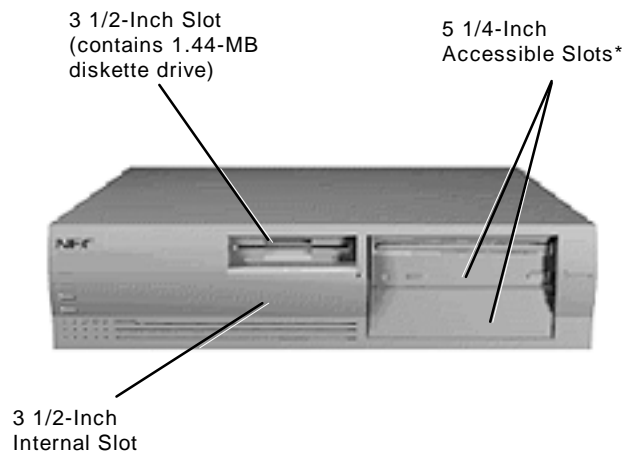

*Top 5 1/4-inch slot is unavailable in some configurations.

Locating device slots

Preparing the Device

Before installing a storage device in the system, follow any preinstallation instructions that come with the device. For example, check the following:

- Diskette drive — remove any termination on the optional diskette drive. See the documentation that comes with the drive.
- IDE device — check the jumper settings on the device before installing it. See the documentation that comes with the device for jumper setting information.

An IDE device, such as an IDE hard disk or IDE CD-ROM reader, must be set correctly as the first (master) or second (slave) device on the IDE channel.


The standard IDE hard disk is set as the master device on the primary IDE connector. The CD-ROM reader in multimedia models is the master device on the secondary IDE connector.

Device Cables

The cables used for installation of optional storage devices include:

- diskette drive signal cable
- IDE signal cables
- system power cables.

The diskette drive and IDE cables shipped with the system each support two devices. Cable connector locations on the system board are shown in the following figure.

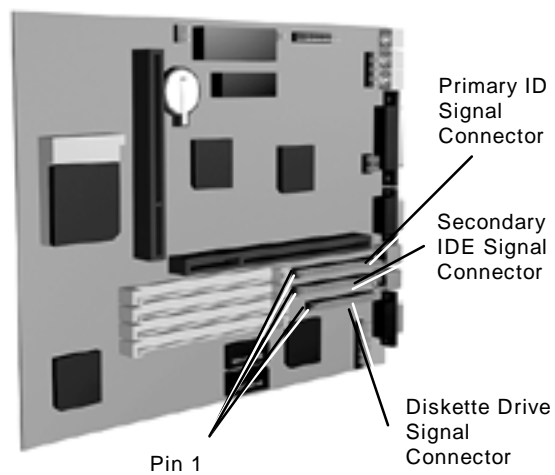

System board cable connectors


Diskette Drive Signal Cable

A three-connector diskette drive signal cable comes attached to the system board and to the standard 1.44-MB diskette drive.

The installation of a second diskette drive in your system does not require the replacement of the existing diskette drive signal cable. Connect an optional diskette drive to the middle connector on the standard diskette drive signal cable.

The colored edge of the cable goes to pin 1 on the cable connector. Align the red edge of the cable with pin 1 (the notched end) on the drive connector.

The following figure shows a three-connector diskette drive signal cable.

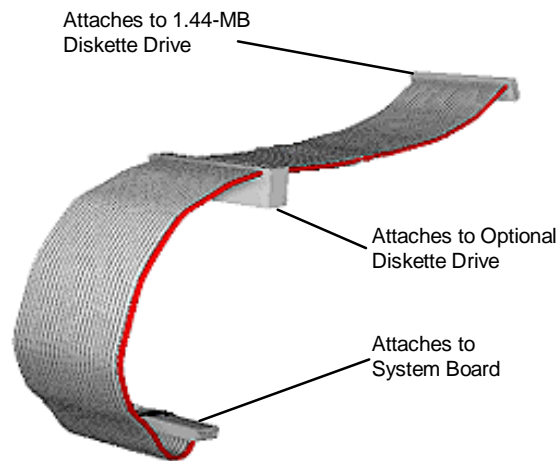

Optional diskette drive signal cable


IDE Signal Cables

Hard disk systems come with a three-connector IDE interface cable attached to the primary IDE connector. Multimedia systems come with a second IDE cable connected to the CD-ROM reader and to the secondary IDE connector.

Each IDE connector on the system board supports two IDE devices. The addition of an IDE device to an IDE connector does not require the replacement of the existing IDE signal cable.

If installing an optional IDE CD-ROM reader, connect it to the secondary IDE connector. The primary (fast) IDE port should be reserved for hard disks.


The following figure shows a typical three-connector IDE cable. If the IDE cable is not keyed with a connector tab, align the colored edge of the cable with the pin 1 side of the drive connector.

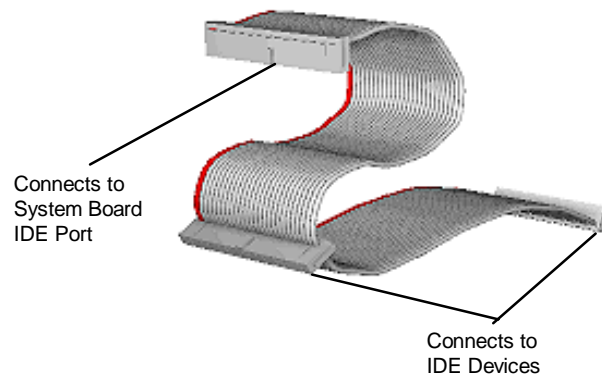

Optional IDE cable connectors

System Power Cables

Power cables come from the power supply and are attached to the standard storage devices. System power cables vary in length and provide connector sizes to accommodate a variety of supported storage configurations. Power cable connectors are keyed to fit only in the correct position. The following figure shows the power cable connectors.

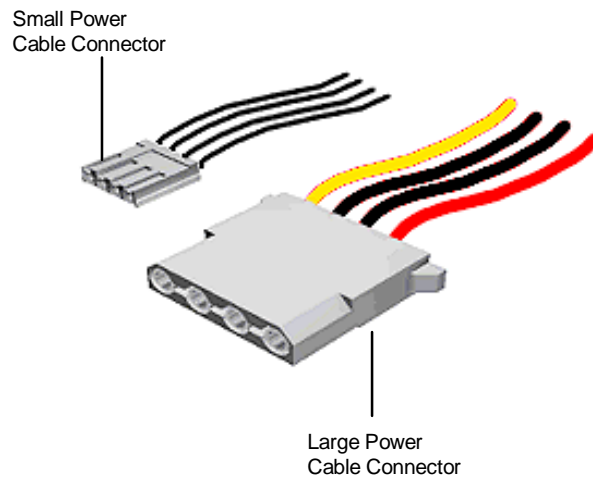

Power cable connectors

Cabling Storage Devices

All storage devices require a power and signal cable connection. Devices shipped with the system are already connected.

Procedures are provided for the following optional devices:

- IDE device – IDE hard disk drive or CD-ROM reader
- diskette drive – 1.2-MB drive.


Cabling an IDE Device

Use the following procedure to cable an IDE device.

1. Connect the IDE signal cable connector to the connector on the IDE device.

Take care to prevent bending drive connector pins. Align the IDE cable connector as shown in the following figure.

2. Locate an available power connector coming from the power supply.
3. Connect the appropriate power cable to the power connector on the IDE device.

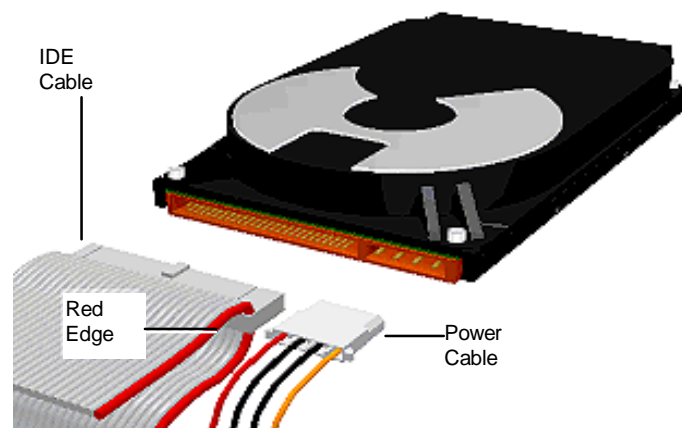


Connecting IDE device cables

4. If you are installing an IDE CD-ROM reader, also connect the audio cable (see the instructions that come with the reader).

Cabling a Diskette Drive

Use the following procedure to cable a diskette drive.

1. Connect the diskette drive signal cable connector to the signal connector on the diskette drive as shown in the following figure.
2. Locate an available power connector.
3. Connect the power cable to the power connector on the device.

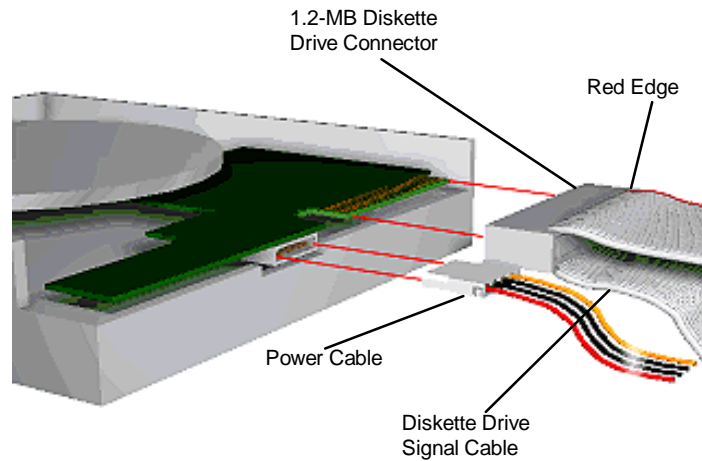

Connecting 1.2-MB diskette drive cables

Installing Storage Devices

The following subsections describe how to install 3 1/2-inch and 5 1/4-inch drives. The installation procedures include:

- removing the 3 1/2-inch drive bracket
- installing a 3 1/2-inch drive
- removing the front panel
- installing a 5 1/4-inch device
- replacing the front panel
- replacing the 3 1/2-inch drive bracket.

Removing the 3 1/2-Inch Drive Bracket

The 3 1/2-inch drive bracket containing the diskette drive must be removed before installing a 3 1/2-inch or 5 1/4-inch device.


Remove the 3 1/2-inch drive bracket containing the standard 1.44-MB diskette drive as follows.



Configurations that come with a hard disk already installed have a 3 1/2-inch hard disk drive located in the lower slot of the bracket.

1. Remove the system cover.
2. Remove the screw securing the drive bracket to the chassis (see the following figure).
3. Slide the bracket to the rear of the chassis to release it from the three bracket tabs.

-
4. Carefully lift the drive bracket up and place it on top of the power supply. Avoid pulling on the installed drive cables.

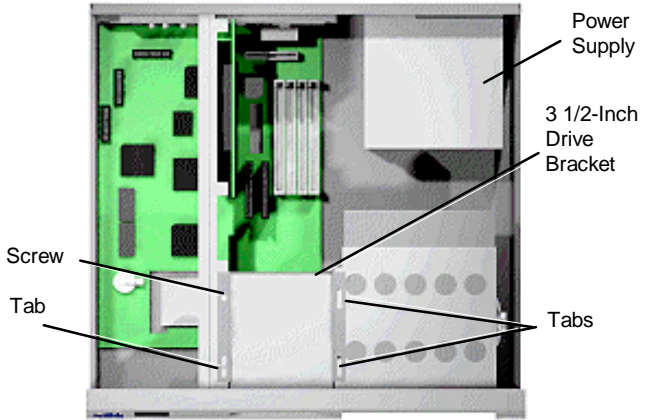

Removing the 3 1/2-inch drive bracket

3 1/2-Inch Drive Installation

Use the following procedure to install a hard disk drive into the drive bracket.

1. Remove the system unit cover.
2. Remove the 3 1/2-inch drive bracket from the system unit (see “Removing the 3 1/2-Inch Drive Bracket”).
3. Follow the preinstallation instructions that come with the device, such as setting jumpers and switches.
4. Insert the hard disk drive so that the connectors extend out of the bracket on the same end as the standard diskette drive connectors.
5. Align the holes in the hard disk drive with the holes in the bracket.
6. Secure the device to the bracket with the four screws, two to a side, that come with the device.



Securing a 3 1/2-inch drive


-
7. Connect the drive cables.
 8. Replace the 3 1/2-inch drive bracket (see “Replacing the 3 1/2-Inch Drive Bracket”).

Removing the Front Panel

Remove the front panel only if you are installing a 5 1/4-inch device. The front panel does not need to be removed if you are installing a 3 1/2-inch hard disk drive.

If you are installing a 3 1/2-inch hard disk drive, see “Installing the 3 1/2-Inch Drive.”


1. Remove the system unit cover as previously described.
2. Remove the front panel by releasing the four tabs from the back of the front panel.

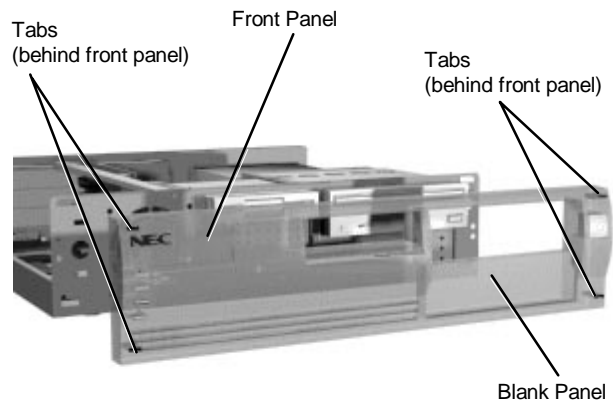

Removing the front panel

3. Identify the slot for the device being installed.

-
4. Remove the blank panel from the selected slot by pressing the panel tabs from inside the front panel and pushing the blank panel out.

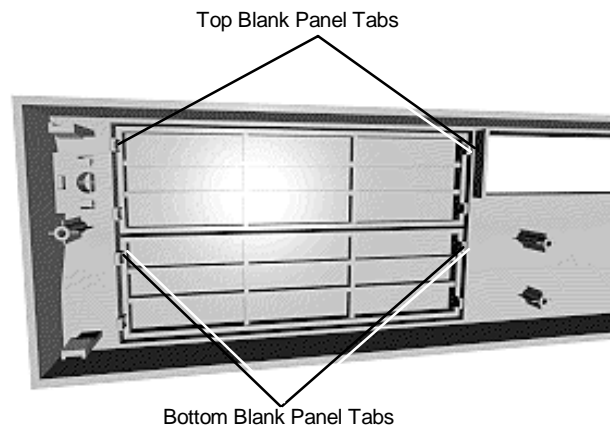

Locating the blank panel tabs

5. Remove the perforated metal plate from the selected slot on the chassis by pulling the metal plate back and forth until it releases.
6. Install the device (see “Installing the 5 1/4-Inch Device”).

Installing the 5 1/4-Inch Device

Install an accessible device into the device cage as follows.

1. Remove the 3 1/2-inch drive bracket from the system unit (see “Removing the 3 1/2-Inch Drive Bracket”).
2. Remove the front panel (see “Removing the Front Panel”).
3. Follow the preinstallation instructions that come with the device, such as setting jumpers and switches.




If the 5 1/4-inch device comes with drive rails, do not attach them. Remove any rails already attached. See the documentation that comes with the device.

4. From the front of the system, insert the device, connector end first, into the device slot.



To easily access device connectors for cabling, do not insert a 5 1/4-inch device all the way into the slot.

5. Connect the device cables.
6. Align the holes in the device with the holes in the cage.
7. Secure the device to the cage with the four screws, two to a side, that come with the device. See the following figure.

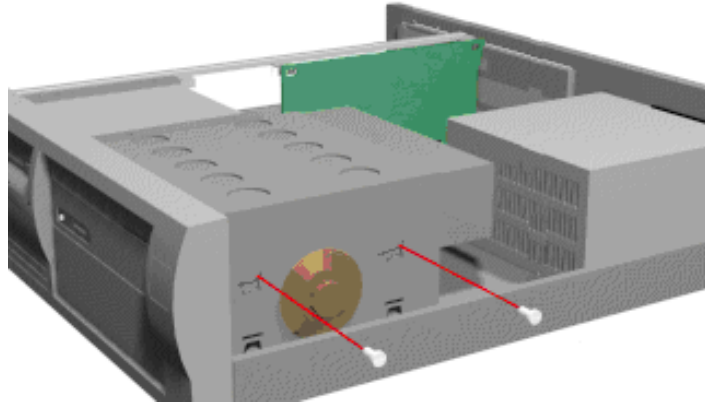


Securing the device

8. Replace the drive bracket (see “Replacing the 3 1/2-Inch Drive Bracket”).

Replacing the Front Panel

Replace the front panel only after it has been removed for a 5 1/4-inch device installation. If installing a 5 1/4-inch device, see “Installing the 5 1/4-Inch Device.”

1. Align the four front panel tabs with the holes in the front of the system unit.
2. Evenly press the front panel into position until the tabs lock the panel in place.

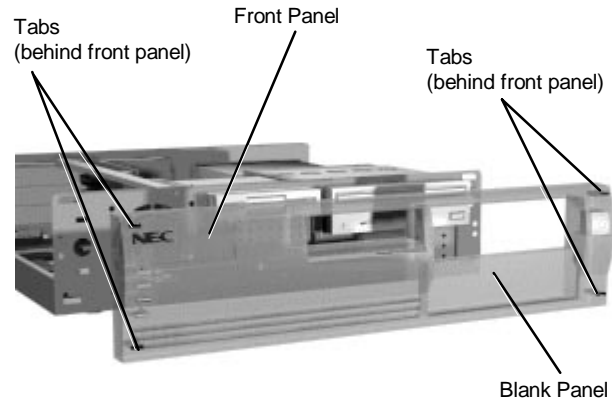


Aligning the front panel

3. Continue to Step 5 in “Replacing the 3 1/2-Inch Drive Bracket.”

Replacing the 3 1/2-Inch Drive Bracket

When replacing the 3 1/2-inch drive bracket, take care to prevent pulling and loosening the cable connections.

1. Place the 3 1/2-inch drive bracket in the 3 1/2-inch device slot.
2. Slide the 3 1/2-inch drive bracket toward the front of the chassis so that the tabs secure the bracket.
3. Use the previously removed bracket screw to secure the bracket in place.

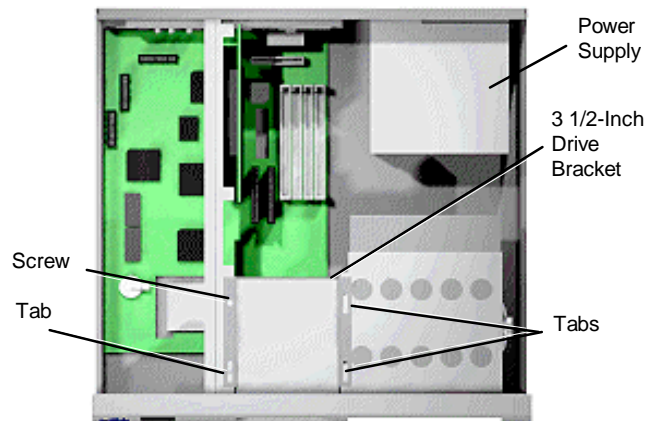

Securing the 3 1/2-Inch drive bracket

4. Replace the front panel (see “Replacing the Front Panel”).
5. Replace the system unit cover.



If a 1.2-MB diskette drive was installed, remove the protective cardboard insert from the drive.

6. Run the Setup program to set the new configuration.

ADDING EXTERNAL OPTIONS

This subsection includes installation procedures for the following external options:

- parallel printer
- serial devices.


Connecting a Parallel Printer

Connect a parallel printer to the system as follows.



Before connecting a printer to the system, be sure the printer is set up correctly. Follow the setup instructions that come with the printer.

1. Turn off power to the system and printer.
2. Connect the printer cable to the printer port on the rear of the system unit (see the following figure).
3. Secure the cable with the screws provided.
4. Connect the other end to the printer.
5. If your printer requires ECP support, see “Integrated Peripherals Menu” in Chapter 4.

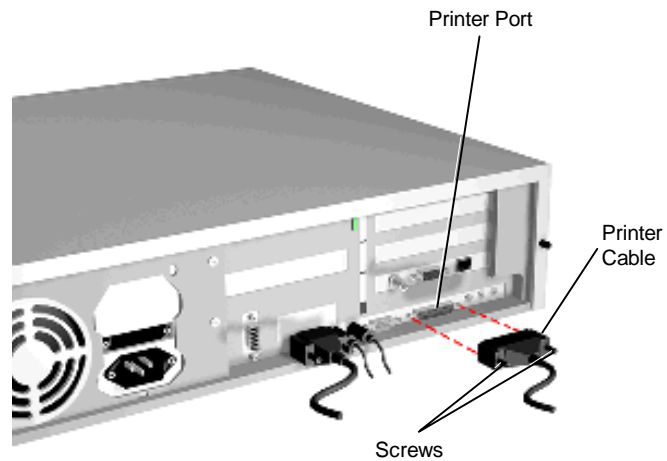

Connecting a printer cable

Connecting an RS-232C Device


Connect an RS-232C device to the system as follows.



Before connecting a serial device to the system, be sure the serial device is set up correctly. Follow the setup instructions that come with the option.

1. Turn off power to the system and to the serial device.
2. Connect one end of the serial cable to one of the two serial ports on the rear of the computer.

-
3. Secure the cable with the screws provided.
 4. Connect the other end to the serial device.

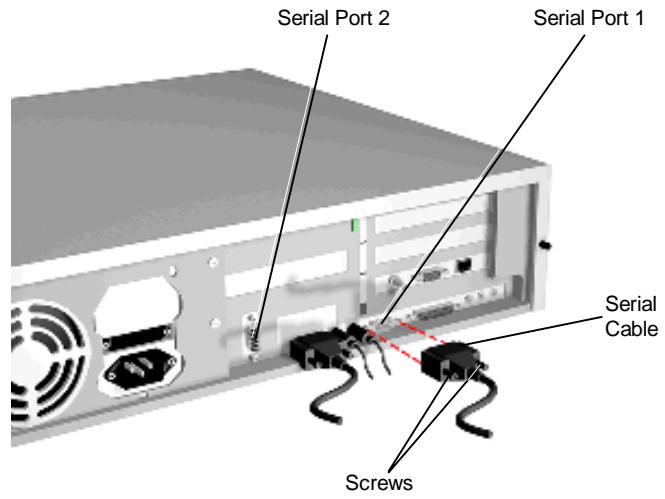

Connecting an RS-232C cable

4 Setting System Parameters

This chapter describes the Setup utility program that allows you to enter system configuration information and control special features of the system.



Your system ships from the factory with the correct system parameters for your configuration. Unless you add optional hardware, you do not need to run Setup to operate your system.

However, you might wish to run the Setup utility to set features that customize your system, such as security features.

System configuration information is stored in nonvolatile memory. Nonvolatile memory retains its data when system power is turned off. Nonvolatile memory in your system is a complementary metal-oxide semiconductor (CMOS) chip. A lithium battery supplies continuous power to CMOS memory and maintains configuration information when system power is off.



NEC recommends that you print out or write down your current Setup parameters and store the information in a safe place. This lets you restore your system to the current parameters if you ever need to replace the battery.

THE SETUP UTILITY

The Setup utility lets you view and set system parameters. Use the Setup utility program to

- set the time and date.
- update or check system parameters when you add or remove expansion options.
- change or set power management features.
- correct a hardware discrepancy when the Power-On Self-Test (POST) displays an error message and prompts you to run Setup.
- check the installation of optional memory by comparing the amount of memory installed with the amount of memory displayed by Setup.
- change certain system operating parameters, such as boot device sequence and keyboard parameters.
- configure system connections for peripherals such as your diskette drive, hard disks, and devices connected to the printer port and serial ports.
- customize your system with security features such as passwords, diskette drive restriction, virus check reminder, and system backup reminder.
- set system parameters in the event that your system board was replaced.

HOW TO START SETUP

To start the Setup utility, follow these steps:

1. Turn on or reboot your system. Setup displays the following message:

Press <F2> to enter SETUP

2. Press **F2**. Setup's Main Menu window appears similar to the following screen.



The screen shown is typical of your system. The actual items on the Main Menu depend upon the hardware installed in your system.

PhoenixBIOS Setup — Copyright 1992-96 Phoenix Technologies Ltd.

Main	Advanced	Security	Power	Boot	Exit
System Time			[10]:19:20]		Item Specific Help
System Date			[03/14/1997]		
Diskette A			[1.44 MB, 3 ½"]		<Tab>, <Shift-Tab>, or
Diskette B			[Not Installed]		<Enter> selects field.
> IDE Adapter 0 Master			C: 1280 Mb		
> IDE Adapter 0 Slave			None		
> IDE Adapter 1 Master			CD-ROM		
> IDE Adapter 1 Slave			None		
Video System			[EGA/VGA]		
> Memory Cache					
> Memory Shadow			[Enabled]		
> Boot Options					
> Numlock			[Auto]		
System Memory			640 KB		
Extended Memory			15 MB		

F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults
ESC Exit ←→ Select Menu Enter Select > Sub-Menu F10 Previous Values

Main Menu

HOW TO USE SETUP

The Setup utility has a Main Menu window and five top-level menus with submenus.

The Main Menu window contains the following areas:

- A title line — the top line of the Main Menu. This line displays the Setup utility name and copyright message.
- The menu bar — the line under the Setup title line. The menu bar contains five top-level menus that you can choose to set system parameters.
- A Main Menu summary window — the center area on the left side of the screen. This area provides a summary of Main Menu Setup parameters. You can set some Main Menu parameters directly from this window or you can set them from the Main menu option in the legend bar.
- The Field Help window or Item Specific Help — the area on the right side of the screen. This help area provides help information for the Setup option currently selected.
- The legend bar — the area at the bottom of the screen. The legend bar provides a summary of command keys for using Setup.
- The General Help window — a window that appears any time during Setup when you press **F1** or **Alt H**. This help window provides two pages of general information about using Setup.

The following sections describe how to use the Main Menu window to set system parameters.

The Menu Bar

The menu bar at the top of the Main Menu window lists these menus:

- **Main** — Use this menu for basic system configuration. For example, select “Main” to set the system time, system date, diskette drives, and video parameters. Use this menu to check memory parameters.
- **Advanced** — Use this menu to set serial port and printer port addresses and interrupts, and to enable/disable the system’s diskette drive controller and dual-IDE controllers.

The Advanced menu also provides menu items for setting parity and for setting parameters for large disks (for example, to use large disks with Windows NT™).

Some of the Advanced features are accessible only with a Supervisor password when the Supervisor password is set.

- **Security** — Use this menu to set User and Supervisor Passwords and the Backup and Virus-check reminders.
- **Power** — Use this menu to configure Power Management features.
- **Exit** — Use this menu to exit the current menu.

To select an option from the menu bar, use the left and right ← → arrow keys.

See “Exiting Setup” in this chapter for a description on exiting the Main Menu.

The Legend Bar

Use the keys listed in the legend bar on the bottom of the Setup menu to make your selections or exit the current menu. The following table describes the legend keys and their alternates.

Setup Key Functions

KEY	FUNCTION
F1 or Alt-H	Displays the General Help window (described later in this chapter).
Esc	Exits the menu.
← or → arrow keys	Selects a different menu.
↑ or ↓ arrow keys	Moves the cursor up and down for item selection.
Tab or Shift-Tab	Cycles the cursor up and down for item selection.
Home or End	Moves the cursor to the top or bottom of the window.
Page Up or Page Down	Moves the cursor to the next or previous page.
F5 or -	Selects the Previous Value for the field.
F6 or + or Space	Selects the Next Value for the field.
F9	Loads the Default Configuration values for this menu.
F10	Loads the Previous Configuration values for this menu.
Enter	Executes a command or selects a submenu.
Alt-R	Refreshes the screen.

Selecting a Menu Item

To select a menu item, use the arrow keys to move the cursor to the field you want. Then use the value keys (F5, -, F6, +, or space bar) to cycle through the value for that field. The Save Values command in the Exit Menu saves the values currently displayed in all the menus.

Displaying a Submenu

To display a submenu, use the arrow keys to move the cursor to the submenu you want. Then press **Enter**. A pointer (a right-pointing triangle) marks all selectable submenus.

Getting Help

A Field Help window or Item Specific Help window on the right side of each menu displays the help text for the currently selected Setup option. It updates as you move the cursor to each new field.

Pressing **F1** or **Alt H** on any menu brings up the General Help window that describes the legend keys and their alternates.

The scroll bar on the right of any window indicates that there is more than one page of information in the window. Use **Page Up** and **Page Down** to display all the pages. Pressing **Home** and **End** displays the first and last page.

Press **Esc** to exit the current window.

MAIN MENU OPTIONS

The following table lists and describes the available parameters when you select the Main menu in the legend bar. Other Main Menu parameters are available by selecting submenus.

Parameters available directly from the Main Menu summary window have a right-pointing triangle next to the parameter. Use the arrow keys to move the cursor to the parameter and press **Enter** to select a submenu.

See the sections following the table for a description of Main Menu parameters from the summary window.

Main Menu Parameters

PARAMETER	OPTIONS	DESCRIPTION
System Time	HH:MM:SS	Sets the system time.
System Date	MM/DD/YYYY	Sets the system date.
Diskette A: Diskette B:	360KB, 5 1/4" 1.2MB, 5 1/4" 720KB, 3 1/2" 1.44MB, 3 1/2" (default A) 2.88MB, 3 1/2" Not Installed (default B)	Selects the type of diskette drive in your system.
IDE Adapter	Auto (default)	Described in the following sections.
Video System	Monochrome EGA/VGA (default) CGA 80x25	Selects the default video device.
Memory Cache		Described in the following sections.
Memory Shadow	Enabled (default)	Described in the following sections.
Boot Options		Described in the following sections.
NumLock	Auto (default)	Described in the following sections.
System Memory	Automatically detected by the system	Displays the amount of conventional memory detected at power-on.
Extended Memory	Automatically detected by the system	Displays the amount of extended memory detected at power-on.

IDE Adapters

IDE adapters control the IDE devices, such as IDE hard disk drives and IDE CD-ROM readers, in your system. Your system uses two IDE controllers integrated on the system board.

Setup supports up to four IDE devices, with an IDE adapter for each of the following configurations:

- 1 Master
- 1 Master, 1 Slave
- 2 Masters
- 2 Masters, 1 Slave
- 2 Masters, 2 Slaves

The master/slave combination for a standard hard disk configuration is “1 Master.” If you add a hard disk to the fast IDE port (IDE1 connector), the combination becomes “1 Master, 1 Slave.” Change the jumper setting on the IDE device to set the device to master or slave (see the documentation that comes with the device).

For multimedia systems, the IDE hard disk and CD-ROM reader are both “Masters.” The hard disk drive is the “Master” on the primary connector and the CD-ROM reader is the “Master” on the secondary connector. If you add an IDE hard disk to the system, the combination becomes “2 Masters, 1 Slave.”



If you change the CD-ROM reader setting in the multimedia configuration, the CONFIG.SYS and AUTOEXEC.BAT require changes as well.

Select the IDE Adapter option configuration directly from the Main Menu summary window. Available options include:

- IDE Adapter 0 Master
- IDE Adapter 0 Slave
- IDE Adapter 1 Master
- IDE Adapter 1 Slave.

IDE Adapter 0 configures the fast IDE port (IDE1 connector), and IDE Adapter 1 configures the standard IDE port (IDE2 connector).

Each IDE Adapter parameter has a right-pointing arrow to the left of it. Selecting the option displays IDE hard disk parameters. Select an IDE Adapter option and set parameters for each hard disk separately.

Use the following table to configure the hard disk. If your IDE hard disk features auto IDE type detection, you need only to select the Autotype Fixed Disk parameter. The system then automatically detects the hard disk type and sets the remaining parameters.



If your IDE hard disk features auto IDE type detection, you need only to select the Autotype Fixed Disk parameter. The system then automatically detects the hard disk type and sets the remaining parameters.

IDE Hard Disk Parameters

PARAMETER	OPTIONS	DESCRIPTION
Type	1 to 39 User Auto	Selecting 1 to 39 fills in all remaining fields with values for predefined disk type. "User" prompts the user to fill in remaining fields. When "Auto" is selected the BIOS automatically sets the drive type.
Cylinders	1 to 16,384	Specifies the number of cylinders.
Heads	1 to 16	Specifies the number of read/write heads.
Sectors/Track	1 to 63	Specifies the number of sectors per track.
Write Precomp	0 to 65534 None	Specifies the number of the cylinder at which to change the write timing.
Multi-Sector Transfers	2, 4, 8, 16, Sectors Disabled	Specifies the number of sectors in multi-sector transfers.
LBA Mode Control	Enabled Disabled (default)	Sets LBA Mode Control on or off.
32 Bit I/O	Enabled (default) Disabled	Sets 32 bit I/O to on or off.
Transfer Mode	Standard Fast PIO1, PIO2, PIO3, PIO4	Specifies the transfer mode.

Memory Cache

For memory caching parameters, select Memory Cache directly from the Main Menu summary window. See the following table for a description of memory cache parameters.



CAUTION

Incorrect settings can cause the system to malfunction.

Memory Cache Parameters

PARAMETER	OPTIONS	DESCRIPTION
External Cache	Enabled (default) Disabled	Sets the state of external cache.
Cache Video BIOS area	Enabled (default) Disabled	Controls caching of the video BIOS area.
Caching Memory Regions	Enabled Disabled (default)	Default is disabled. Cache shadows optional memory. ROM located in specified segments of memory and can improve performance. CAUTION: Some add-in cards, particularly with on-board firmware, do not work properly when shadowed.

Memory Shadow

Memory Shadow is set to enable as the default. Various options set to disable can also be enabled.

Boot Options

Your system might require a Supervisor password to set Boot parameters. Select “Boot Options” directly from the Main Menu summary window to display the “Boot Options” menu.

Use the legend keys to make your selections and exit to the Main Menu. Use the following table to select your boot options.

Boot Option Parameters

PARAMETERS	OPTIONS	DESCRIPTION
Summary Screen	Enabled (default) Disable	Displays system configuration at the end of boot-up.
Floppy Check	Enabled (default) Disabled	Verifies diskette type during bootup. Disabling speeds boot time.
Last Boot Fail	3 (default) User-selectable settings Disabled	Sets the number of times you can attempt to boot the system. If the system fails to boot on the set number of tries, the "Previous Boot Incomplete" message appears and the system boots with default settings. The default setting, 3, gives you three tries to boot the system before the "Previous Boot Incomplete" message appears.

NumLock

Select "NumLock" directly from the Main Menu summary window to display the Keyboard Features menu.

Use the legend keys to make your selections and exit to the Main Menu. Use the following table to configure the keyboard parameters.

Keyboard Features Parameters

PARAMETERS	OPTIONS	DESCRIPTION
Numlock	Auto (default) On Off	On or Off turns Num Lock on or off at bootup. Auto turns Num Lock on if it finds a numeric key pad.
Keyboard Auto-Repeat Rate	Fast (default) Medium Slow	Sets the delay time after the key is held down and before it begins to repeat the keystroke.
Keyboard Auto-Repeat Delay	1/4 sec 1/2 sec (default) 3/4 sec 1 sec	
Key Click	Enabled Disabled (default)	Turns audible key click on or off.

THE ADVANCED MENU

Accessing the Advanced menu might require a Supervisor password. When you select the Advanced menu, you also can access the Integrated Peripherals menu.

The following table explains the Advanced menu parameters.



CAUTION

Setting menu items in the Advanced menu to incorrect values can cause your system to malfunction.

Advanced Menu Parameters

PARAMETER	OPTIONS	DESCRIPTION
Plug & Play OS	No Yes (default)	Select "Yes" if you are using a Plug & Play capable operating system such as Windows 95. Otherwise, set to "No."
Reset Configuration Data	No (default) Yes	If Windows 95 or the ICU has difficulty configuring the system, try setting this parameter to "Yes" to clear all of the configuration data. This parameter resets automatically to "No" to reboot.
ISA graphics device installed	No (default) Yes	Set to "Yes" if other system devices need to know you have an ISA graphics device installed.
Big Memory Mode	Normal (default) Alternate	Selects the method the BIOS uses to report memory sizes over 64 MB to the operating system. Select "Normal" for MS-DOS and Windows. Select "Alternate" for OS/2® and Windows NT™.
Large Disk Access Mode	DOS (default) Other	Select DOS if you have DOS. Select Other if you have another operating system such as Novell Netware or UNIX. A large disk is one that has more than 1024 cylinders, more than 16 heads, or more than 63 tracks per sector.

Integrated Peripherals Menu

Select the "Integrated Peripherals" menu on the Advanced Menu to configure the connections between the system processor and the I/O ports (serial port 1, serial port 2, and the printer port), the diskette drives, and hard disk controllers.



A Supervisor password might be required to select parameters from the Integrated Peripherals menu.

Use the legend keys to make your selections and exit to the Main Menu. Use the table that follows to configure your peripherals.

Integrated Peripherals Parameters

FEATURE	OPTIONS	DESCRIPTION
COM A Port COM B Port	Disabled User-selectable settings Auto	Selects a unique address and interrupt request for the listed COM ports. Auto selects the next available combination. Factory settings: COM A default: 3F8, IRQ4 COM B default: 2F8, IRQ3
LPT Port	Disabled 378, IRQ 7 (default) User-selectable settings Auto Remove	Selects a unique address and interrupt request for the LPT port. Auto selects the next available combination.
LPT Mode	Output only (default) Remove	Enables parallel port to function normally (Output only), bidirectionally, or in an enhanced capabilities port (ECP) mode. Check your printer documentation to set the correct LPT mode for your printer.
ECP Channel	DMA 0 DMA 1 DMA 3	Available when ECP is selected for the LPT mode.

Integrated Peripherals Parameters

FEATURE	OPTIONS	DESCRIPTION
Diskette Controller	Enabled (default) Disabled	Enables the on-board diskette drive controller.
Local Bus IDE Adapter	Both (default) Disabled Primary	Enables the on-board IDE controllers. "Both" enables the primary (fast) channel and secondary (standard) channel. "Primary" enables only the primary (fast) channel.
PS/2 Mouse	Enabled (default) Disabled	Enables/disables PS/2-style mouse.
On-board Sound	Stereo with SRS (default) Stereo Disabled	This parameter is only available when the BIOS detects integrated audio on the system board. When the audio is detected, stereo with surround sound is the default. If playing an audio file with SRS built-in, use the Stereo setting. Choose Mono when stereo sound is not desired.

THE SECURITY MENU

Selecting "Security" from the Main Menu displays a menu with system security options.



You can enter the Setup program with either a User or Supervisor password. However, more Setup choices are available with a Supervisor password.

The User Password can only be set after setting a Supervisor Password.



CAUTION

The features that you set in the Security menu affect the features that appear on the Security menu as well as on other Setup menus.

Enabling “Supervisor Password” requires a password for entering Setup. Passwords are not case sensitive.

Pressing **Enter** at either Set Supervisor Password or Set User Password on the menu displays a Set Password dialog box with the following prompts:

```
Enter new password: [      ]  
Re-enter new password: [    ]
```

To set a password, type the password and press **Enter**.
Reenter your password and press **Enter**.



If you forget your password, see “Clearing Your Password” in Chapter 5.

See the following table for a description of the security features you can select. Use the legend keys to make your selections and exit to the Main Menu.

System Security Options

FEATURE	OPTIONS	DESCRIPTION
Supervisor Password	Disabled (default) Enabled	Sets to Enabled when entering a password at Set Supervisor Password.
Set Supervisor Password	Up to seven alphanumeric characters	Pressing Enter displays a dialog box for entering the supervisor password. This password gives FULL access to Setup menus.
User Password	Disabled (default) Enabled	Must set to Enabled to set a User password.
Set User Password	Up to seven alphanumeric characters	Pressing Enter displays the dialog box for entering the user password. This password gives RESTRICTED access to Setup menus. Requires the prior setting of a Supervisor password.
Password on Boot	Disabled (default) Enabled	<p>Enabled requires a password on boot (cold boot only — no password required for warm boot). Requires the prior setting of a Supervisor and/or User password.</p> <p>If disabled, password(s) are required for entering Setup but are not required for booting.</p> <p>If a Supervisor password is set and this option is disabled, the BIOS boots without asking for a password.</p>
Diskette Access	User (default) Supervisor	Supervisor setting restricts the use of diskette drives to a supervisor. Requires setting the Supervisor password.
Fixed Disk Boot Sector	Normal (default) Write Protected	Write protected helps prevent viruses. When write protected, operating systems (and viruses and application programs) which attempt to modify the boot sector will not be able to do so.

System Security Options

FEATURE	OPTIONS	DESCRIPTION
System Backup Reminder	Disabled (default) Daily Weekly	When a schedule is specified, displays a message during bootup asking (Y/N) if you have backed up the system or scanned it for viruses.
Virus Check Reminder	Monthly	Message returns on each boot until you respond with "Y". Daily displays the message on the first boot of the day, weekly on the first boot after Sunday, and monthly on the first boot of the month.

THE POWER MENU

Selecting "Power" from the menu bar displays a screen with the power management parameters described in the following table.

A power management system reduces the amount of energy used after specified periods of inactivity. The Power menu supports a Full-On state, a Standby state with partial power reduction, and a Suspend state with full power reduction. See "Power Management" in the online User's Guide for additional information about managing power.

Use the Power menu to specify your settings for Power Management. Use the following table to make your selections.



To disable all power management features, set advanced power management (APM) to Disabled. See the following table to set power management parameters.

Power Management Parameters

FEATURE	OPTIONS	DESCRIPTION
APM	Enabled (default) Disabled	Advanced power management (APM) allows APM-aware software to better manage power savings.
Keyboard Wakeup	Enabled (default) Disabled	Allows keyboard activity to wake up system.
Mouse Wakeup	Enabled (default) Disabled	Allows mouse activity to wake up system.
Power Management Mode	Customize (default) Disabled Maximum Medium Minimum	Maximum, Medium, and Minimum set power-management options with predefined values. Select Customize to select your own level of power management.
IRQs to Monitor	Enabled (default) Disabled	Controls if activity on IRQs 3, 4, 5, 7, 9, 10, and 11 keeps the system awake or wakes the system from a deep sleep. The IRQs are shipped enabled.
Sleep Timeout	15 min (default) Disabled User selectable	Inactivity period required before partial power shutdown (Standby User selectable mode).
Deep Sleep Timeout	15 min (default) Disabled	Inactivity period required after Sleep timeout to maximum power. User selectable shutdown (Suspend mode).
Video in Sleep Mode	Off (default) On	Off turns monitor off in Sleep mode.

THE BOOT MENU

Selecting “Boot” from the menu bar displays the following list of boot devices:

- Diskette Drive
- CD-ROM reader
- Hard Drive

THE EXIT MENU

Selecting “Exit” from the menu bar displays the following exit options. Note that **Esc** does not exit this menu. You must select one of the items from the menu or menu bar to exit.

- Save Changes & Exit
- Discard Changes & Exit
- Get Default Values
- Load Previous Values
- Save Changes.

Save Changes & Exit

After making your selections on the Setup menus, always select Save Changes to Non-Volatile RAM (NVRAM) to make them operative.

Unlike standard RAM memory, NVRAM is sustained by a real-time clock chip and stays on after you turn your system off.

After you save your selections, the program displays this message:

```
Values have been saved to CMOS!  
Continue
```

If you attempt to exit without saving, the program asks if you want to save before exiting.

During bootup, Setup attempts to load the values you saved in NVRAM. If the values saved in NVRAM cause the system boot to fail, reboot and press **F2** to enter Setup. In Setup, you can load the ROM default values (as described in “Get Default Values”) or try to change the values that caused the boot to fail.

Discard Changes & Exit

Use this option to exit Setup without recording any changes you may have made.

Get Default Values

To load all the default Setup values in the Setup menus, press **F9** (setup defaults). The program displays this message:

```
Default values have been loaded!  
[continue]
```

If, during bootup, the BIOS program detects a problem in the integrity of values stored in NVRAM, it displays these messages:

```
System CMOS checksum bad - run SETUP  
Press <F1> to resume, <F2> to Setup
```

The CMOS values have been corrupted or modified incorrectly, perhaps by an application program that changes data stored in CMOS.

Press **F1** to resume the boot or **F2** to run Setup with the ROM default values already loaded into the menus. You can make other changes before saving the values to NVRAM.

Load Previous Values

If, during a Setup session, you change your mind about your selections and have not yet saved the values to NVRAM, you can restore the values you previously saved to NVRAM.

Selecting Load Previous Values on the Exit menu updates all the selections and displays this message:

```
Previous values have been loaded!  
[continue]
```

Save Changes

Save Changes saves all the selections without exiting Setup. You can return to the other menus if you want to review and change your selections.

RESTORING SYSTEM SOFTWARE

The Product Recovery CD that comes with your system contains everything you need to:

- restore individual files on your system
- completely recover your system.

You also need a CD-ROM drive (standard with multimedia systems) to run the Product Recovery CD.

The Product Recovery CD lets you copy individual program files from the Product Recovery CD if any of your factory-installed software files become corrupted. You can also restore all your system software files to their original factory-installed state if your preinstalled software becomes unusable.

The following information describes the available restoration options and how to restore your system software if it becomes necessary.

System Restore Options

System restore options available to you are as follows:

- Restore Individual Files

This option lets you select the files and directories you want restored from the Product Recovery CD. Use this option to restore only a few files or to have total control of which files and directories are restored to their factory state. This option is also useful for restoring AUTOEXEC, CONFIG, and INI files.

This procedure is done in Windows 95. The restore individual files procedure requires booting the system from the hard disk, entering Windows, and inserting the CD into the CD-ROM reader.

- System Recovery

Use this option as a last resort when your preinstalled software becomes unusable and you cannot reboot from the hard disk. This option requires booting from the Recovery CD.

The System Recovery option provides a *full* system recovery. This option lets you restore your system to its original factory-shipped state. Full System Recovery reformats hard drive C and *erases all information* on the disk. It then restores files on drive C from the System Recovery CD.

The following sections describe each of these options. If your preinstalled software becomes unusable, see “Recovery Options” later in this chapter.

Restore Individual Files

Restore individual files to your hard disk as follows:

1. With system power on, insert the Product Recovery CD into the CD-ROM reader.
2. On the Windows 95 desktop, double click “My Computer.”
3. Double click the CD-ROM reader “(F:)” icon. The NEC System Restore screen appears.
4. At the System Restore screen, click “OK” to restore individual files. A license agreement appears.
5. Read the license agreement and click “I agree” to continue. The Restore Individual Files screen appears. The screen is divided into two areas:
 - 1 Select files to restore — This is where you select the specific files you want to restore.
 - 2 Check list of files to be restored — This area lets you check the files you selected for restoration.

The following sections explain how to use the Restore Individual Files screen. Complete all sections to restore your files.

Selecting Files

Under “Select files to restore,” select your files as follows:

1. From the left dialog box, highlight the directory that contains the files you want to restore.
2. From the right dialog box, highlight the files you want to use:
 - To restore all of the files listed, click “Select all of the above.” This highlights and selects all the files listed.
 - To restore only some of the files listed, click the file you want and highlight it.
3. Once your files are highlighted, select the appropriate button under the list. The buttons include:
 - Add selected files to list — click this button to add the selected files to the list of files to be restored.
 - Clear all selections — click this button to deselect the files listed.
4. Repeat steps 1 through 3 to select files from other directories. Continue until all the files you want restored are selected.

Checking Selected Files

To continue the restoration process, check the files to be restored as follows.

1. Look at the list of files in the “Check list of files to be restored” area of the screen.
2. If you need to add any files to the list, go back to the preceding section and repeat those steps.

-
3. If you need to remove any files from the list, do so as follows.
 - To remove only selected files, highlight the file name and click “Delete item in list.” This method lets you remove one item at a time.
 - To remove the entire list, click “Clear list.”

Once the list is set, continue to the next section.

Restoring the Files

Complete the restoration process as follows.

1. In the “Restore the files from the CD” area of the screen, locate the two options:
 - Restore the files listed — this option lets you proceed with the restoration and continue to the next step. Go to the next step to complete the restoration.
 - Cancel — click this option to cancel the restoration. This returns you to the NEC System Restore menu.
2. To proceed with the restoration, click “Restore the files listed.” When the restoration is completed, a file restore message appears.
3. Click “OK.”
4. If you replaced any Windows system files, exit Windows and reboot the system.

System Recovery

If your preinstalled software becomes unusable and you cannot reboot from the hard disk, you can restore your system to its initial shipping configuration.

System Recovery *erases* and resets the hard disk *completely* before reinstalling the files.



CAUTION

If you are doing a Full System Recovery, ALL files on the hard drive will be deleted and replaced by the factory installed files.

You will lose your data and you will need to reinstall any software you installed yourself.

A Full System Recovery should only be used if the preinstalled software is unusable. If you are unsure about using this procedure, call the NECCSD/ETC Technical Support Center. The support personnel will help you determine if this is your situation. See Chapter 7 for the NECCSD/ETC technical support telephone number.

The System Recovery requires booting from the Product Recovery CD. Use the following procedure to start the recovery procedure. Follow it carefully.

1. With system power on, insert the Product Recovery CD into the CD-ROM reader.
2. Turn system power off.

-
3. Turn on system power. The System Recovery screen provides information about the restore process. Read this information.

You can choose one of the following two options:

- Continue — Proceeds with the recovery program.
 - Quit — Exits the recovery program back to MS-DOS.
4. Click “Continue” to proceed with the System Recovery. A license agreement appears.
 5. Read the license agreement and click “I agree” to continue. The Start System Recovery screen appears.
 6. The Start System Recovery screen states that all the files will be removed and that this process is irreversible. At the “Are you sure?” prompt, click “Yes” to continue.

The system files are restored and the System Recovery Completed screen appears. Click “OK” to end. Remove the System Recovery CD.

5 Setting System Board Jumpers

This chapter provides jumper setting information for configuring your system for a particular system requirement. Situations that require changing the jumper settings include the following:

- upgrading your processor
- resetting your password.



CAUTION

Jumpers are set correctly at the factory for your configuration.

If your system requires a jumper change, change only the setting for that condition. Otherwise, keep the settings at their factory settings.

CHANGING PROCESSOR JUMPER SETTINGS

The following procedure explains how to locate and change the jumper setting when you upgrade your processor.




WARNING:

The system power must be off before changing a jumper setting.

1. Power off and unplug the system and any peripherals.
2. Remove the system unit cover (see “Removing the System Unit Cover” in Chapter 3).
3. Locate these jumpers on the system board (see the following figure).
 - Processor/Bus Speed jumpers
 - Processor Voltage jumpers

You may have to remove any installed expansion boards to access the jumpers (see “Removing an Expansion Board” in Chapter 3).

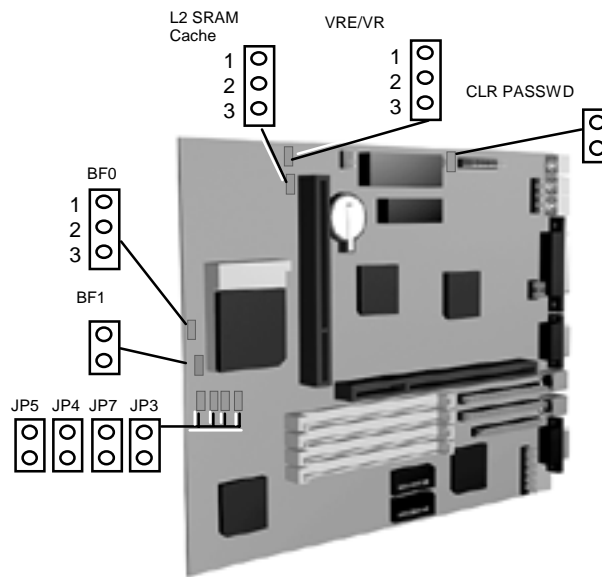

Locating system configuration jumpers

4. Set the Processor/Bus Speed jumpers for your processor upgrade. Change the jumper setting by lifting the plastic block and placing it on the appropriate pins as shown in the following figure. Use needle-nose pliers to move a jumper.

Processor/Bus Speed	JP5 JP4 JP7 JP3	BF1 BF0
75-MHz Processor/ 50-MHz Bus Speed		1
90-MHz Processor/ 50-MHz Bus Speed		
100-MHz Processor/ 66-MHz Bus Speed		
120-MHz Processor/ 60-MHz Bus Speed		
133-MHz Processor/ 66-MHz Bus Speed		
150-MHz Processor/ 60-MHz Bus Speed		
166-MHz Processor/ 66-MHz Bus Speed		
1-2 VRE	1	
2-3 VR		

Processor/bus speed jumper settings

5. Reinstall any removed expansion boards (see “Installing an Expansion Board” in Chapter 3).
6. Replace the system unit cover (see “Replacing the System Unit Cover” in Chapter 3). Reconnect the power cables and peripheral devices.
7. Power on the system.

CLEARING YOUR PASSWORD

If you forgot your password, use the following procedure to clear your current password and to set a new one.

1. Power off and unplug the system and any peripherals.

 **WARNING**

The system power must be off before removing the cover and changing a jumper setting.


2. Remove the system unit cover (see “Removing the System Unit Cover” in Chapter 3).
3. Locate the Password Clear jumper pins on the system board (see the figure “Locating system configuration jumpers” earlier in the chapter).

You may have to remove any installed expansion boards to access the jumpers (see “Removing an Expansion Board” in Chapter 3).

4. Set a jumper on the Password Clear jumper pins.

Password Clear

Normal (default) 

Password Clear 

Password clear jumper

5. Replace the system unit cover (see “Replacing the System Unit Cover” in Chapter 3).

-
6. Connect system power cables and monitor.
 7. Power on the system. The system lets you boot your computer.
 8. Power off, unplug the system and monitor, and remove the cover.
 9. Remove the jumper block from the Password Clear jumper pins.
 10. If you removed any expansion boards, replace them (see “Installing an Expansion Board” in Chapter 3).
 11. Replace the system unit cover.
 12. Reconnect the power cables and peripheral devices.
 13. Power on the system.

Run Setup to set a new password (see Chapter 4, Setting System Parameters).

6 Using Voyetra Sound Software

Your PowerMate multimedia configuration ships with Voyetra[®] multimedia sound software. Use this software to adjust the volume of your speakers, record sound using a microphone, play, edit, and record .WAV files, play music on your CD-ROM, and record, play or edit Musical Instrument Digital Interface (MIDI) sequences and save them as .MID files.

This chapter explains how to use these multimedia sound software features. In addition, you can access the online help files.

The following components comprise the multimedia sound software package.

- Audio Mixer
- CD Player
- WAV Player
- MIDI Player

To access these components, click on the Start button and select Programs. From Programs, select Voyetra and a menu appears with the list of components.


The Voyetra's sound software screen resembles a component stereo system. Each module controls a function of your sound system. An explanation of each module follows the figure.



AudioStation main screen layout

POWER BAR

The Power Bar is the most important module because it controls the other modules. It rearranges, opens and closes each module, which are then removed from the screen. It quits AudioStation and activates Help. See the following figure.

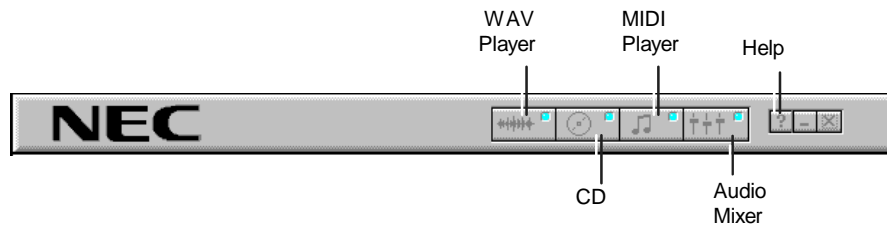

Power bar layout

To activate a module, click on the appropriate button. If the module is open, it closes and disappears from the stack. If the module is closed, it opens and appears at the bottom of the stack. To quit AudioStation, click on the Power button.

The Power Bar buttons are explained as follows.



Launches Help for each component.



Launches or closes the Audio Mixer module.



Launches or closes the MIDI Player module.



Launches or closes the CD Player module.



Launches or closes the WAV Player module.



The online help gives detailed information on each module.

AUDIO MIXER

Use the Mixer module to adjust the volume levels for your speakers and other AudioStation functions. The levels are adjusted by placing your pointer on the appropriate slider and dragging it up or down.

Adjusting the Sound with Software

With your sound software, you can adjust volume, speaker balance, and more from the Windows 95 desktop taskbar. Simply double click on the speaker icon next to the time on your taskbar.

Adjusting the Sound with Speakers

The controls on your 8-watt speakers let you adjust the treble, bass, and volume (see the Speakers in Chapter 1 for control locations).

CD PLAYER

The CD Player lets you play audio CDs. To play a CD, use the following procedure.

1. Place the CD into the CD-ROM reader tray with the print side up and press the button or gently push on the tray.
2. Click the **Mode** button to select a playback mode, if you wish.
3. To start the CD, press the **Play** button .

WAV PLAYER

The WAV Player records sound by turning incoming electrical signals into numbers and saves it in computer memory. To play back the sound, the software changes the data back into electrical signals that the audio equipment amplifies and directs to the speakers or headphones.

The data format created by the WAV Player is called .WAV files which is compatible with Windows. The “tada” sound that you hear when Windows 95 starts up is an example of a .WAV file.

The following sections explain how to use WAV Player to record, play, and edit digital audio files.

Recording Digital Audio Files

To record .WAV files, use the following procedures.

1. Connect your audio source (microphone, CD player, tape deck) to the input jack at the back of the system.
2. From the Mixer module, select your input source and set the recording volume.
3. Click on the record button. This will put the WAV Player in Record Standby mode (the red light blinks).
4. Click on the Play button to start recording. The blinking red light becomes a steady red light indicating that WAV Player is recording.
5. Speak into the microphone or play the input source to record.
6. When you finish recording, click the Stop button to stop recording.
7. Click the Play button to hear what you just recorded. If it is satisfactory, choose Save from the File menu.
8. Type a new *filename* in the dialog box and choose OK.

Playing Digital Audio Files

Use the following procedure to load and play digital audio files.

1. To play a .WAV or .VOC digital audio file you must first insert the files you wish to hear in the playlist.
2. Once you have created a playlist, press OK to close the playlist.
3. Click the Play button to hear the files in the playlist.

The digital audio file plays and stops when it reaches the end.

Editing Digital Audio Files

To edit digital audio files, click on the Edit button. This launched the AudioView program with the current file open.

MIDI PLAYER

The MIDI player plays, edits, and records musical instrument digital interface (MIDI) sequences and saves them as .MID files. MIDI sequences are organized series of MIDI commands.

MIDI files require only a fraction of the storage space of digital audio files (.WAV).



To record MIDI files, a MIDI connector and a MIDI keyboard are required.

To play MIDI files, follow these procedures.

1. Click on the Playlist button to open the MIDI file playlist window.
2. In the File section, select the files by highlighting the files you want and click on the Add button. This inserts the files into a playlist.
3. Click OK to close the playlist and return to the MIDI player.
4. Click on the Play button (single arrow) to play the playlist. If you have multiple files in the playlist, the Next/Previous will skip or jump back to other files in the playlist.

7 If You Have a Problem

Your system has a built-in checking program that automatically tests its components when you turn the system unit power on. If there is a problem, the system displays an error message. If this happens, follow any instructions on the screen.

If screen messages do not help or an error message does not appear, use the information in this chapter to determine and solve the problem. The problem is often one that you can solve yourself.

See the following sections in this chapter for help:

- “Problem Checklist”
See this section first to determine the cause of your problem.
- “Solutions to Common Problems”
Refer to this section to solve common minor problems.
- “Diagnostic Diskette”
If your system boots, use your diagnostic diskette to determine and solve the problem.
- “Getting Help”
See this section for the help available to you when you cannot solve a problem yourself.

PROBLEM CHECKLIST

If you have problems, go through the following checklist for possible solutions.

- **Is the power switch on for the computer and any connected peripherals (monitor, printer)?**

Check that all power switches are on.

- **Is the computer and its peripherals connected to a working AC power outlet or surge protector?**

Check the outlet or surge protector by plugging a lamp into the outlet or surge protector.

- **Are all cables and power cords connected securely?**

Check that all cables and power cords are securely connected.

- **Is the monitor screen blank or is the display hard to read?**

Check that the monitor is on. Adjust the brightness and contrast controls on the monitor.

- **Was a Non-System Disk error message displayed when you started the system?**

You have a diskette in the diskette drive. Remove the diskette from drive A and restart the system.

- **Is your mouse or keyboard not responding?**

You may have connected the mouse and keyboard after turning on your system. Turn the system off, make sure the mouse and keyboard are connected, and turn the system back on.

- **Does your system fail to recognize the CD-ROM?**

Your drive designation may be incorrect. The reader is assigned as drive F.

SOLUTIONS TO COMMON PROBLEMS

See the following sections to match your problem area and view the possible causes and solutions.

When trying to solve problems, you should note what the system was doing when the problem occurred and what you attempted to do to correct the problem. This information is useful if you request assistance.

System Problems

Check the following list to match your problem and see the possible cause and solution.

- **No power and power lamp not lit**

Check that the power cable is plugged into the system power socket. Check that the other end of the cable is plugged into a live, properly grounded AC power outlet.

- **System does not boot and error message displayed on screen**

Run the Setup Utility. Check that the parameters are set correctly, particularly if you just installed an option.

- **System sounds continuous beeps**

Turn the system off, wait at least five seconds, and turn the system on. If the beeps continue, call NECCSD/ETC technical support at 888-ETC-SUPT (888-382-7878).

- **System does not maintain date, time, system configuration information**

Replace the CMOS battery.

- **System does not boot from hard disk**

The system tries to start from the diskette drive before it starts from the hard drive. Remove the diskette from the diskette drive.

Run the Setup Utility and check the Boot parameter settings to verify that the initial boot parameter is set for hard drive C and not for a diskette drive.

■ **System performance appears sluggish**

Check that your system is set for optimal operation. See your operating system documentation.

Check the memory requirements of your software applications. If required, install additional SIMM memory.

If you added optional memory, check that you correctly installed the SIMM memory.

■ **System did not recognize additional SIMM memory**

You added only one SIMM stick. SIMMs must be added in pairs. Add a second SIMM of the same type.

■ **System password forgotten**

Clear the password and reset it. See “Clearing Your Password” in Chapter 5.

Diskette Drive Problems

Check the following problems to see the possible cause and solution.

■ Diskette won't load

Check that the diskette is being loaded correctly.

Check that the system and monitor power lamps are on and the power-on screen appears.

Check that the diskette is formatted. If not, format it. See your operating system documentation.

If the diskette drive busy lamp does not light when you load the diskette, try a different diskette. If this loads, the problem is in the software.

■ Non-System Disk or Disk Error message displayed

If you are booting from the diskette drive, insert a diskette with system files into drive A.

If a bootable diskette does not boot, use the Setup Utility to verify that the initial boot parameter is set to diskette drive A and not a hard disk.

Monitor Problems

Check the following problems to see the possible cause and solution.

■ Monitor screen is dark

Check that the monitor power cable is connected to the monitor and a power outlet, the monitor signal cable is connected to the system, and the brightness and contrast controls are adjusted.

Press the space bar or move the mouse to take the system out of the power management mode.

■ Distorted image appears on your monitor screen

Adjust the monitor's video controls. If this does not help, turn the monitor off for several seconds, then back on.

■ There is constant movement on the screen

A magnetic field is affecting your monitor. Move any devices (fan, motor, another monitor) that generate magnetic fields away from your monitor.

■ The screen display is fuzzy or flickering, graphics characters or garbage appears on the screen

Check that your monitor is set up correctly and that all connections have been made.

Check that the video refresh rate and video driver are correct by using the SiS Multimedia Package video utility. Click the right mouse button anywhere on the Windows 95 desktop and a menu appears. Click on Properties and the Display Properties window appears.

Keyboard/Mouse Problems

Check the following problem to see the possible cause and solution.

- **Image appears on screen but nothing happens when you use the mouse or keyboard**

Tighten the keyboard or mouse cable connection.

If this does not help, turn off the system, wait five or more seconds, and turn on the system.

CD-ROM Problems

Check the following problems to see the possible cause and solution.

- **The system does not see the CD-ROM reader**

The drive designation is wrong and should be changed. The CD-ROM reader is assigned as drive F.

- **The CD-ROM reader is not reading a disc**

Check that the disc is inserted in the CD tray with the label printed side up.

Check that the disc is a data disc, not a music disc.

Try a different disc to see if the problem is limited to one disc.

- **The CD-ROM disc does not eject due to a power failure or software error**

Turn off the system and use the CD-ROM emergency eject feature.

- **The CD-ROM does not play music CDs**

See “CD Module” in Chapter 6.

Speaker Problems

Check the following problems to see the possible cause and solution.

- **No sound from the speakers**

Check that the speaker power is on.

- **Speaker volume is too low**

Adjust the volume control on the speaker. If the volume is still too low, adjust the volume through the system software, see Chapter 6.

- **Sound is only coming from one speaker**

Balance the speaker output by adjusting the balance in the sound software, see Chapter 6.

Microphone Problems

Check the following problem to see the possible cause and solution.

- **You get no response from the microphone**

Check that the microphone is connected to the Mic In connector on the back of your system.

Adjust the microphone (MIC) level through sound software.

REPLACING THE CMOS BATTERY

Your system board uses a 3-volt lithium battery (see the following figure) to maintain system configuration information. If your system fails to maintain system configuration information, replace it with an identically rated battery from the same manufacturer.



CAUTION

Removing the battery from the system board causes the computer to lose system configuration information. If you can, run the Setup Utility and print out or write down your system configuration settings. Then you can restore your system to its current settings.




WARNING

The battery can explode if it is incorrectly replaced or improperly discarded. Use only the same battery or an equivalent type recommended by the manufacturer when replacing the battery.

Lithium acts as a catalyst when exposed to water and causes spontaneous combustion on contact. Discard used batteries according to the manufacturer's instructions.

If you need to replace the battery, follow these steps:

1. Turn off and unplug the computer and any external components connected to it.
2. Remove the system unit cover. Observe all safety precautions when removing the cover.
3. Locate the battery socket on the system board. You may have to remove any expansion boards in the way.

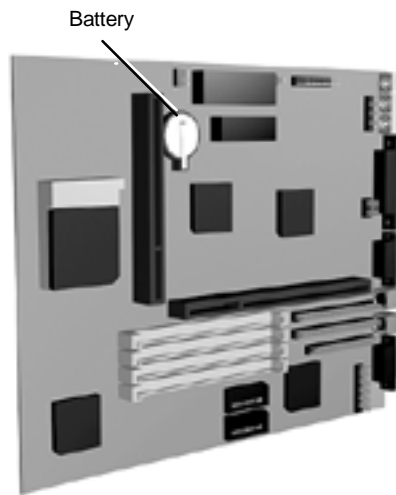


Locating the battery socket on the system board

-
- Carefully lift the battery clip until there is enough space to slide the battery out of the socket.



CAUTION

To maintain a tight battery contact with the socket, do not over-bend the battery clip.

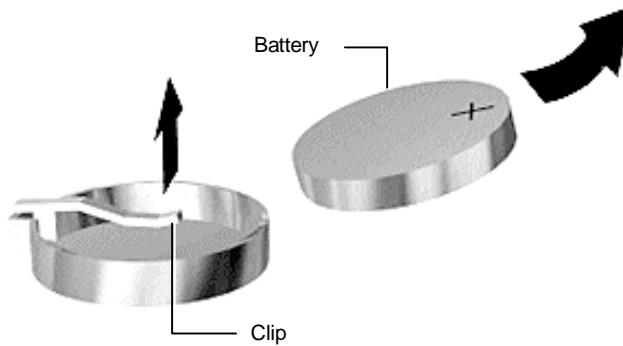

Removing the battery

- Remove the battery and discard in accordance with the manufacturer's instructions.

-
6. Carefully lift the clip on the battery socket.
 7. With the positive (+) side facing up, slide the new battery into the socket.
 8. Replace any removed expansion boards.
 9. Replace the system unit cover.
 10. Connect external peripherals and power cables
 11. Run the Setup Utility to reconfigure your system parameters.

DIAGNOSTIC DISKETTE

If you are unable to resolve your system's problem using the Problem/Solutions topics in this chapter, NEC suggests that you run the diagnostic diskette.

The diagnostic diskette permits quick testing of all major system components, individual testing of different system components, and access to various testing options.

To run diagnostics, insert the diagnostic diskette into drive A with the system unit off. Power on the system. The system boots from the diskette and provides you with the test options.

GETTING TECHNICAL HELP

If you tried correcting problems yourself and weren't successful, you can obtain technical support help at any time, 24-hours a day, 7 days a week, by calling 888-ETC-SUPT (888-382-7878).

A Setting Up a Healthy Work Environment



WARNING

Prolonged or improper use of a computer workstation may pose a risk of serious injury. To reduce your risk of injury, set up and use your computer in the manner described in this appendix.

Contact a doctor if you experience pain, tenderness, swelling, burning, cramping, stiffness, throbbing, weakness, soreness, tingling and/or numbness in the hands, wrists, arms, shoulders, neck, back, and/or legs.

MAKING YOUR COMPUTER WORK FOR YOU

Computers are everywhere. More and more people sit at computers for longer periods of time. This appendix explains how to set up your computer to fit your physical needs. This information is based on ergonomics — the science of making the workplace fit the needs of the worker.

Some nerve, tendon, and muscle disorders (*musculoskeletal disorders*) may be associated with repetitive activities, improper work environments, and incorrect work habits. Examples of musculoskeletal disorders that may be associated with certain forms of repetitive activities include: carpal tunnel syndrome, tendinitis, tenosynovitis, de Quervain's tenosynovitis, and trigger finger, as well as other nerve, tendon, and muscle disorders.


Although some studies have shown an association between increasing hours of keyboard use and the development of some musculoskeletal disorders, it is still unclear whether working at a computer causes such disorders. Some doctors believe that using the keyboard and mouse may aggravate existing musculoskeletal disorders.

Some people are more susceptible to developing these disorders due to pre-existing conditions or psychosocial factors (see “Pre-existing Conditions and Psychosocial Factors” later in the appendix).

To reduce your risk of developing these disorders, follow the instructions in this appendix. If you experience discomfort while working at your computer or afterwards, even at night, contact a doctor as soon as possible. Signs of discomfort might include pain, tenderness, swelling, burning, cramping, stiffness, throbbing, weakness, soreness, tingling and/or numbness in the hands, wrists, arms, shoulders, neck, back, and/or legs.


ARRANGE YOUR EQUIPMENT

Arrange your equipment so that you can work in a natural and relaxed position. Place items that you use frequently within easy reach. Adjust your workstation setup to the proper height (as described in this appendix) by lowering the table or stand that holds your computer equipment or raising the seat height of your chair. To create more desk space, you can put your computer base on the floor.

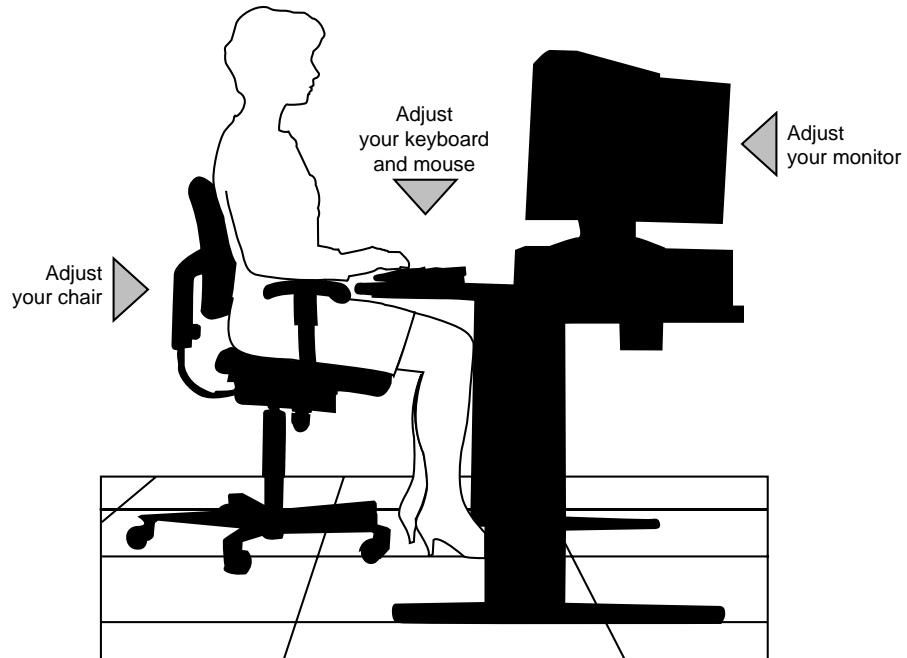


-
- Your seat depth should allow your lower back to comfortably contact the backrest. Make sure that the backs of your lower legs do not press against the front of the chair.
 - Extend your lower legs slightly so that the angle between your thighs and lower legs is 90° or more.
 - Place your feet flat on the floor. Only use a footrest when attempts to adjust your chair and workstation fail to keep your feet flat.
 - Be sure that you have adequate clearance between the top of your thighs and the underside of your workstation.
 - Use armrests or forearm supports to support your forearms. If adjustable, the armrests or forearm supports should initially be lowered while all the other adjustments discussed in this appendix are made. Once all these adjustments are completed, raise the armrests or adjust the forearm supports until they touch the forearms and allow the shoulder muscles to relax.

ADJUST YOUR INPUT DEVICES

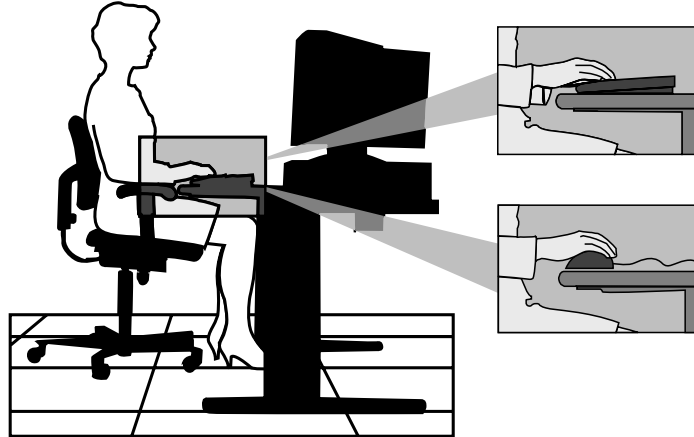

Follow these points in positioning your keyboard and mouse.

- Position your keyboard directly in front of you. Avoid reaching when using your keyboard or mouse.
- If you use a mouse, position it at the same height as the keyboard and next to the keyboard. Keep your wrists straight and use your entire arm when moving a mouse. Do not grasp the mouse tightly. Grasp the mouse lightly and loosely.
- Adjust the keyboard height so that your elbows are near your body and your forearms are parallel to the floor, with your forearms resting on either armrests or forearm supports, in the manner described previously. If you do not have armrests or forearm supports, your upper arms should hang comfortably at your sides.
- Adjust your keyboard slope so that your wrists are straight while you are typing.

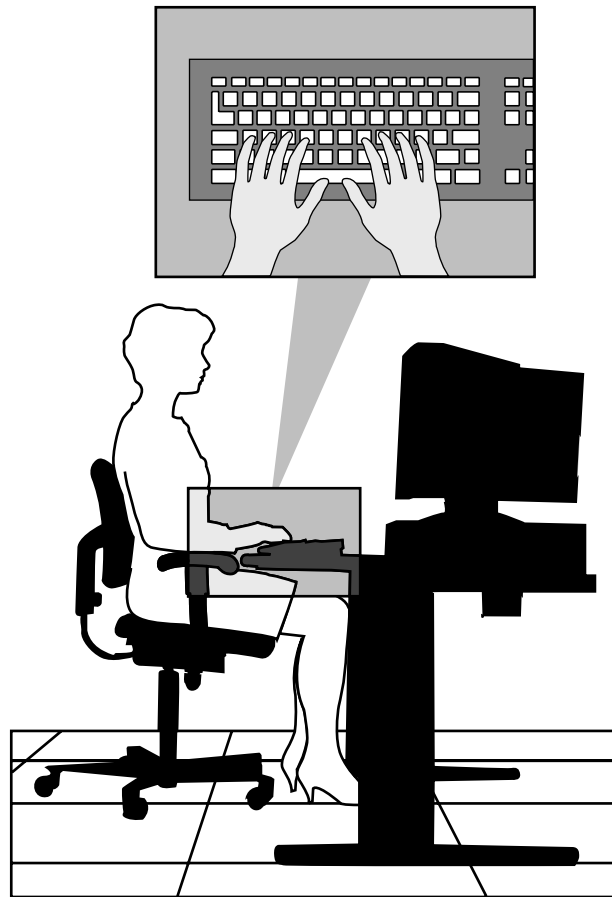


- Type with your hands and wrists floating above the keyboard. Use a wrist pad only to rest your wrists between typing. Avoid resting your wrists on sharp edges.
- Type with your wrists straight. Instead of twisting your wrists sideways to press hard-to-reach keys, move your whole arm. Keep from bending your wrists, hands, or fingers sideways.

-
- Press the keys gently; do not bang them. Keep your shoulders, arms, hands, and fingers relaxed.

ADJUST YOUR MONITOR

Correct placement and adjustment of the monitor can reduce eye, shoulder, and neck fatigue. Check the following when you position the monitor.

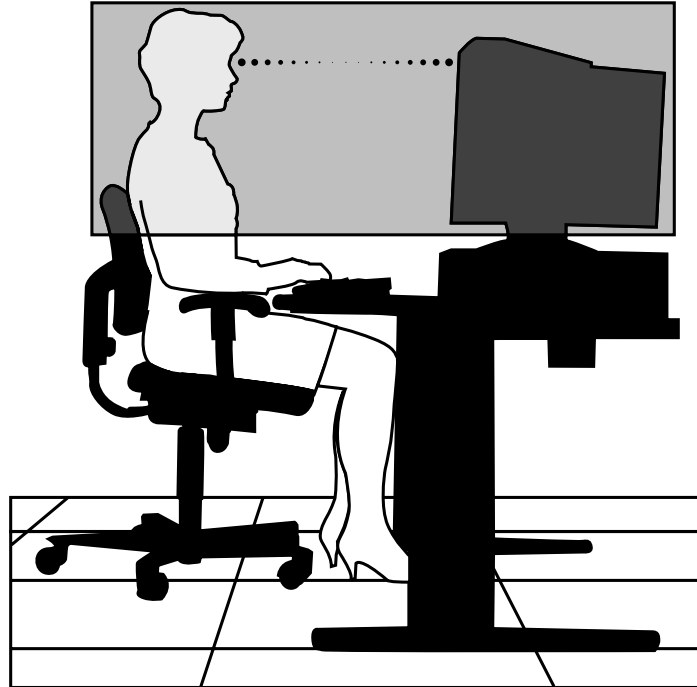


- Adjust the monitor height so that the top of the screen is at or slightly below eye level. Your eyes should look slightly downward when viewing the middle of the screen.
- Position your monitor no closer than 12 inches and no further away than 28 inches from your eyes. The optimal distance is between 14 and 18 inches.

-
- Rest your eyes periodically by focusing on an object at least 20 feet away. Blink often.
 - Position the monitor at a 90° angle to windows and other light sources to minimize glare and reflections. Adjust the monitor tilt so that ceiling lights do not reflect on your screen.
 - If reflected light makes it hard for you to see your screen, use an anti-glare filter.
 - Clean your monitor regularly. Use a lint-free, non-abrasive cloth and a non-alcohol, neutral, non-abrasive cleaning solution or glass cleaner to minimize dust.
 - Adjust the monitor's brightness and contrast controls to enhance readability.
 - Use a document holder placed close to the screen.
 - Position whatever you are looking at most of the time (the screen or reference material) directly in front of you to minimize turning your head while you are typing.
 - Get regular eye check-ups.

VARY YOUR WORKDAY

If you use your computer for prolonged periods, follow these instructions.

- Vary your tasks throughout the day.
- Take frequent short breaks that involve walking, standing, and stretching. During these breaks, stretch muscles and joints that were in one position for an extended period of time. Relax muscles and joints that were active.

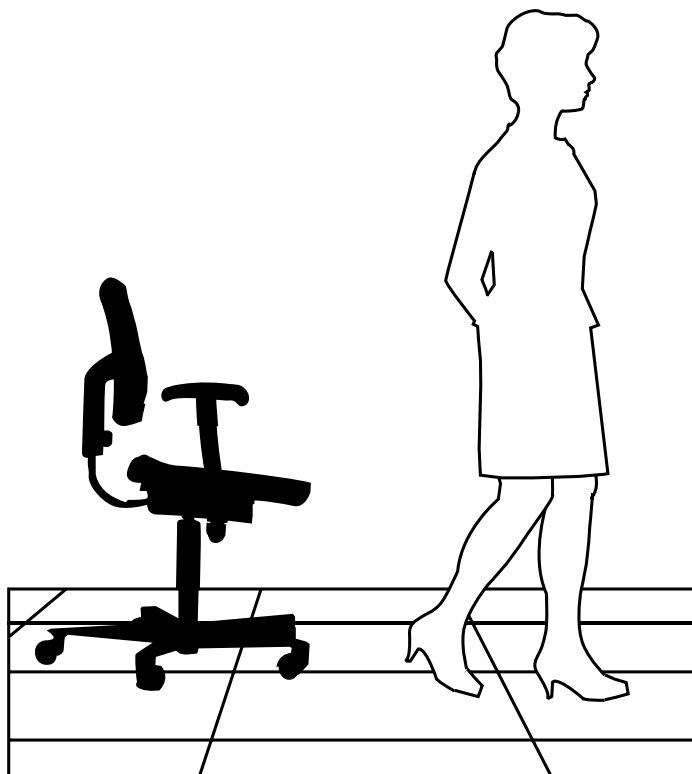

-
- Use a timer or reminder software to remind you to take breaks.
 - To enhance blood circulation, alter your sitting posture periodically and keep your hands and wrists warm.



For more information on workstation setup, see the American National Standard for Human Factors Engineering of Visual Display Terminal Workstations. ANSI/HFS Standard No. 100-1988. The Human Factors Society, Inc., P.O. Box 1369, Santa Monica, California 90406

PRE-EXISTING CONDITIONS AND PSYCHOSOCIAL FACTORS

Pre-existing conditions that may cause or make some people more susceptible to musculoskeletal disorders include the following: hereditary factors, vascular disorders, obesity, nutritional deficiencies (e.g., Vitamin B deficiency), endocrine disorders (e.g., diabetes), hormonal imbalances, connective tissue disorders (e.g., arthritis), prior trauma (to the hands, wrists, arms, shoulders, neck, back, or legs), prior musculoskeletal disorders, aging, fluid retention due to pregnancy, poor physical conditioning and dietary habits, and other conditions.

Psychosocial factors associated with these disorders include: workplace stress, poor job satisfaction, lack of support by management, and/or lack of control over one's work.

Contact a doctor if you experience pain, tenderness, swelling, burning, cramping, stiffness, throbbing, weakness, soreness, tingling and/or numbness in the hands, wrists, arms, shoulders, neck, back, and/or legs.

CHECKING YOUR COMFORT: HOW DO YOU MEASURE UP?

Use this checklist to see if you are setting up your work environment to fit your physical needs.

Checking Your Chair

- Do you sit in an upright position with the backrest supporting your lower back?
- When sitting, are your feet flat on the floor?
- Do you periodically adjust your chair and your posture?

Checking Your Keyboard

- Is your keyboard angled so your wrists are straight when you type?
- Is your keyboard directly in front of you?
- Do you avoid resting your wrists on sharp edges?
- Do you press the keys gently and not bang on them?

Checking Your Mouse

- Is your mouse at the same height as the keyboard and next to the keyboard?
- Are your wrists straight and your touch light when moving the mouse?

Checking Your Monitor

- Did you adjust your monitor so that the top of the screen is at or slightly below eye level?
- Do you periodically rest your eyes by blinking often or looking away from the screen?
- Is your monitor no closer than 12 inches and no further away than 28 inches from your eyes?
- Do you use a document holder placed close to the screen?

Checking You

- Is your work area set up to promote a natural and relaxing working position with frequently used work items within close reach?
- Do you take frequent short breaks?
- Do you stretch and walk during your breaks?
- Do you vary your tasks during the day?
- Do you have regular eye checkups?
- Do you contact your doctor if you feel any sustained discomfort?

For more information on workstation setup, see the American National Standard for Human Factors Engineering of Visual Display Terminal Workstations. ANSI/HFS Standard No. 100-1988. The Human Factors Society, Inc., P.O. Box 1369, Santa Monica, California 90406

This appendix was prepared in consultation with Dr. David Rempel of the University of California/San Francisco Ergonomics Program and Mr. M.F. Schneider of HUMANTECH, Inc., Ann Arbor, Michigan.

B Reviewing System Interrupts

INTERRUPT CONTROLLER

The interrupt controller accepts requests from peripherals, issues interrupt requests to the processor, resolves interrupt priorities, and provides vectors for the processor to determine which interrupt routine to execute. The interrupt controller has priority assignment modes that can be reconfigured at any time during system operations.

The interrupt levels are described in the following table. Interrupt-level assignments 0 through 15 are in order of decreasing priority. See Chapter 4, Setting System Parameters, for information on changing the interrupts using Setup.

Interrupt Level Assignments

INTERRUPT PRIORITY	INTERRUPT DEVICE
IRQ00	Counter/Timer
IRQ01	Keyboard
IRQ02	Cascade (INT output from slave)
IRQ03	COM2 and COM4
IRQ04	COM1 and COM3
IRQ05	Parallel Port 2/Audio (if present)
IRQ06	Diskette Drive Controller
IRQ07	Parallel Port 1

Interrupt Level Assignments

INTERRUPT PRIORITY	INTERRUPT DEVICE
IRQ08	Real-time clock
IRQ09	Audio (available on non-multimedia systems)
IRQ10	Available
IRQ11	Network interface board
IRQ12	PS/2 mouse
IRQ13	Coprocessor
IRQ14	Primary IDE
IRQ15	Secondary IDE

C Limited Warranty

NEC Computer Systems Division, Packard Bell NEC, Inc. (hereinafter "NECCSD") warrants this Product to be free from defects in material and workmanship under the following terms:

HOW LONG IS THE WARRANTY?

Labor and parts are warranted for three (3) years from the date of the first consumer purchase in the U.S.A. All 3 years are on-site. Spare parts are warranted for ninety (90) days.

WHO IS PROTECTED?

This warranty is non-transferable and may be enforced only by the first consumer purchaser.

WHAT IS COVERED AND WHAT IS NOT COVERED?

Except as specified below, this warranty covers all defects in material and workmanship in the PowerMate ETC Series Desktop Computer.

1. Any Product which is not distributed in the U.S.A. by NECCSD, or by an authorized NECCSD dealer or distributor.
2. Any Product on which the serial number has been defaced, modified or removed.

-
3. Damage, deterioration or malfunction resulting from, but not limited to:
 - a. Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature, unauthorized Product modification, or failure to follow instructions supplied with the Product.
 - b. Repair or attempted repair by anyone not authorized by NECCSD.
 - c. Any shipment of the Product (claims must be presented to the carrier).
 - d. Removal or installation of the Product.
 - e. Any other cause which does not relate to a Product defect.
 4. Cartons, carrying cases, pens, external cabinets, magnetic media, or any accessories used in connection with the Products.
 5. This warranty covers only NECCSD-supplied components. Service required as a result of third party Products is not covered under this warranty.

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items, but we will not pay for the following:

1. Removal or installation charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls. These costs are the responsibility of the NECCSD dealer from whom the Product was purchased.
3. Payment of shipping and related charges incurred in returning the Product for warranty repair.

HOW YOU CAN GET WARRANTY SERVICE

NECCSD provides an on-site limited warranty for all PowerMate ETC Series Desktop Computers installed within a 100-mile radius of a NECCSD authorized third-party maintenance organization.

On-site warranty service is available Monday through Friday during normal local business hours, exclusive of NECCSD holidays.

Such on-site warranty service may be obtained by calling **1-888-ETC-SUPT** (1-888-382-7878). Beyond the 100-mile radius, travel charges will be applied.

LIMITATION OF DAMAGES AND IMPLIED WARRANTIES

NECCSD'S SOLE LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE PRODUCT AT OUR OPTION. NECCSD SHALL NOT BE LIABLE FOR:

1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THIS PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME OR DATA, LOSS OF SOFTWARE, COMMERCIAL LOSS; OR
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES; THEREFORE, THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU.

HOW STATE LAW RELATES TO THE WARRANTY

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**FOR WARRANTY INFORMATION, TELEPHONE
1-888-ETC-SUPT (1-888-382-7878)**

NOTE: All Products returned to NECCSD for service **MUST** have prior approval; this may be obtained by calling the above number.

NECCSD Products are warranted in accordance with the terms of the applicable NECCSD limited warranty. Product performance is affected by system configuration, software, the application, customer data, and operator control of the system, among other factors. While NECCSD Products are considered to be compatible with many systems, the specific functional implementation by the customers of the Product may vary. Therefore, the suitability of a Product for a specific purpose or application must be determined by the customer and is not warranted by NECCSD.

Index

A

- Activating a module, 6-3
- APM, 4-21
- Audio connectors, 1-10
- Audio Mixer, 6-3
- AudioStation modules
 - CD, 6-4
 - MIDI, 6-6
 - mixer, 6-3
 - WAV player, 6-4
- AudioStation screen, 6-2

B

- Backup, 4-20
- Battery, 4-22
 - replacing, 7-9
- Boot parameters, 4-12

C

- CD Player, 6-4
- CD-ROM reader
 - drive assignment, 1-6
 - eject/retract button, 1-7
 - emergency eject, 1-7
 - features, 1-6, 1-7
 - volume control, 1-7
- CMOS
 - memory, 4-1
 - RTC chip, 4-1
 - values, 4-22, 4-23
- COM ports, 4-15, 4-16
- Configuration
 - jumpers, 5-2

- Connectors, 1-9
 - keyboard, 1-11
 - mouse, 1-11
 - network board, 1-10
 - printer, 1-10
 - serial port, 1-11
 - VGA monitor connector, 1-9
- Cover removal, 3-5

D

- Default parameters, 4-23
- Diagnostics, 7-12
 - QA Plus, 7-12
- Digital Audio module, 6-4
- Disk lamp, 1-4
- Diskette drive, 1-5
 - controller, 4-15, 4-17
- Documentation, xi–xii, 2-2, 2-4
- Dual-IDE controllers, 4-9, 4-15

E

- Edit digital audio files, 6-6
- Error message, 7-1
- ETC Technical Help, 7-12
- Expansion board installation, 3-8
- External options, 3-43
 - serial devices, 3-44

F

Features

- back, 1-8–1-11
- CD-ROM reader, 1-6
- diskette drive, 1-5
- front, 1-2–1-8
- power saving, 1-3
- system controls and lamps,
1-3–1-4

Finding information, 2-5

Full Power On mode, 1-4

H

Hard disk drive

- controller, 4-15

Headphones, 1-7

Healthy Work Environment, A-1

I

I/O ports, 4-15

IDE controllers, 4-9, 4-15

IDE device

- system support, 4-9

Information, 2-5

IR window, 1-5

J

Jumpers

- password clear, 5-5
- processor, 5-3
- system board, 5-2

K

Keyboard

- auto repeat rate, 4-13
- click, 4-13
- connecting, 1-11
- NumLock, 4-13

port, 1-11

L

Lamps

- CD busy, 1-8
- disk, 1-4
- power, 1-4

Line in jack, 1-10

Line out jack, 1-10

LPT port, 4-15, 4-16

M

Memory

- CMOS, 4-1

Microphone

- features, 1-10, 1-13
- jack, 1-10

Mouse

- clicking, 2-1
- connecting, 1-11, 2-2
- disconnecting, 2-2
- double clicking, 2-1
- dragging, 2-2
- pad, 2-2
- port, 1-11
- pressing, 2-2
- using, 2-1–2-2

Multimedia Sound Software

- package, 6-1

N

NEC Information group, 2-2

O

- Online diagnostics, 7-12
- Online documentation, xii, 2-2, 2-4
- Option installation, 3-1, 3-26
 - cover removal, 3-5
 - expansion boards, 3-8
 - external options, 3-43
 - precautions, 3-4
 - processor upgrade, 3-24
 - SIMM memory, 3-17
 - storage devices, 3-26
 - Video memory, 3-22

P

- Parallel port, 1-10
- Passwords, 4-17, 4-19
- Peripheral parameters, 4-15, 4-16
- Play a CD, 6-4
- Play digital audio files, 6-5
- Playing MIDI files, 6-6
- Power Bar, 6-2
- Power Bar buttons, 6-3
- Power button, 1-3
- Power lamp, 1-4
- Power management, 4-20–4-21
- Power saving features, 1-4
- Power supply features, 1-11
- Printer port, 1-10
 - connector, 1-10
 - settings, 4-15
- Problems, 7-2
 - CD-ROM, 7-7
 - common problem solutions, 7-3
 - diskette drive, 7-5
 - keyboard/mouse, 7-7
 - microphone, 7-8
 - monitor, 7-6

Speakers, 7-8

- system, 7-3
- what to do, 7-2

Processor upgrade, 3-24

Product Recovery CD, 4-29

R

- Record .digital audio files, 6-5
- Reset button, 1-4
- Restarting your computer, 1-4
- Restoring individual files, 4-26
- Restoring system software
 - options, 4-25
 - restore individual files, 4-26–4-28
 - restore individual files, 4-25
 - system recovery, 4-25, 4-29, 4-30

S

- Security, 4-17, 4-19
- Serial port
 - settings, 4-15
- Serial ports, 1-11
- Services
 - ETC technical support, 7-12
- Setup
 - keyboard, 4-13
- Setup utility, 4-2
 - backup reminder, 4-20
 - boot parameters, 4-12
 - CMOS settings, 4-22, 4-23
 - configuring I/O ports, 4-15
 - diskette drive parameters, 4-7
 - displaying a submenu, 4-7
 - Exit menu, 4-21–4-24
 - help, 4-4, 4-7
 - IDE adapters, 4-9

-
- IDE controller, 4-15
 - IDE devices, 4-9
 - integrated peripherals, 4-15, 4-16
 - key functions, 4-6
 - keyboard parameters, 4-13
 - legend bar, 4-6, 4-7
 - loading default settings, 4-23
 - loading previous values, 4-24
 - Main Menu, 4-3
 - Main Menu options, 4-7
 - Main Menu summary window, 4-4, 4-8
 - memory, 4-7
 - menu bar, 4-5
 - passwords, 4-17
 - power management, 4-20
 - Power menu, 4-20, 4-21
 - saving changes, 4-22
 - Security menu, 4-17
 - selecting a menu bar option, 4-5
 - selecting a menu item, 4-7
 - starting, 4-3
 - system date, 4-7
 - system time, 4-7
 - using, 4-4
 - video parameters, 4-7
 - virus check reminder, 4-20
 - SIMM installation, 3-21
 - SIMM upgrade, 3-17
 - Sound software, 1-13, 6-1
 - WAV files, 6-4
 - Speakerphone, 1-10
 - Speakers, 1-13
 - Storage device installation, 3-34
 - device cables, 3-28
 - device preparation, 3-27
 - device slots, 3-26
 - Supervisor password, 4-17, 4-19
 - Suspend button, 1-4
 - Suspend mode, 1-4
 - System board
 - jumpers, 5-2
 - System recovery, 4-25, 4-29, 4-30
 - System restore options, 4-25
- T**
- Troubleshooting, 7-1
 - common problems, 7-3
 - if you have a problem, 7-1
 - minor problems, 7-2
 - online diagnostics, 7-12
 - replacing the CMOS battery, 7-9
- U**
- User password, 4-17, 4-19
- V**
- VGA monitor connector, 1-10
 - Video upgrade, 3-22
 - Virus protection, 4-20
 - Voltage selector switch, 1-11
 - Volume, 1-7, 1-13
 - Voyetra software components
 - AudioStation, 6-2
- W**
- Warranty, C-1
 - WAV, 6-4

NEC Computer Systems Division,
A Division of Packard Bell NEC, Inc.

DECLARATION OF CONFORMITY

We, the Responsible Party

NEC Computer Systems Division
Packard Bell NEC, Inc.
1414 Massachusetts Ave.
Boxborough, MA 01719
(508) 264-8000

declare that the product

NEC

PowerMate DT Ve Series

is in conformity with part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.